ORDER NO. VRD0112042C3

Service Manual

Video Cassette Recorder

Panasonic VHS

NV-SJ4130PN / NV-FJ6130PN

SPECIFICATIONS

ITEM	SPECIFICATION	1	2
Power	Source: 120 V AC±12 V AC, 60 Hz±3 Hz	○	○
	Consumption: Approx. 18 W (Power on), Approx. 2.5 W (Power off) Approx. 23 W (Power on), Approx. 3.0 W (Power off)	○ –	– ○
Video	Head: 4 rotary heads helical scanning system	○	○
	Input Level: VIDEO IN Jack (Phono type) 1.0 Vp-p 75 Ω unbalanced Output Level: VIDEO OUT Jack (Phono type) 1.0 Vp-p 75 Ω unbalanced Signal-to-Noise Ratio: SP: more than 43 dB LP/SLP: more than 41 dB Horizontal Resolution: Color/Monochrome: more: SP: 230 lines LP/SLP: 220 lines	○	○
Audio	Head: Normal Mono: 1 stationary head Hi-Fi Stereo: 2 rotary heads	○ –	○ ○
	Input Level: AUDIO IN Jack (Phono type) -10 dBv 50 kΩ unbalanced Output Level: AUDIO OUT Jack (Phono type) -8 dBv 600 Ω unbalanced AUDIO OUT Jack (Phono type) -8 dBv 1 kΩ unbalanced	○ ○ –	○ – ○
	Frequency Response: Normal Mono: SP: 100 Hz-8 kHz LP: 100 Hz-6 kHz SLP: 100 Hz-5 kHz Hi-Fi Stereo: SP/LP/SLP: 20 Hz-20 kHz	○ ○ ○ –	○ ○ ○ ○
	Signal-to-Noise Ratio: Normal Mono: SP: more than 42 dB LP/SLP: more than 40 dB Hi-Fi Stereo: SP/LP/SLP: more than 60 dB	○ ○ –	○ ○ ○
	Wow and Flutter: Normal Mono: SP: Less than 0.2 % WRMS LP: Less than 0.3 % WRMS SLP: Less than 0.4 % WRMS Hi-Fi Stereo: Less than 0.015 % WRMS	○ ○ ○ –	○ ○ ○ ○

ITEM	SPECIFICATION	1	2
RF Out	CH 3/CH 4 switchable 72 dBμ (open voltage) 75 Ω unbalanced	○	○
Tuner	Broadcast Channels: VHF 2~13, UHF 14~69 CABLE Channels: Midband A through I (14~22) Superband J through W (23~36) Hyperband AA~EEE (37~64) Lowband A-5~A-1 (95~99) Special CABLE channel 5A (01) Ultraband 65~94, 100~125	○	○
Video Signal	EIA Standard (525 lines, 60 fields) NTSC Color Signal	○	○
Tape Speed	SP: 1-5/16 i.p.s (33.35 mm/s), LP: 21/32 i.p.s (16.67 mm/s), SLP: 7/16 i.p.s (11.12 mm/s) Record/Playback Time: 8 hr. with 160 min. type tape used in SLP mode FF/REW Time: Less than 2-1/2 min. (120 min. type tape) *Note: FF/REW Time may be exceed specification according to tape condition.	○	○
Tape Format	Tape width 12.7 mm (1/2 inch) high density tape	○	○
Operating Condition	5 °C-40 °C (41 °F-104 °F) (Temperature) 10 %-75 % (Humidity)	○	○
Dimension (W x H x D)	360 mm x 93 mm x 242 mm (14-3/16 inch x 3-11/16 inch x 9-9/16 inch)	○	○
Weight	2.5 kg (5.5 lbs.)	○	○

1. NV-SJ4130PN
2. NV-FJ6130PN

Weight and dimensions shown are approximate.
Designs and specifications are subject to change without notice.

© 2001 Matsushita Electric Industrial Co., Ltd. All rights reserved.
Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public.
It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

1. SAFETY PRECAUTIONS

GENERAL GUIDELINES

1. IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Layout, Exploded Views and Replacement Parts List. It is essential that these criticalparts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

2. An Isolation Transformer should always be used during the servicing of VCR whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personalinjury from electrical shocks. It will also protect VCR from being damaged by accidental shorting that may occur during servicing.

3. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.

4. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.

5. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.

2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the

equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to thechassis, the reading should be between 1 M Ω and 5.2 M Ω . When the exposed metal does not have a return path to the chassis, the reading must be infinity.

LEAKAGE CURRENT HOT CHECK
(See figure 1.)

1. **Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.**
2. **Connect a 1.5 k Ω , 10 W resistor, in parallel with a 0.15 μ F capacitor, between each exposed metallic part on the set and a good earth ground, as shown in figure 1.**
3. **Use an AC voltmeter, with 1 k Ω /V or more sensitivity, to measure the potential across the resistor.**
4. **Check each exposed metallic part, and measure the voltage at each point.**
5. **Reverse the AC plug in the AC outlet and repeat each of the above measurements.**
6. **The potential at any point should not exceed 0.75 V RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks. Leakage current must not exceed 1/ 2 mA. In case a measurement is outside of thelimits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.**

Figure 1

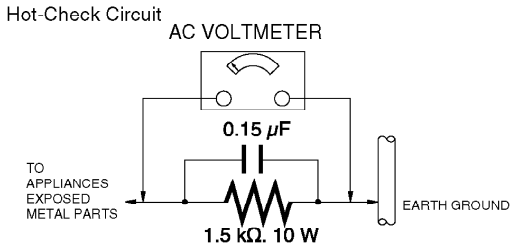

2. PREVENTION OF ELECTRO-STATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such

components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits, some field-effect transistorsand semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electrostatic discharge (ESD).

1. **Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, whichshould remove electrostatic charge for potential shock reasons prior to applying power to the unit under test.**
2. **After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.**
3. **Use only a grounded-tip soldering iron to solder or unsolder ES devices.**
4. **Use only an antistatic solder removal device. Some solder removal devices not classified as "antistatic (ESD protected)" can generate electrical charge sufficient to damage ES devices.**
5. **Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.**
6. **Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparableconductive material).**
7. **Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.**
   CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. **Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a**

carpeted floor can generate static electricity (ESD)sufficient to damage an ES device).

"NOTE to CATV system installer:
This reminder is provided to call the CATV system installer's attention to Article 820-22 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding systemof the building, as close to the point of cable entry as practical."

3. OPERATION GUIDE

4. SERVICE NOTES (PLEASE READ)

4.1. SERVICE NOTES

4.1.1. SIMPLIFIED FAULT FINDING DATA

implified Self-Diagnostic System facilitates finding the cause of the fault. A 3-digit fault code will be displayed in F.I.P.
The Simplified Fault finding data is stored in the Memory IC (IC6005). This data is cleared after it is displayed, and then the POWER button is pressed back on.

1. With power turned off, press CH DOWN button on VCR (for over 3 seconds if VCR is not in shut off condition).

Fig. 1-1



2. Fault code (3-digit number) will be displayed in F.I.P. as shown.

Fig. 1-2

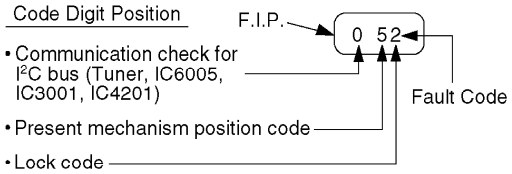

Fig. 1-3

Explanation of Codes	Code No.		
Communication check for I²C bus (Tuner, IC6005, IC3001, IC4201) (Refer to Fig. 1-4.)	0 ~ F		
Present Mechanism Position Code Mechanism Position is indicated. (Refer to Fig. 1-5.)		1 2 3 4 5 6 7 8 9 A B C D	
Lock Code (See Note) • VCR is not in shut-off condition. • Reel lock. • Cylinder lock. • Exceeds loading/unloading time. (Mechanism Lock) • Exceeds Cassette loading/unloading time. (Cassette Lock)			0 1 2 3 4

Fig. 1-4

Communication check for I²C bus (IC6001◄►Tuner)	Communication check for I²C bus (IC6001◄►IC6005)	Communication check for I²C bus (IC6001◄►IC3001)	Communication check for I²C bus (IC6001◄►IC4201)	Code No.
OK	OK	OK	OK	0
			NG	1*
		NG	OK	2
			NG	3*
	NG	OK	OK	4
			NG	5*
		NG	OK	6
			NG	7*
NG	OK	OK	OK	8
			NG	9*
		NG	OK	A
			NG	b*
	NG	OK	OK	C
			NG	d*
		NG	OK	E
			NG	F*

Note:
For Normal Audio (Mono) models, ignore "Communication check for I²C bus (IC6001◄►IC4201)" and odd code Nos. (those with*) will not be displayed in F.I.P.

Fig. 1-5

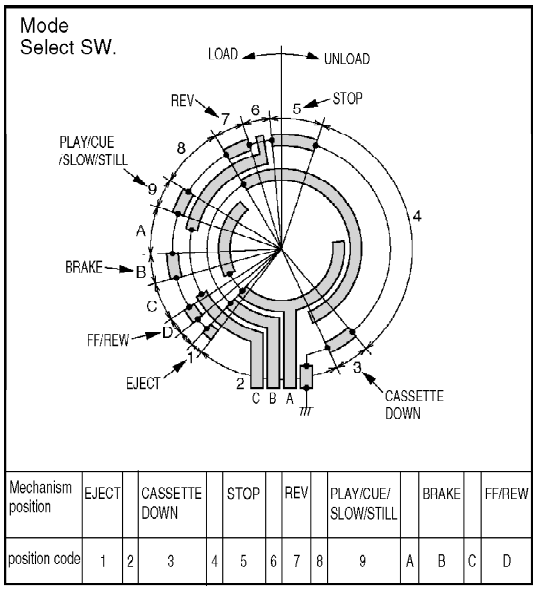

Mechanism position	EJECT		CASSETTE DOWN		STOP		REV		PLAY/CUE/ SLOW/STILL		BRAKE		FF/REW
position code	1	2	3	4	5	6	7	8	9	A	B	C	D

3. When 1 to 4 listed in Lock code occurs, Lock data will be stored in the Memory IC (latest Lock data only).

Note:

1. Lock data will be kept after the AC Cord is unplugged.

2. When 1 to 4 listed in Lock code occurs for the first time, the VCR does not go into VCR shut-off condition. If it occurs again within a minute, the VCR goes into VCR shut-off condition. Then, the VCR stops and all VCR function buttons exceptfor power become non-operational.

3. Lock data will be cleared at the first power on operation after lock code is displayed in FIP.

4.1.2. USAGE SCREEN MODE

Function displayed on the TV monitor:

- the total elapsed ”Cylinder rotation ”time (in hours)

1. With power turned on and no cassette, press CH DOWN button on VCR and 7 key on remote together.
(The USAGE SCREEN will be displayed on the TV Monitor.)

Fig. 2

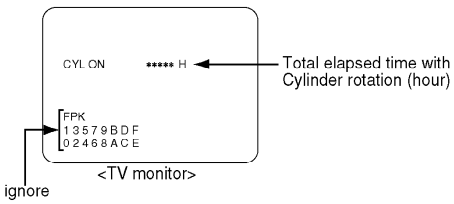

Note:

1. **After replacing the Cylinder Unit, press COUNTER RESET button on remote in this mode. Total elapsed "Cylinder rotation" time (in hours) will be cleared to 0.**
2. **To release from Usage Screen Mode, press any operation button on VCR or insert a cassette tape in this mode. The VCR will return to normal operation mode.**

4.1.3. EEPROM IC (IC6005), MAIN C.B.A. REPLACEMENT NOTE

After replacing EEPROM IC (IC6005) or Main C.B.A., be sure to perform the "PG SHIFTER ADJUSTMENT" in ELECTRICAL ADJUSTMENT procedures.

4.1.4. SERVICE POSITION

4.1.4.1. Service Position

Service Position	Purpose
Service Position (1)	Mechanism check Mechanical adjustment Electrical adjustment
Service Position (2)	Main C.B.A. check

CAUTION:

HOT CIRCUIT (Primary circuit) exists on the Main C.B.A.
Use extreme care to prevent accidental shock when servicing.

4.1.4.1.1. Service Position (1)

Fig. 3-1

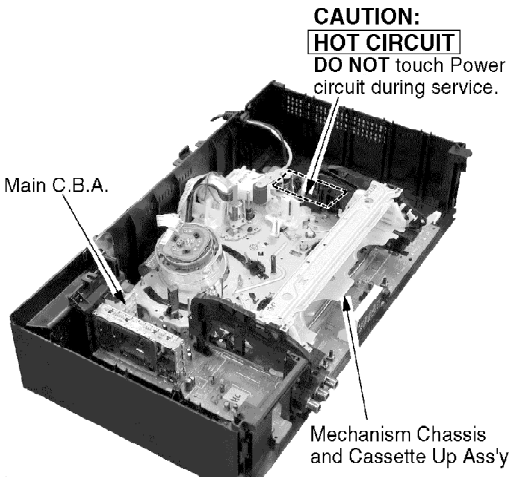

4.1.4.1.2. Service Position (2-1)
(Normal Frame Model)

Fig. 3-2-1

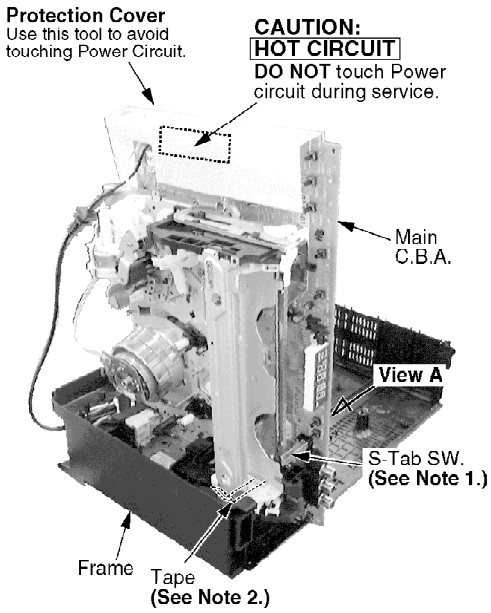

4.1.4.1.3. Service Position (2-2)
(Wide Frame Model)

Fig. 3-2-2

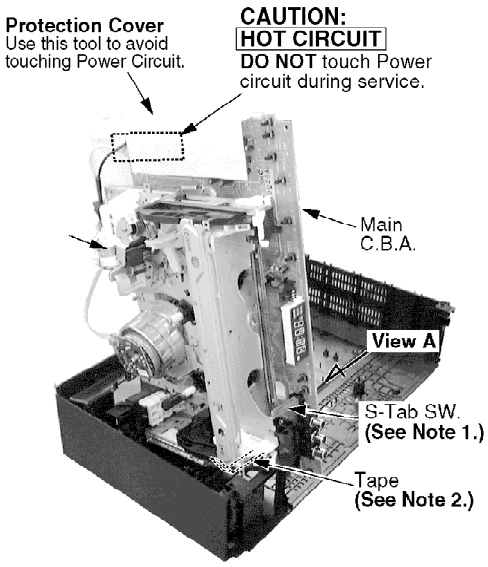

Note:

1. It is possible that the S-Tab SW. may not work correctly in Service Position (2-1), (2-2). (Recording can not be done). In this case, short the S-Tab SW. Pins on the foil side of the Main C.B.A. to turn this SW. on.

Fig. 3-3

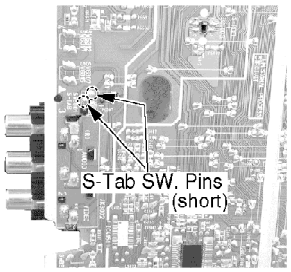

Main C.B.A. (foil side)

View A

Alternative method:
Cover the S-Tab SW. with masking tape.

2. Place the tape between the Cassette Up Ass'y and Main C.B.A. to get a stability.

3. When disassembling/assembling, refer to "CABINET SECTION" in DISASSEMBLY/ASSEMBLY PROCEDURES.

Fig. 3-4

To avoid touching Power Circuit,
following Tool (**Protection Cover**) is recommended.

How to make the Protection Cover:

1. Cut a Cassette Tape Case as shown.

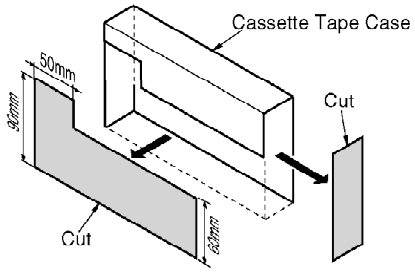

2. Cover the Power Circuit portion on Main C.B.A. with it.

Note:
The Protection Cover is not supplied.

4.1.5. HOT CIRCUIT

Primary circuit exists on the Main C.B.A.
This circuit is identified as "HOT" on the C.B.A. and in the Service Manual. Use extreme care to prevent accidental shock when servicing.

4.1.6. SERVICE MODE

In order to inhibit detection of the Supply & Takeup Photo Transistors, Reel Sensor, and Cylinder Lock, press and hold FF button and CH DOWN buttons on VCR together over 5 seconds in power off condition.

Fig. 4-1

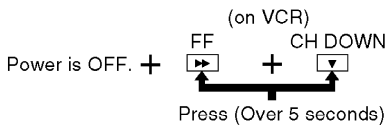

The power comes on and the unit goes into service mode.
In this mode, Mechanism movement can be confirmed. When removing Cassette Up Ass'y, it can be confirmed without a cassette.
To release from this mode, press POWER button off or disconnect AC Plug.

4.1.7. TRACKING CENTER MODE (TRACKING FIX AT CENTER)

Insert the Cassette tape. Set the unit into Service Mode. Play back the Cassette tape. Press PLAY button in Play back mode. "TRACKING CENTER" will be displayed on the TV monitor. In this mode, the tracking is fixed at center. (Auto tracking and manual tracking functions are not operational.)

Fig. 4-2

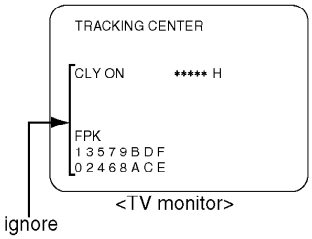

To release from this mode, press PLAY or STOP button.

4.1.8. CAUTION FOR INSTALLATION OF FRONT PANEL ASS'Y

CAUTION:

Opener Lever may be damaged when Front Panel Ass'y is installed, with Cassette Door-Lid of Front Panel Ass'y and Opener Lever of Cassette Up Ass'y set incorrectly.

Install the Front Panel Ass'y as follows:

1. **Swing the Cassette Door-Lid all the way open until the Cassette Door tab clears the Opener Lever.**
2. **Make sure that all locking tabs are aligned properly. Then, press the Front Panel straight in.**

Fig. 5

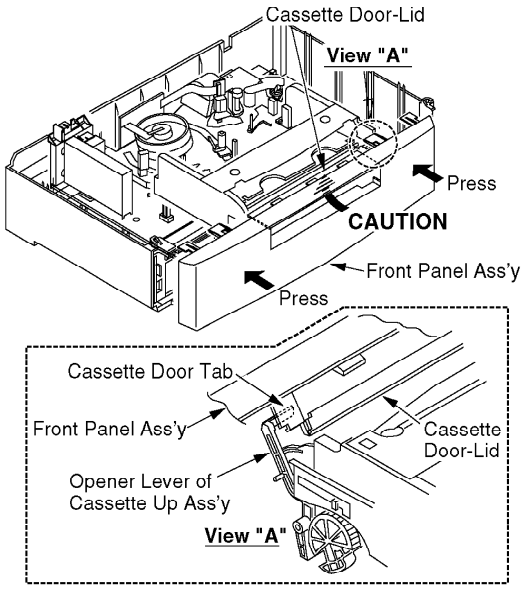

4.1.9. METHOD FOR LOADING/UNLOADING OF MECHANISM

4.1.9.1. (Manual Method)

Turn the Loading Gear clockwise (for loading) or counterclockwise (for unloading) using needlenose pliers etc.

Note:

Do not use this method if Mechanism is jammed or locked.

Fig. 6-1

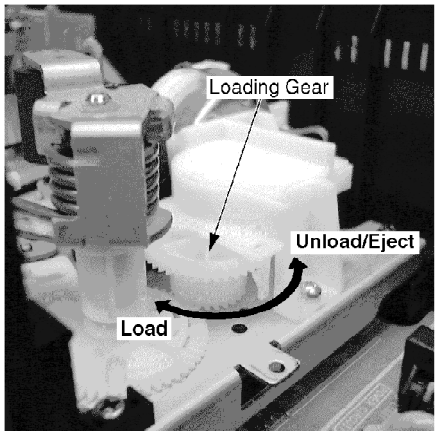

4.1.9.2. (Electrical Method)

Apply +10.0 V DC Power Supply to the Loading Motor terminals.

Loading

DC + to Portion "a," DC - to Portion "b"

Unloading

DC - to Portion "a," DC + to Portion "b"

CAUTION:

Before applying DC Power Supply, be sure to cut the Motor Leads with a cutter, etc.

Otherwise, the Loading Motor Drive IC (IC2501) may be damaged.

Fig. 6-2

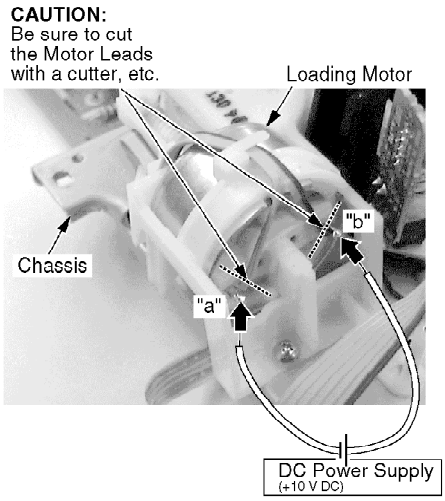

When loading without a cassette, push Portion "a" on the Holder Unit of Cassette Up Ass'y so that the Lever clear the First Tab and Second Tab.

Fig. 6-3

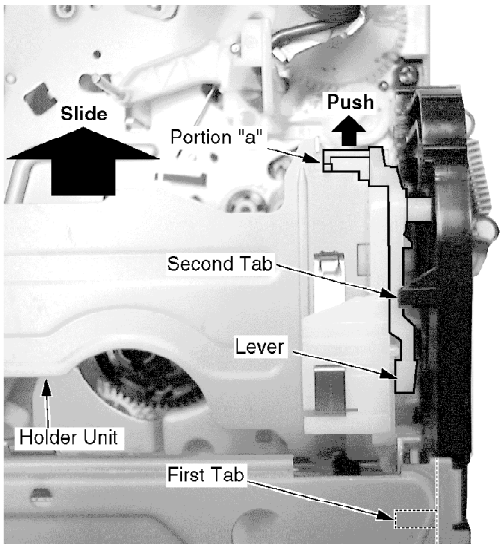

4.1.10. HOW TO REMOVE A JAMMED TAPE

CAUTION:

Wiper Arm Unit may be damaged or its spring may be out of place when the jammed tape is removed by force.

Remove a jammed tape as follows:

4.1.10.1. Manual Method

When a tape jam is encountered, check the tape loading condition and use the following procedure to remove a tape jam.

Fig. 7-1

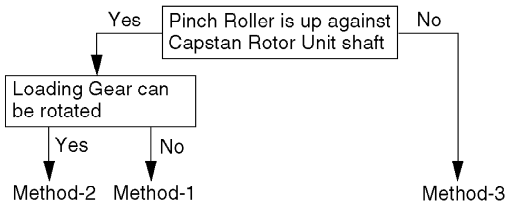

Method -1:

1. **Move the Pinch Roller Unit out by unhooking the Pin of Pinch Arm Unit so that the Pinch Roller is separated from the Capstan Rotor Unit shaft.**

Fig. 7-2

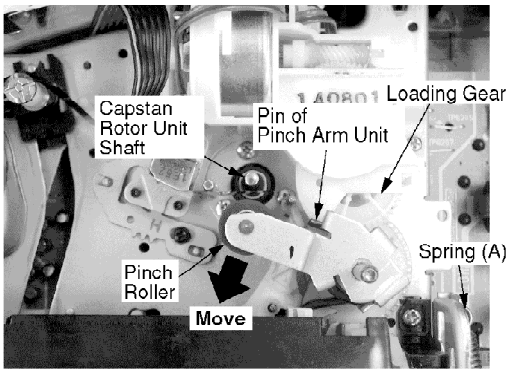

Top View

2. **Remove the tape from the tape path.**
3. **Rewind the tape into the cassette by rotating the Center Clutch Unit counterclockwise.**
4. **Unhook Spring (A) of the Drive Rack Arm.**
5. **Remove Screw (A).**
6. **Lift the Cassette Up Ass'y. While pulling the Cassette Up Ass'y out far enough so that it clears the Drive Rack Arm, slide the Drive Rack Unit as indicated by the arrow to remove the cassette tape from the Cassette Up Ass'y.**
7. **Check the cause of mechanical trouble and repair.**

Fig. 7-3

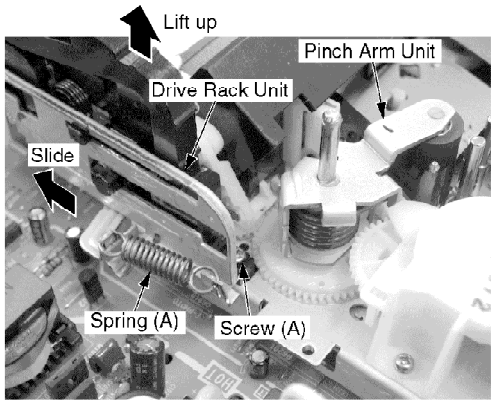

Method -2:

1. **Rotate Loading Motor counterclockwise with needlenose pliers, etc. so that the Pinch Roller is separated from the shaft of the Capstan Rotor Unit.**
2. **Perform Step 2 through Step 7 of Method -1.**

Method -3:

1. **Perform Step 2 through Step 7 of Method -1.**

Note:

After repairing mechanical trouble, make sure that all gear alignments are correct, especially the Wiper Arm Unit and Drive Rack Unit of Cassette Up Ass'y. (Refer to "EJECT Position Confirmation"in DISASSEMBLY/ASSEMBLY PROCEDURES.)

4.1.10.2. Electrical Method

Electrical method can only be performed when the mechanism is moved by rotating the Loading Gear.

CAUTION:

1. **Before applying DC Power Supply, be sure to cut the Motor Leads with a cutter, etc.**
   Otherwise, the Loading Motor Drive IC (IC2501) may be damaged.
2. **If loading does not start in approx. 2 seconds after DC Power Supply is applied, DO NOT continue to apply DC Power Supply. Instead, perform "Manual Method."**

1. **Be sure to cut the Motor Leads with a cutter, etc.**
2. **Apply +10.0 V DC Power Supply to the Loading Motor terminals.**
3. **When the Loading Posts reach the fully unloaded position, remove the Power Supply.**

Fig. 8

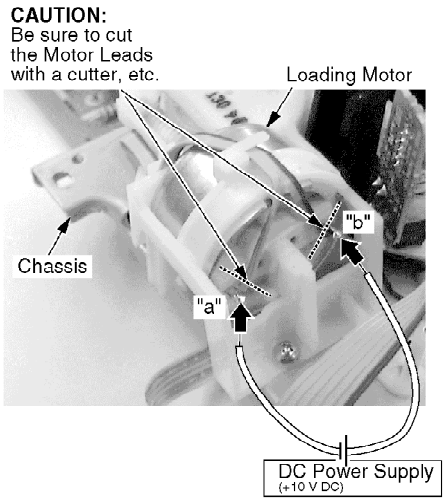

4. Rewind the tape into the cassette by turning the Center Clutch Unit counterclockwise.
5. Eject the cassette by applying +10.0 V DC Power Supply again.

4.1.11. BLACK SCREWS ON THE CHASSIS

Black Screws are used on the Mechanism Chassis to identify screws that require adjustment.

4.1.12. HOW TO RESET ALL VCR MEMORY FUNCTIONS

To reset (clear) the select language, channel auto set and set clock functions to their initial power on condition (power on, no cassette inserted), hold down the PLAY and CH UP buttons on the unit together for more than 5 seconds.
Power will shut off.

4.1.13. HOW TO CONFIRM AUTO CLOCK SET FEATURE

1. Connect an RF cable from the output of one unit to the input of the test unit.
2. Select corresponding RF channels.
3. Playback a recording of P.B.S. channel including clock set data and confirm this feature.

4.1.14. VARIABLE VOLTAGE ISOLATION TRANSFORMER

An Isolation Transformer should always be used during the servicing of VCR whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injuryfrom electrical shocks. It will also protect VCR from being damaged by accidental shorting that may occur during servicing. Also, when troubleshooting the above type of Power Supply Circuit, a variable isolation transformer is required in order to increase the input voltage slowly.

4.1.15. SPECIAL NOTE

All integrated circuits and many other semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the

"ELECTROSTATICALLY SENSITIVE (ES) DEVICES" section of this service manual.

5. DISASSEMBLY/ASSEMBLY PROCEDURES

5.1. CABINET SECTION

5.1.1. Disassembly Method

STEP No.	Ref. No.	PART	REMOVE	NOTE
1	(73)	Top Cover	Screws (447) 2pcs	1
2	(71)	Front Panel Ass'y	Locking Tabs of Front Panel	2
3	-	Main C.B.A. & Mechanism Chassis	Screws (461), (447) 3pcs, (501), (460) 2pcs, Locking Tabs, Grounding Plates (269), (270) *Operation C.B.A. (Screw (447), Locking Tab)	3
4	(E10)	Main C.B.A.	Screw (502), Shield Plate Unit (P3502), Mechanism Chassis (P4001, P6201), Unsolder Flat Cables on Cylinder and AC Head	4,5
	-	Mechanism Chassis		
5	(61)	Cassette Up Ass'y	Screws (502) 3pcs, Locking Tab, Spring	6

*Note:
Please refer to Exploded View and Parts List for applicable model.
Also, some models in the Service Manual may not use the part.

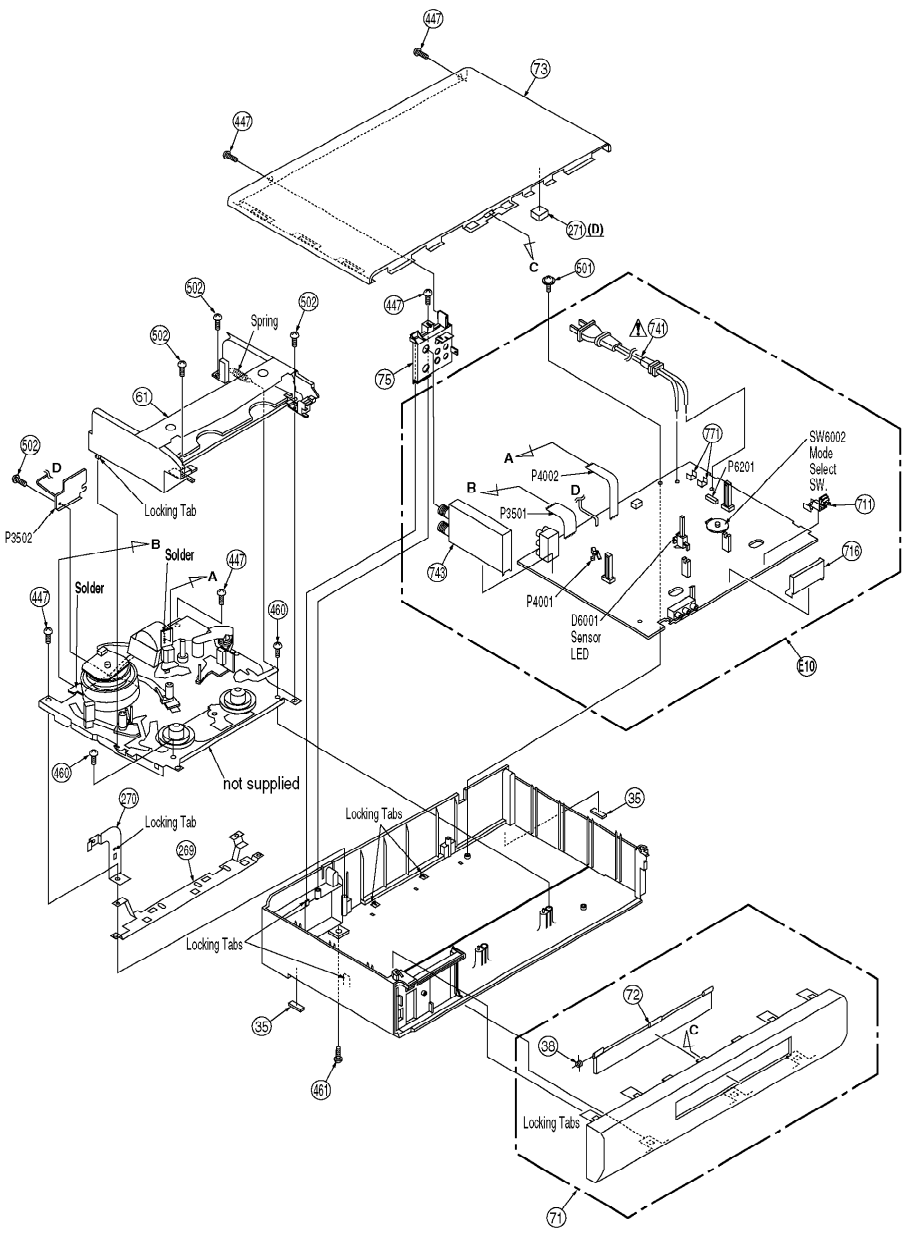

5.1.2. Notes in chart

1. Installation of Top Cover
Install the Top Cover front portion at a downward angle so that the tab on the Front Panel Ass'y fits into the hole in the Top Cover. Then, lower the rear portion into place and tighten 2 Screws (447).

2. Installation of Front Panel Ass'y

CAUTION:

Opener Lever may be damaged when Front Panel Ass'y is installed, with Cassette Door-Lid of Front Panel Ass'y and Opener Lever of Cassette Up Ass'y set incorrectly.

A. When installing the Front Panel Ass'y, swing the Cassette Door-Lid all the way open until the Cassette Door tab clears the Opener Lever.

B. Make sure that all locking tabs are aligned properly. Then, press the Front Panel straight in.

Fig. D1

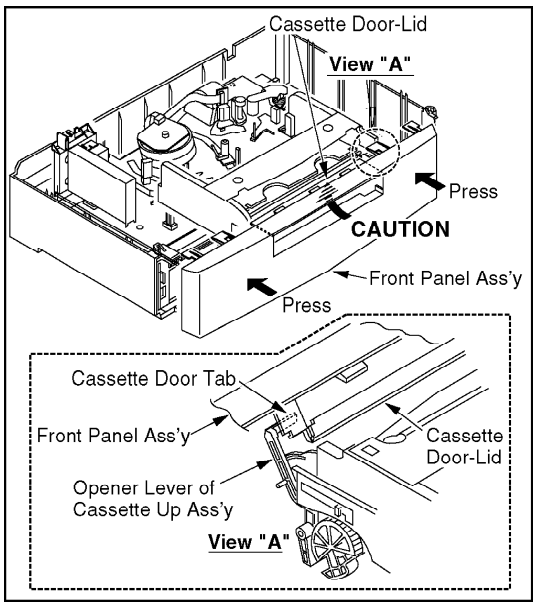

3. Installation of Main C.B.A. & Mechanism Chassis onto the Frame
When installing 2 Screws (460), slide the Holder Unit of the Cassette Up Ass'y (Refer to "METHOD FOR LOADING/ UNLOADING OF MECHANISM" in Service Notes) to tighten screws. Then,slide it back to the EJECT Position.

4. Installation of Mechanism Chassis and Cassette Up Ass'y onto Main C.B.A.

A. Make sure the Mode Select SW. on the Main C.B.A. is in EJECT position. If not, rotate the Mode Select SW. until the alignment projection is in the EJECT Position.

Fig. D2

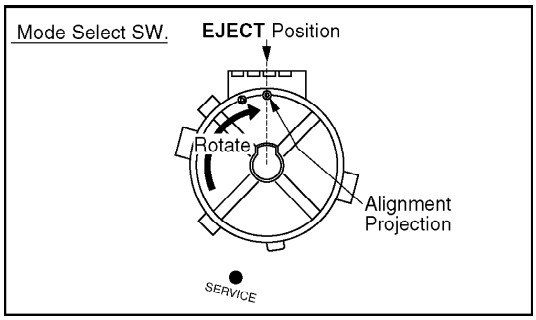

B. Install the Mechanism Chassis and Cassette Up Ass'y straight onto the Main C.B.A. so that the Sensor LED clears the hole in the Mechanism Chassis and that 2 Connectors (P4001, P6201) are aligned and seated securely.

5. Flat Cable solder points on the Cylinder and AC Head
Solder the Flat Cables. Then, install the Shield Plate as shown.

Fig. D3

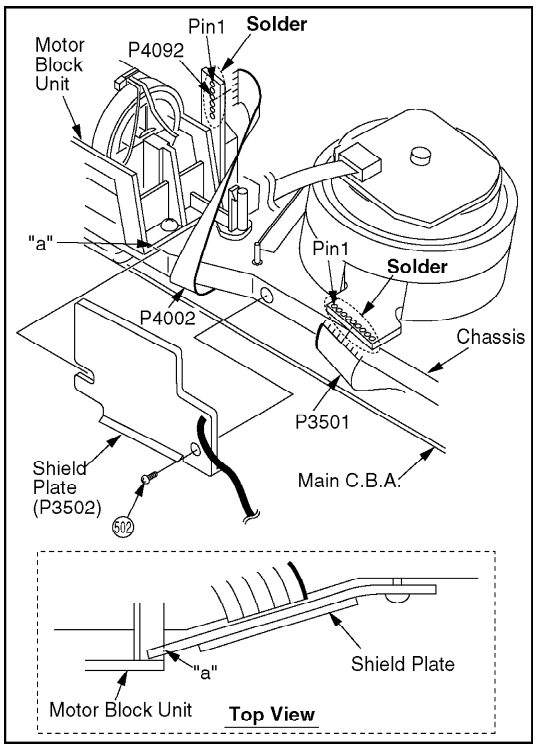

6. Installation of Cassette Up Ass'y

A. Confirm that the Locking Tab under the Cassette Up Ass'y is in Hole on the Mechanism Chassis when installing the Cassette Up Ass'y. Then, slide the Cassette Up Ass'y towards the back.

B. When installing 2 Screws (502), slide the Holder Unit (Refer to "METHOD FOR LOADING/UNLOADING OF MECHANISM" in Service Notes) to tighten screws. Then, slide it back to the

EJECT Position.

C. Hook Spring to the Drive Rack Arm on the Mechanism Chassis.

5.2. MECHANISM SECTION

5.2.1. Disassembly/Reassembly Method

This procedure starts with the condition that the cabinet parts and Main C.B.A. have been removed.
When reassembling, perform the step(s) in the reverse order.
Perform all disassembly/reassembly and alignments procedures in EJECT Position.

Step/Loc. No.	Prior Step(s)	Part	Fig. No.	Remove	Alignment/Adjustment
①	----------	Not used	-	-	
②	----------	Full Erase Head	J2	(L-1)	
③	1	Cylinder Unit	J2	3(S-3), Flexible Cable	TAPE INTERCHANGEABILITY Adjustment
④	----------	Capstan Belt	J3-1	-	
⑤	----------	Support Angle	J3-1	(S-4), (S-5)	
⑥	5	Intermediate Gear B	J3-1	(L-2)	Gear Alignment
⑦	4,5,6	Main Cam Gear	J3-1	Main Cam Push Nut	Gear Alignment
⑧	4	Center Clutch Unit	J4-1	(W-1)	
⑨	4,8	Changing Gear Spring	J4-1	-	
⑩	4,8,9	Changing Gear	J4-1	-	
⑪	4,8,9,10	Idler Arm Unit	J4-1	-	
⑫	----------	Reel Gear	J5-1	2(L-3)	
⑬	4,5,6,7,8,9,10	Main Rod	J5-1	(W-2), (L-4)	Gear Alignment
⑭	----------	Not used	-	-	
⑮	4	Capstan Motor Unit	J6	3(S-6), Unsolder	
⑯	----------	Not used	-	-	
⑰	----------	Not used	-	-	
⑱	----------	Not used	-	-	
⑲	4,8,9,10,13	T Loading Arm Unit	J7-1	-	Gear Alignment
⑳	4,5,6,7,8,9,10,13,19	S Loading Arm Unit	J7-1	-	Gear Alignment
㉑	----------	T Brake Unit	J8-1		
㉒	----------	Tension Control Arm Unit	J8-1	3(L-5)	
㉓	21	T Reel Table	J8-1	-	
㉔	22	S Reel Table	J8-1	-	
㉕	22	Tension Arm Unit	J8-1	2(L-6), (P-1), (P-2)	
㉖	22,25	Loading Post Base-T Unit	J9	-	P2 AND P3 POST HEIGHT, TAPE INTERCHANGEABILITY Adjustment
㉗	22,25	Loading Post Base-S Unit	J9	-	
㉘	----------	Opener Piece	J10-1	2(L-7)	
㉙	4,5,6,7	Drive Rack Arm	J10-1	-	
㉚	28	Pinch Arm Unit	J10-1	-	
㉛	28,30	P5 Arm Unit	J10-1	(W-3)	
㉜	5,6,28	Intermediate Gear A	J10-1	-	Gear Alignment
㉝	----------	Motor Block Unit	J11	2(S-9)	
㉞	----------	Audio Control Head Unit	J11	(S-10)	TAPE INTERCHANGEABILITY Adjustment
㉟	5,6,28,30,32,33	Lift Gear	J11	-	
㊱	----------	Not used	-	-	
㊲	22,25	Tension Arm Boss	J11	(L-8)	
㊳	----------	SS Brake Arm Unit	J5-1	(L-9), (P-3)	
㊴	----------	Cleaner Arm Unit **(Model with Cleaner Arm Unit)**	J11	(L-10)	

A B C D E F

How to read chart shown above:

A: Order of Procedure steps.
When reassembling, perform steps(s) in reverse order.
These numbers are also used as the identification (location) No. of parts in Figures.
B: Steps to be completed prior to the current step.
C: Part to be removed or installed.
D: Fig. No. showing Procedure or Part Location.
E: Identification of part to be removed, unhooked, unlocked, released, unplugged or unsoldered.
(S-1) = Screw (S-1), (L-1) = Locking Tab (L-1),
(W-1) = Washer (W-1), (P-1) = Spring (P-1),
(C-1) = Cut Washer (C-1)
F: Alignment/Adjustment which is required when installing or replacing each Parts.

5.2.2. Inner Parts Location

Note: BOX indicates alignment (Gear Alignment or Mechanical Adjustment) required when a part is replaced.

Fig. J1-1

TOP VIEW

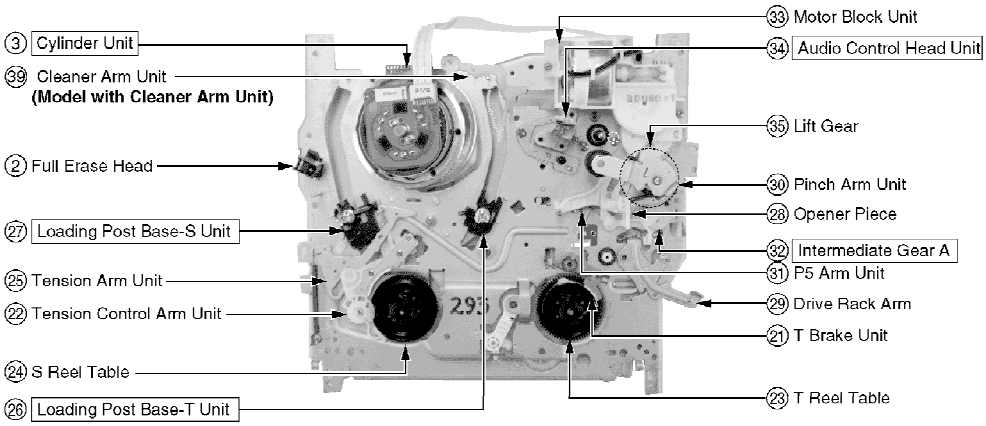
③ Cylinder Unit
㊴ Cleaner Arm Unit
(Model with Cleaner Arm Unit)
② Full Erase Head
㉗ Loading Post Base-S Unit
㉕ Tension Arm Unit
㉒ Tension Control Arm Unit
㉔ S Reel Table
㉖ Loading Post Base-T Unit
㉝ Motor Block Unit
㉞ Audio Control Head Unit
㉟ Lift Gear
㉚ Pinch Arm Unit
㉘ Opener Piece
㉜ Intermediate Gear A
㉛ P5 Arm Unit
㉙ Drive Rack Arm
㉑ T Brake Unit
㉓ T Reel Table

BOTTOM VIEW

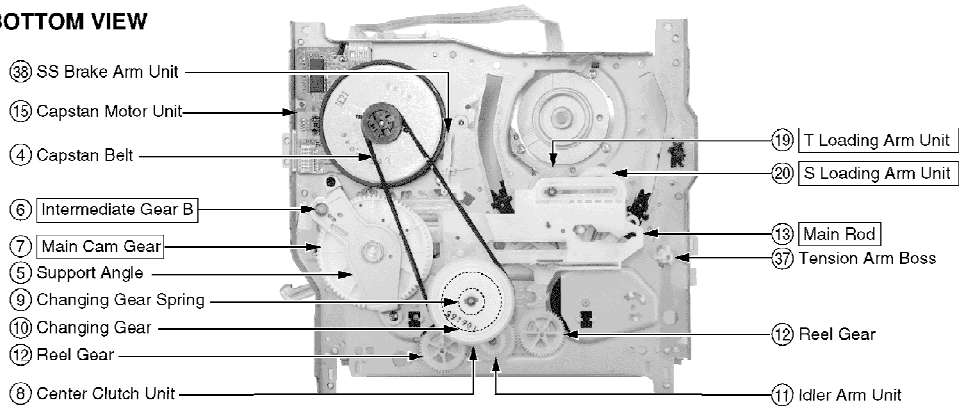

5.2.3. EJECT Position Confirmation

Fig. J1-2

Check the following alignment points to confirm that the Mechanism and Cassette Up Ass'y are in the **EJECT** Position from the top side.

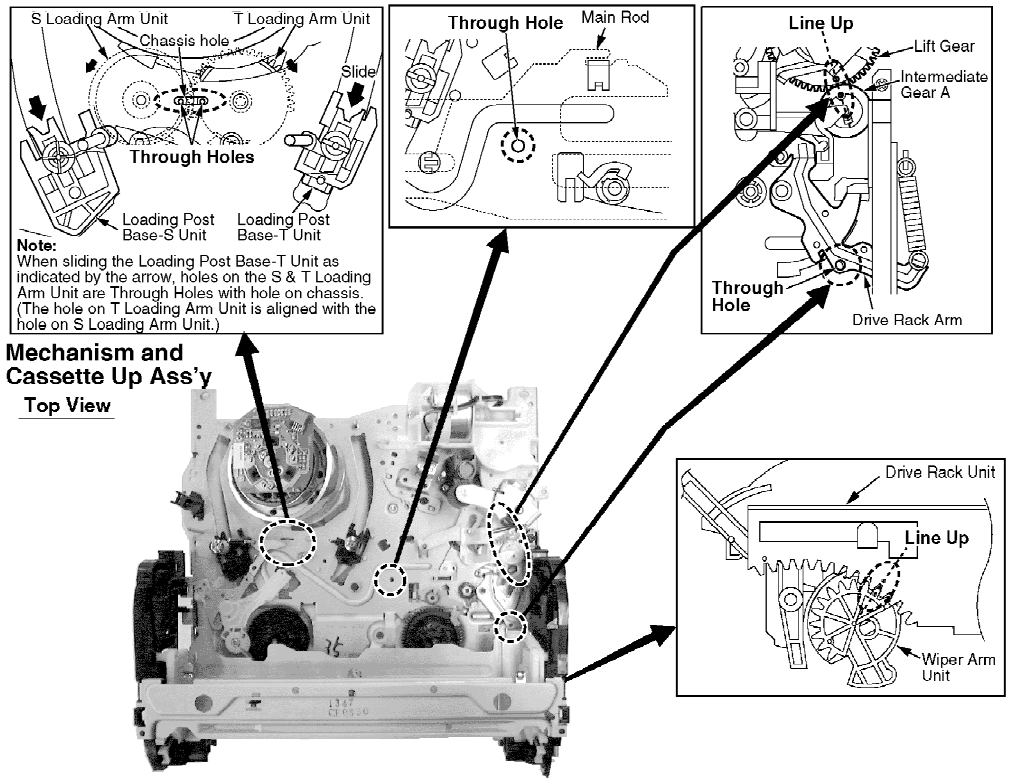
S Loading Arm Unit
T Loading Arm Unit
Chassis hole
Slide
Through Holes
Loading Post Base-S Unit
Loading Post Base-T Unit
Note:
When sliding the Loading Post Base-T Unit as indicated by the arrow, holes on the S & T Loading Arm Unit are Through Holes with hole on chassis. (The hole on T Loading Arm Unit is aligned with the hole on S Loading Arm Unit.)
Through Hole
Main Rod
Line Up
Lift Gear
Intermediate Gear A
Through Hole
Drive Rack Arm
Mechanism and Cassette Up Ass'y
Top View
Drive Rack Unit
Line Up
Wiper Arm Unit

5.2.4. Full Erase Head and Cylinder Unit

Fig. J2

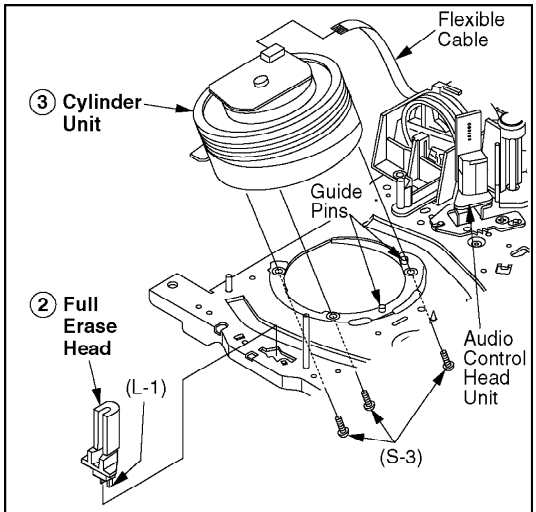
Flexible Cable
3 Cylinder Unit
Guide Pins
2 Full Erase Head
(L-1)
Audio Control Head Unit
(S-3)
Note:
Use extreme care when removing or replacing the Cylinder Unit. Do not touch the Video Heads during servicing.

5.2.4.1. Reassembly Notes

1. After replacing the Cylinder Unit, clear the Total elapsed "Cylinder rotation" time (in hours) to 0. Refer to "USAGE SCREEN MODE" in

SERVICE NOTES.

5.2.5. Capstan Belt, Support Angle, Intermediate Gear B, and Main Cam Gear

Fig. J3-1

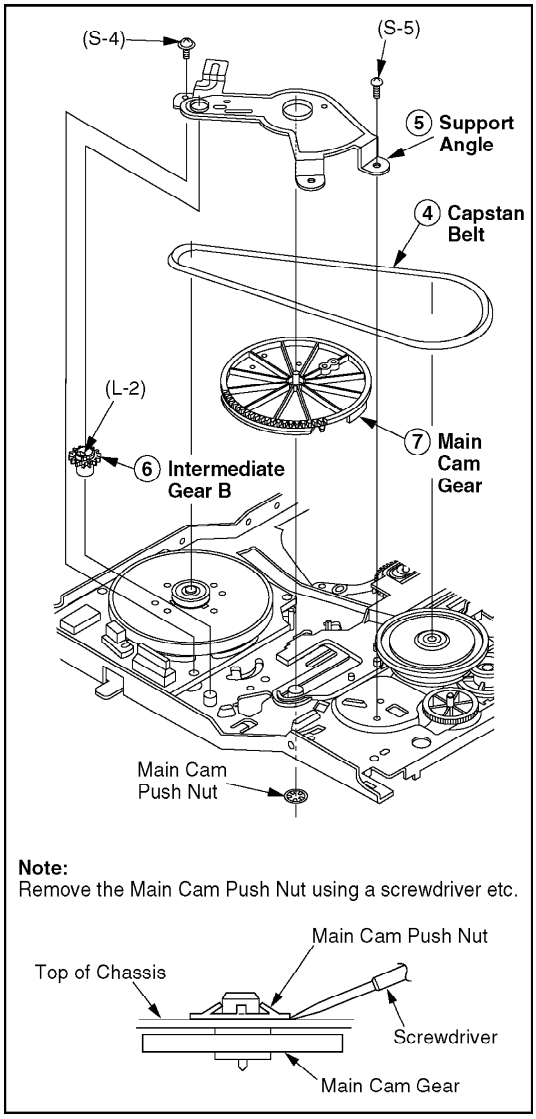

5.2.5.1. Reassembly Notes

1. Alignment of Main Cam Gear, Drive Rack Arm, and Main Rod

A. Confirm that the hole on Main Rod is a Through Hole with a hole on chassis.

B. Confirm that the hole on Drive Rack Arm is a Through Hole with a hole on chassis.

C. Install the Main Cam Gear so that the projection of Main Cam Gear is in the upward position as shown.

Fig. J3-2

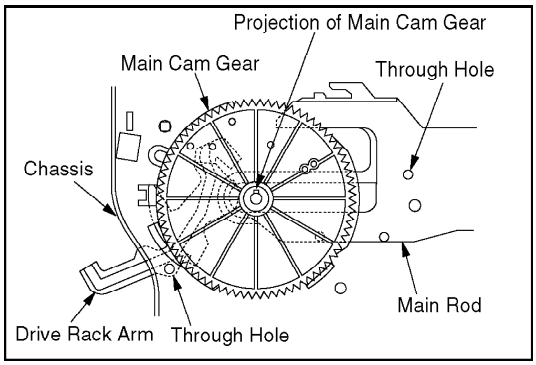

2. Confirmation/Alignment of Intermediate Gear B, Main Cam Gear, and Intermediate Gear A

A. Confirm that the Hole A on Lift Gear is a Through Hole with a hole on chassis.

B. Confirm that the hole on Intermediate Gear A is aligned with the hole on Lift Gear.

Fig. J3-3

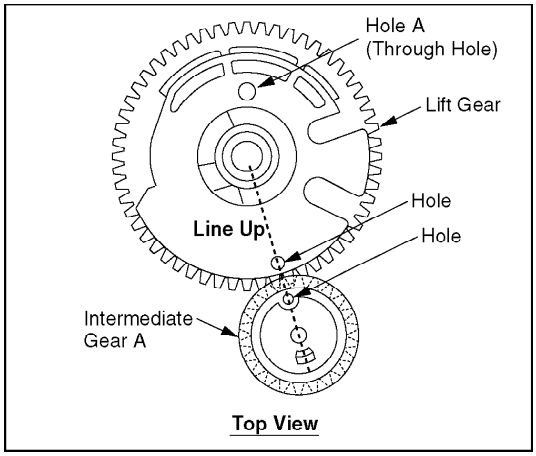

C. Install the Intermediate Gear B so that the hole on the Intermediate Gear B is aligned with the hole on the Main Cam Gear.

Fig. J3-4

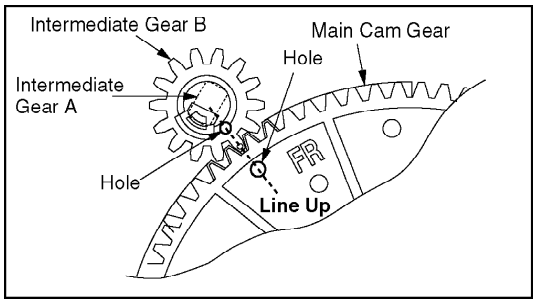

3. Holes on Main Cam Gear

A. The EJECT mode Hole on Main Cam Gear should be a Through

Hole with Hole A on Support Angle in EJECT mode. The each mode Hole on Main Cam Gear should be a Through Hole with Hole B on Support Angle in each mode.

Fig. J3-5

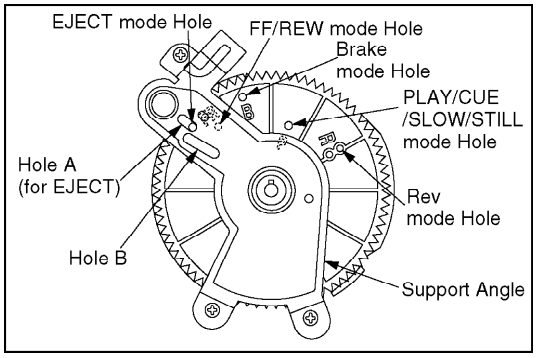

4. Main Cam Gear Kit

A. Main Cam Gear is supplied as a Main Cam Gear Kit only (Kit No. VVGS0009).

Main Cam Gear Kit consists of a Main Cam Gear and a Main Cam Push Nut.

However, Main Cam Push Nut is available separately as a replacement part.

5. Installation of Main Cam Gear and Main Cam Push Nut

A. After installing the Support Angle, install the Main Cam Push Nut with Needlenose Pliers etc. so that it is flush with the chassis.

There may be some slight scratches on the Shaft of Main Cam Gear, when removing the Main Cam Gear. In case that the Main Cam Gear can be installed securely without tottering, it is fine to use the one. If any tottering, install all new parts.

Fig. J3-6

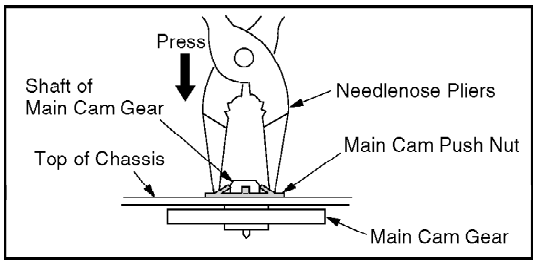

6. The Main Cam Push Nut is not reusable. Install a new one.

5.2.6. Center Clutch Unit, Changing Gear Spring, Changing Gear, and Idler Arm Unit

Fig. J4-1

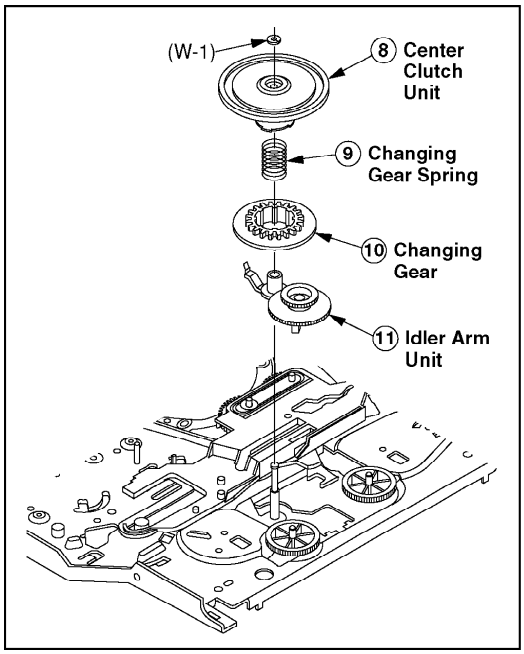

5.2.6.1. Reassembly Notes

1. Installation of Center Clutch Unit

A. Fit the Center Clutch Unit into the Changing Gear.

Fig. J4-2

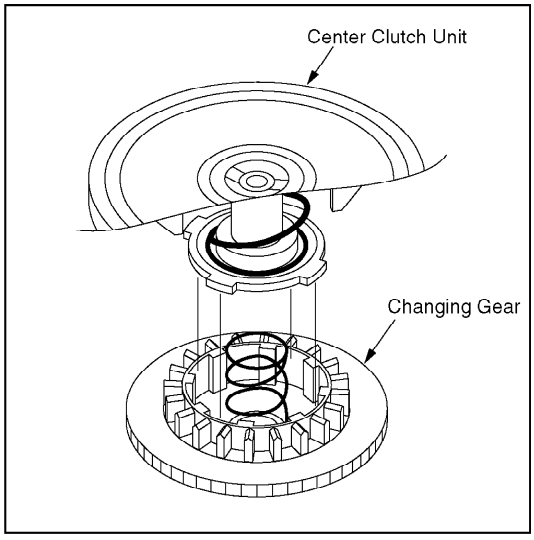

5.2.7. Reel Gear, Main Rod, and SS Brake Arm Unit

Fig. J5-1

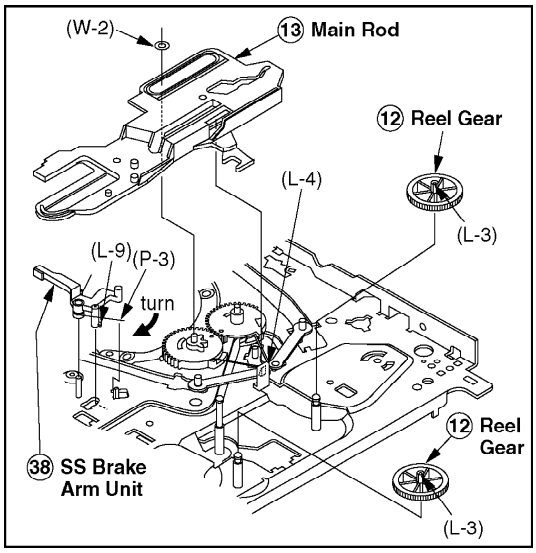

5.2.7.1. Reassembly Notes

1. Alignment of Main Rod and T Loading Arm Unit

A. Align the Gear on T Loading Arm Unit with Gear of Main Rod. Confirm that the Hole on Main Rod is a Through Hole with a hole on chassis.

Fig. J5-2

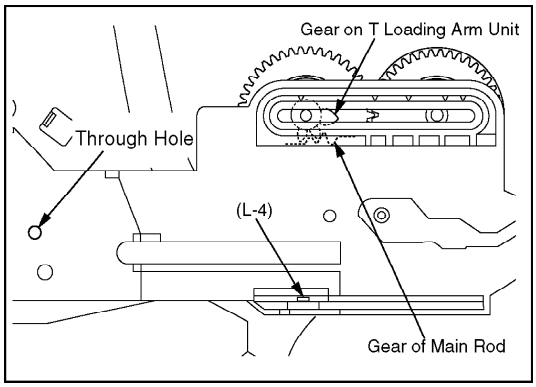

5.2.8. Capstan Motor Unit

Fig. J6

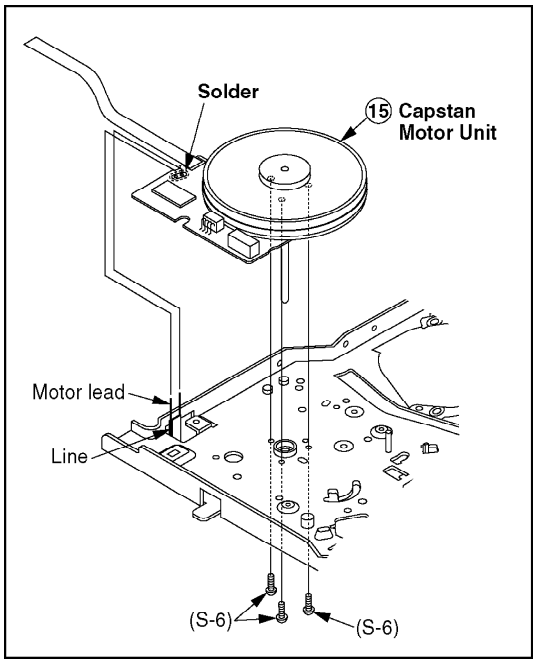

5.2.9. T Loading Arm Unit and S Loading Arm Unit

Fig. J7-1

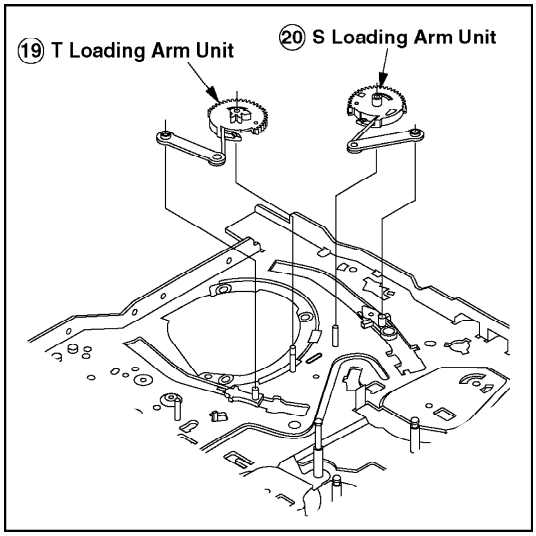

5.2.9.1. Reassembly Notes

1. Alignment of T Loading Arm Unit and S Loading Arm Unit

A. Install the S Loading Arm Unit onto the chassis.

B. Install the T Loading Arm Unit so that the hole on T Loading Arm Unit is aligned with the hole on S Loading Arm Unit.

C. Confirm that the holes on the S & T Loading Arm Unit are Through Holes with hole on chassis.

Fig. J7-2

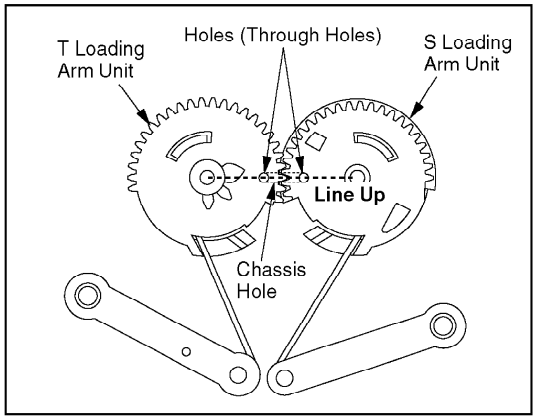

5.2.10. T Brake Unit, Tension Control Arm Unit, T Reel Table, S Reel Table, and Tension Arm Unit

Fig. J8-1

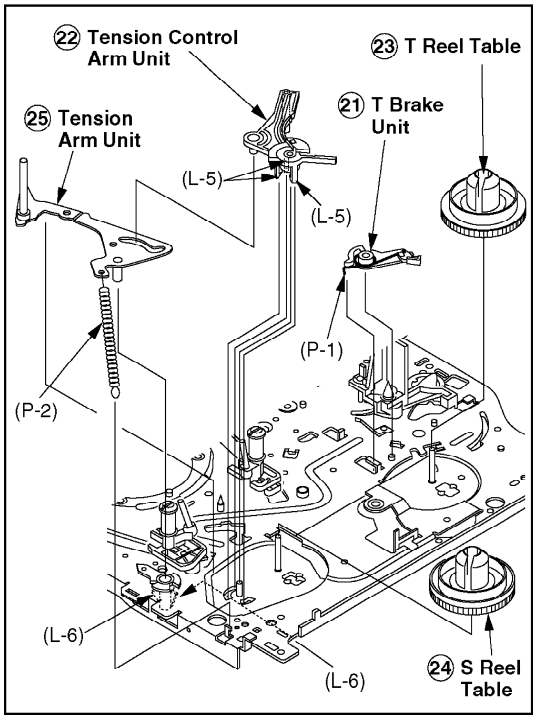

5.2.10.1. Reassembly Notes

1. How to distinguish between S Reel Table and T Reel Table

Fig. J8-2

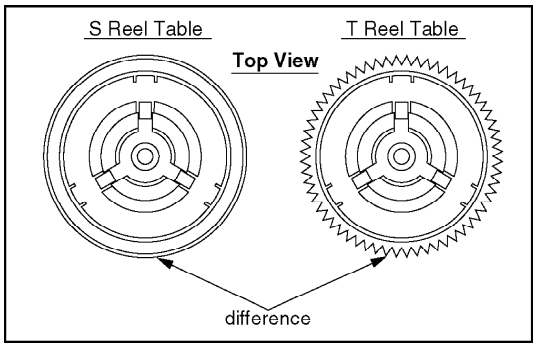

5.2.11. Loading Post Base -T Unit and Loading Post Base -S Unit

Fig. J9

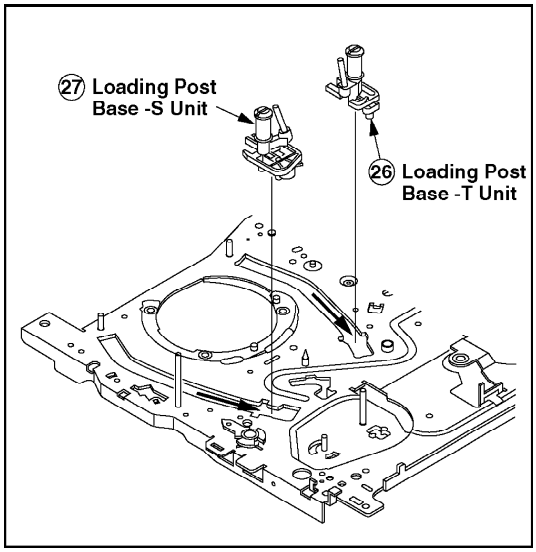

5.2.12. Opener Piece, Drive Rack Arm, Pinch Arm Unit, P5 Arm Unit, and Intermediate Gear A

Fig. J10-1

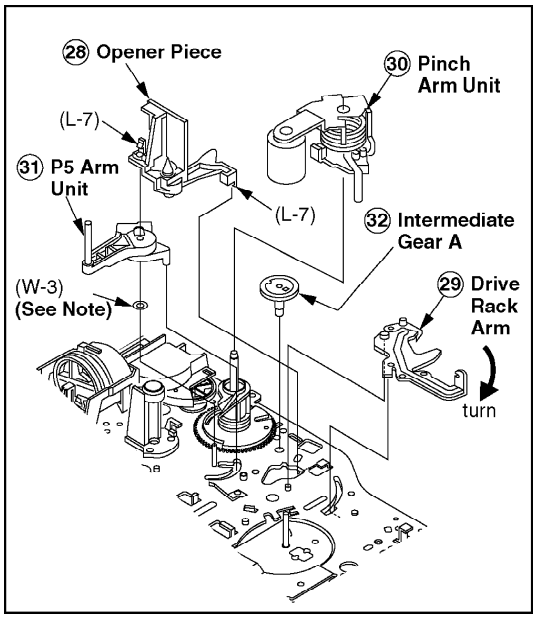

Note:

In early units, a washer is used. When servicing the washer or the P5 Arm Unit, replace only the P5 Arm Unit with a new one, and remove the washer.

5.2.12.1. Reassembly Notes

1. Installation/Alignment of Intermediate Gear A, Lift Gear and P5 Arm Unit

A. Rotate the Lift Gear so that Hole A on Lift Gear is a Through Hole with a hole on chassis.

B. Install the Intermediate Gear A so that the hole on Intermediate Gear A is aligned with the hole on Lift Gear.

C. Install the P5 Arm Unit so that it contacts with the tab of chassis.

Fig. J10-2

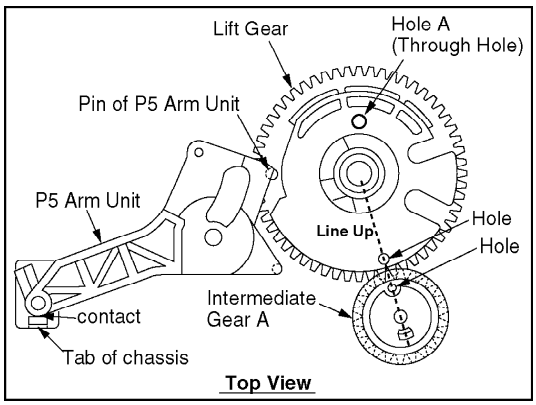

2. Installation of Opener Piece

A. Install the Opener Piece so that the slot of the Opener Piece is inserted to the Pin of Pinch Arm Unit

Fig. J10-3

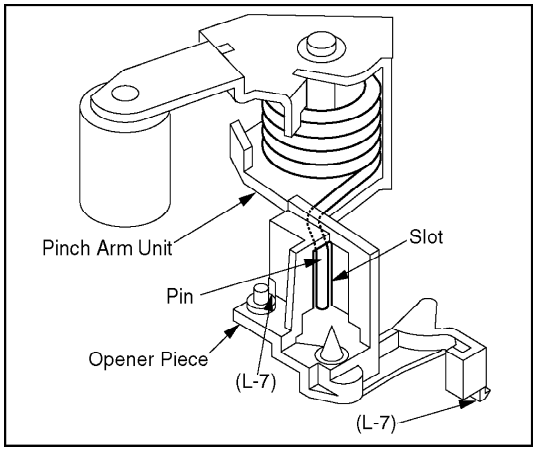

5.2.13. Motor Block Unit, Audio Control Head Unit, Lift Gear, Tension Arm Boss, and Cleaner Arm Unit

Fig. J11

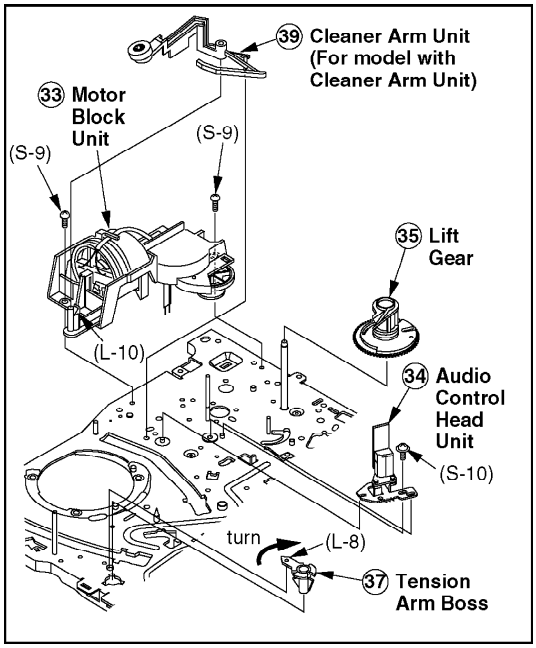

5.3. CASSETTE UP ASSEMBLY SECTION

This chart indicates Step/Location No. of Parts to be serviced and prior steps to gain access items to be serviced when disassembling. When reassembling, perform the step(s) in the reverse order.

Step/Loc. No.	Prior Step(s)	Part	Fig. No.	Remove	Alignment/Adjustment
①	----------	Top Plate	K1-1	(L-1), (L-2)	
②	1	Wiper Arm Unit	K1-1	2(L-3)	Gear Alignment
③	1,2	Holder Unit	K1-1	-	
④	----------	Opener Lever	K2	2(L-4)	
⑤	1,2,3,4	Drive Rack Unit	K2	-	
	A	B C	D	E	F

How to read chart shown above:

A: Order of Procedure steps.
When reassembling, perform steps(s) in reverse order.
These numbers are also used as the identification (location) No. of parts in Figures.
B: Steps to be completed prior to the current step.
C: Part to be removed or installed.
D: Fig. No. showing Procedure or Part Location.
E: Identification of part to be removed, unhooked, unlocked, released, unplugged or unsoldered.
(S-1) = Screw (S-1), (L-1) = Locking Tab (L-1), (W-1) = Washer (W-1), (P-1) = Spring (P-1), (C-1) = Cut Washer (C-1)
F: Alignment/Adjustment which is required when installing or

replacing each Parts.

5.3.1. Top Plate, Wiper Arm Unit, and Holder Unit

Fig. K1-1

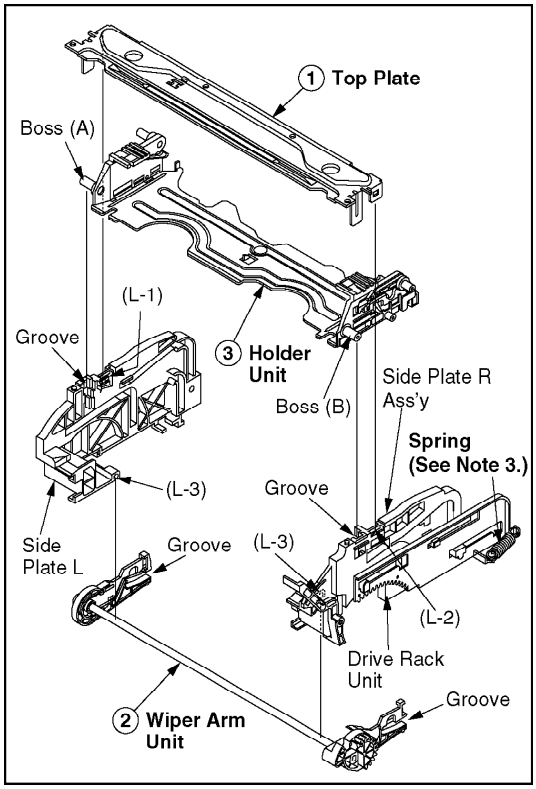

5.3.1.1. Reassembly Notes

1. Alignment of Wiper Arm Unit and Drive Rack Unit

A. Slide the Drive Rack Unit to the far right as indicated by the arrow.

B. Install the Wiper Arm Unit so that the hole on the Wiper Arm Unit is aligned with the hole on the Drive Rack Unit.

Fig. K1-2

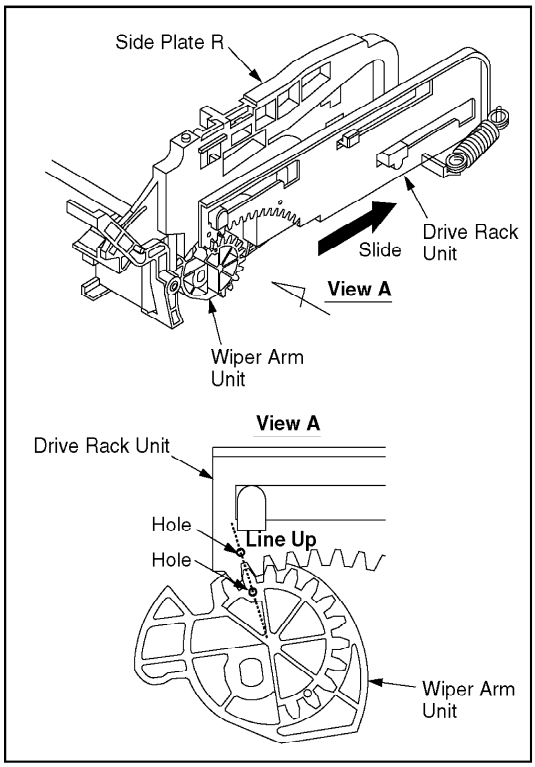

2. Installation of Holder Unit

A. Turn the Wiper Arm Unit so that the grooves on each end are aligned with the each groove on Side Plate L and R.

B. Insert Holder Unit boss (A) and (B) into the grooves as shown in Fig. K1-1.

C. Finally, in the EJECT Position, confirm that the protrudence on the Wiper Arm Unit is aligned with the indentation on the Drive Rack Unit.

Fig. K1-3

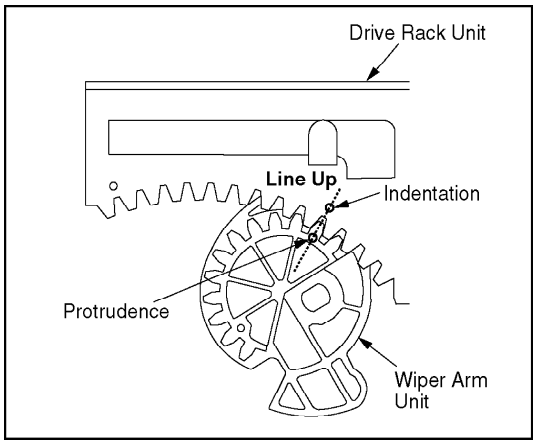

3. Make sure to hook the spring to the Drive Rack Arm of Mechanism chassis.

5.3.2. Opener Lever and Drive Rack Unit

Fig. K2

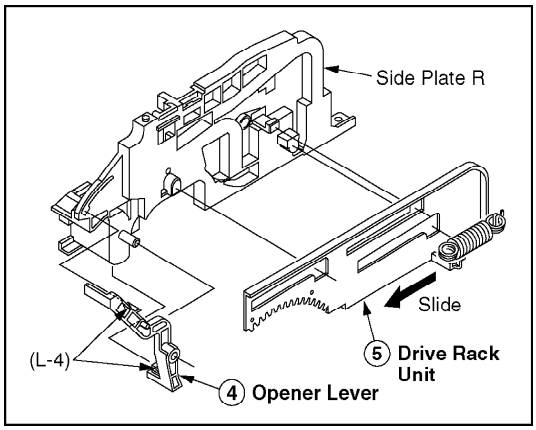

6. ADJUSTMENT PROCEDURES

6.1. SERVICE FIXTURES AND TOOLS

VFMS0003H6 VHS Alignment Tape 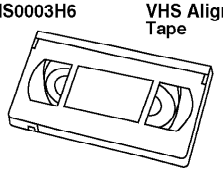 Video: Color Bar & Monoscope Audio: 6kl Iz(MONO)	Back Tension Meter (Made in USA., Purchase Locally) 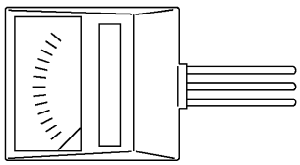	VFK27 Head Cleaning Stick 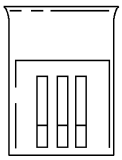
VFK0330 H-Position Adjustment Driver 	VFKS0081 Grease 	VFK0329 Post Adjustment Driver

6.2. MECHANICAL ADJUSTMENT

6.2.1. CLEANING PROCEDURE FOR THE UPPER CYLINDER UNIT

1. While slowly turning the Upper Cylinder Unit counterclockwise by hand, gently rub the Video Heads with a Head Cleaning Stick (VFK27) moistened with Ethanol.
When using a Cleaning Cassette, make sure to use "DRY" type only and be aware that excessive use can shorten head life.

Fig. M1

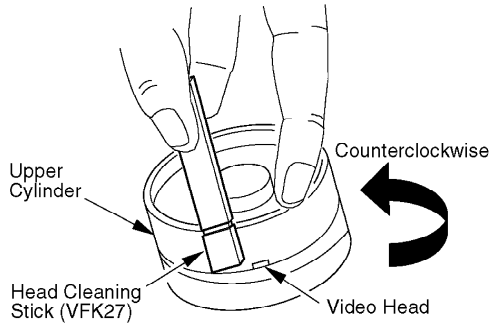

Note:

1. **Do not rub vertically or apply excess pressure to the Video Heads. Do not turn the Upper Cylinder Unit clockwise while cleaning.**
2. **After cleaning, use a Dry Head Cleaning Stick (VFK27) to remove any Ethanol remaining on the cylinder tape path. Otherwise, tape damage will occur.**

6.2.2. ADJUSTMENT PROCEDURES

6.2.2.1. BACK TENSION CONFIRMATION

Purpose:

To fine adjust the Back Tension so that the tape runs smoothly with a constant tension.

Symptom of Misadjustment:

1) If the tape tension is less than the specified value, the tape cannot come into proper contact with the Video Heads, resulting in poor picture playback.

2) If the tape tension is too high, the tape will soon be damaged.

Equipment Required:

Back Tension Meter (Made in U.S.A., Purchase Locally)

VHS Cassette Tape (120-Minute Tape)

Specification:

22.4 gf±2.5 gf

(0.220 N±0.025 N)

1. **Play back a T120 cassette tape from the beginning for approx. 10 to 20 seconds to stabilize tape movement.**
2. **Insert a Tension Meter into tape path and measure the back tension.**

Fig. M2-1

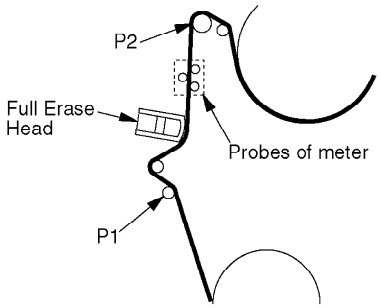

3. If the reading is out of specification, make sure that there is no dust or foreign material between the Brake Pad of Tension Control Arm Unit and the S Reel Table.
   After cleaning, the reading of tension measurement is still out of specification, replace the Tension Arm Unit and the Tension Control Arm Unit.

Fig. M2-2

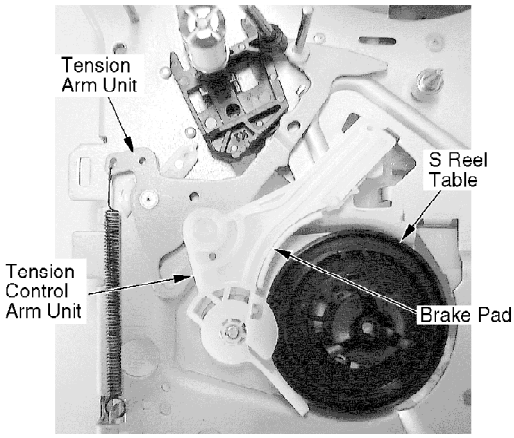

Note:

1. Be sure that the three probes of the meter are all in solid contact with the tape, but not touching any other parts of the mechanism.
2. It is recommended that measurements should be repeated at least three (3) times because the tension meter is very sensitive to external vibrations.

6.2.2.2. TAPE INTERCHANGEABILITY ADJUSTMENT

Note:

To perform these adjustment/confirmation procedures, enter the Tracking center mode.

Equipment Required:

Dual Trace Oscilloscope

VHS Alignment Tape (VFMS0003H6)
Post Adjustment Driver (VFK0329)
H-Position Adjustment Driver (VFK0330)

6.2.2.2.1. ENVELOPE OUTPUT ADJUSTMENT

The height of the P2 and P3 Posts replacement part is preadjust at the factory.

Purpose:

To achieve a satisfactory picture and secure precise tracking.

Symptom of Misadjustment:

If the envelope is output poorly, much noise will appear in the picture. Then the tracking will lose precision and the playback picture will be distorted by any slight variation of the tracking control circuit.

Equipment Required:

Post Adjustment Driver (VFK0329)

1. **Insert the alignment tape.**
2. **Press and hold VCR/TV button and CH DOWN buttons on VCR together over 5 seconds in power off condition.**
   The power comes on and the unit goes into service mode.
3. **Play back the alignment tape.**
4. **To enter Tracking center mode, press PLAY button in Play back mode. "TRACKING CENTER" will be displayed on the TV monitor.**
5. **Connect the oscilloscope to TP3002 on the Video Signal Process Section of the Main C.B.A. Use TP6205 as a trigger.**
6. **Confirm that the RF envelope is flat enough (V1/V-max. is 0.7 or more). If not, with Post Adjustment Driver, adjust P2 and P3 post height so that the envelope waveform becomes as flat (V1/V-max. is 0.7 or more) as possible (Noenvelope drop). If the envelope drop appears on the left-half of the waveform, adjust P2 post height. If the envelope drop appears on the right-half of the waveform, adjust P3 post height.**

CAUTION:

Overtightening P2 and P3 posts may cause the threads to strip.

Note:

It will be possible to confirm Step 6 according to following steps.

1. **Release the Tracking center mode.**

2. Press the Tracking Control Up or Down button on remote control. Make sure that the envelope waveform remains flat. If not, readjust P2 and/or P3 post heights.

Fig. M3-1

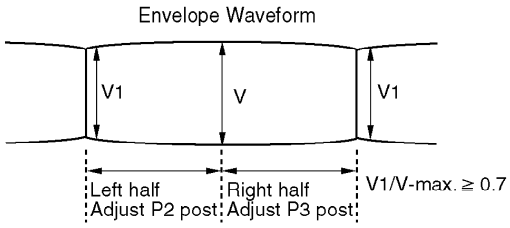

Fig. M3-2

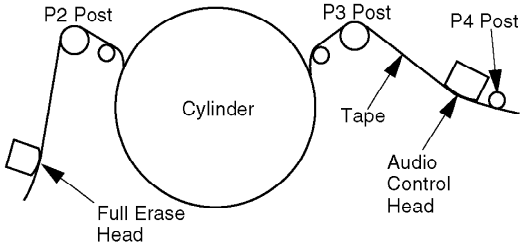

7. After adjustment, confirm that the tape travels without curling at P2 and P3 posts.

Fig. M3-3

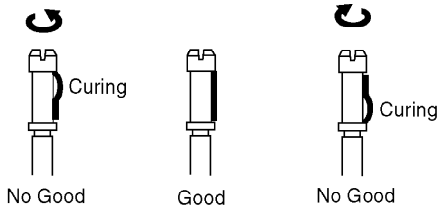

8. To release from Tracking center mode, press PLAY or STOP button.

6.2.2.2.2. AUDIO CONTROL HEAD TILT ADJUSTMENT

Purpose:

To confirm that the tape runs smoothly. In particular, confirm that the tape properly picks up the Audio Signal at the upper part of the head and the Control Signal at the lower part of the head.

Symptom of Misadjustment:

If the tilt of the Audio Control Head is poorly adjusted, the tape will eventually be damaged. An intermittent Blue screen may be seen in Playback.

1. **Play back a T120 cassette tape and check that the tape travels smoothly between the upper and lower guides of the P4 post.**
2. **If necessary, adjust Black Screw (B) clockwise until the tape begins to curl at the lower edge of the P4 post. Then adjust the screw counterclockwise until the curling is eliminated.**

Fig. M4

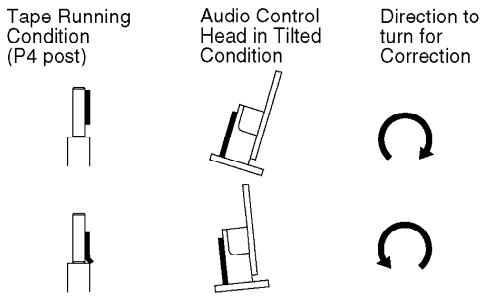

6.2.2.2.3. AUDIO CONTROL HEAD HEIGHT ADJUSTMENT

The height of the Audio Control Head replacement part is preset at the factory.

Purpose:

To be sure the tape runs properly along the Control Head.

Symptom of Misadjustment:

If the control signal is not properly picked up, Servo Operation cannot be achieved. A Blue screen will be seen in Playback.

This confirmation is required when the Audio Control Head is replaced.

1. **Play back a T120 cassette tape and check that the lower edge of the tape runs approximately 0.25 mm above the lower edge of the Audio Control Head.**
2. **If necessary, adjust Black Screws (A) and (B) clockwise to lower the tape or counterclockwise to raise.**

Fig. M5

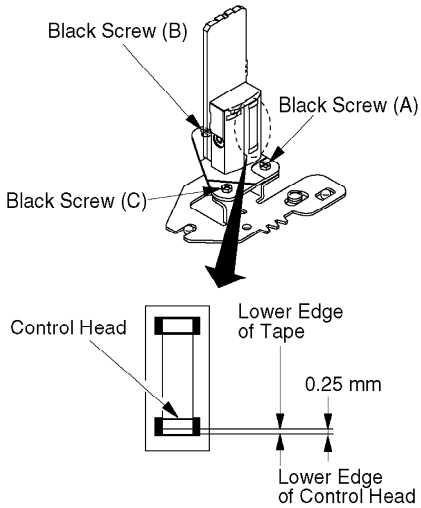

6.2.2.2.4. AUDIO CONTROL HEAD AZIMUTH ADJUSTMENT

Purpose:

To adjust the position and height of the Audio Control Head so that it meets the tape tracks properly.

Symptom of Misadjustment:

If the position of the Audio Control Head is not properly adjusted, the Audio S/N Ratio is poor.

1. **Connect the oscilloscope to the audio output jack on the rear side of the deck.**
2. **Play back the 6 kHz Monaural Audio portion of the alignment tape.**
3. **Adjust Black Screw (C) on the Audio Control Head base so that the output level is at maximum.**

Fig. M6

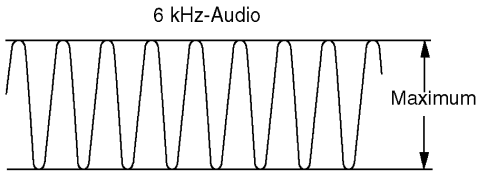

4. **Confirm the height of the Audio Control Head is proper. If not, readjust Black Screws (A) and (B).**

6.2.2.2.5. AUDIO CONTROL HEAD HORIZONTAL POSITION ADJUSTMENT

Purpose:

To adjust the Horizontal Position of the Audio Control Head.

Symptom of Misadjustment:

If the Horizontal Position of the Audio Control Head is not properly adjusted, a maximum envelope cannot be obtained at the Neutral Position of the Tracking Control Circuit.

1. **Insert the alignment tape.**
2. **Press and hold FF button and CH DOWN buttons on VCR together over 5 seconds in power off condition.**
   The power comes on and the unit goes into service mode.
3. **Play back the alignment tape.**
4. **To enter Tracking center mode, press PLAY button in Play back mode. "TRACKING CENTER" will be displayed on the TV monitor.**
5. **Connect the oscilloscope to TP3002 on the Video Signal Process Section of the Main C.B.A. Use TP6205 as a trigger.**
6. **Loosen the Black Screw (D) and tighten it slightly. Set the H-Position Adjustment Driver into the Hole (A). Then slowly turn the fixture either clockwise or counterclockwise so that the envelope is at maximum.**

Fig. M7

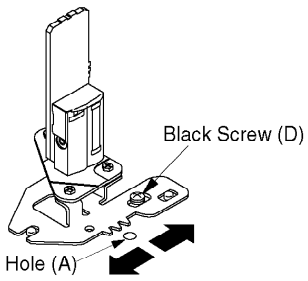

7. **Tighten Black Screw (D).**
8. **To release from Tracking center mode, press PLAY or STOP button.**

Note:

Old type of H-Position Adjustment Driver (VFK0136) can be used for this adjustment.

6.3. ELECTRICAL ADJUSTMENT

6.3.1. EVR (Electronic Variable Resister) ADJUSTMENT WITH THE REMOTE CONTROL

This unit has electronic technology using I2C Bus concept.The PG SHIFTER ADJUSTMENT is

adjusted by using " On Screen Display " and the remote control instead of adjusting mechanical controls (VR).

6.3.2. TEST EQUIPMENT

To do all of these electrical adjustments, the following equipment is required.

1. Dual-Trace Oscilloscope
Voltage Range: 0.001 V to 50 V/Div.
Frequency Range: DC to 50 MHz
Probes: 10:1, 1:1

2. Isolation Transformer (Variable)

3. VHS Alignment Tape (VFMS0003H6)

4. TV monitor

6.3.3. HOW TO READ THE ADJUSTMENT PROCEDURES

Fig.E1

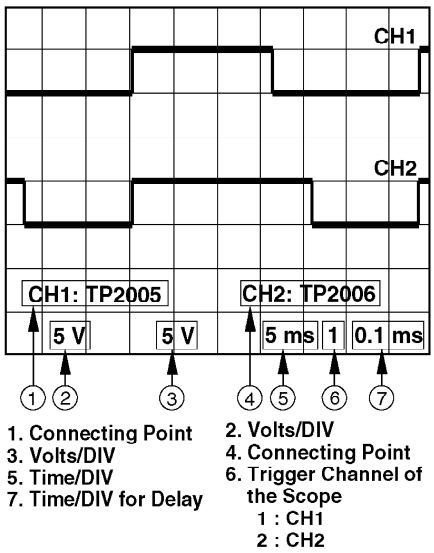

6.3.4. PG SHIFTER ADJUSTMENT

Purpose:
Determine the Video Head Switching Point during Playback.

Symptom of Misadjustment:
May cause Head Switching Noise and/or Vertical Jitter.

Test Point :
TP3001 (Main C.B.A.),
TP6205 (Main C.B.A.)

Specification:

T = 6 H±0.5 H (0.38 ms±0.03 ms)

Mode :

SP Playback

Equipment :

Oscilloscope,
VHS Alignment Tape (VFMS0003H6),
TV monitor

1. **Insert the VHS Alignment Tape. Then turn off the power. Enter service mode by pressing and holding FF and CH DOWN buttons on VCR together for more than 5 seconds in power off condition. The power comes on.**
2. **Playback in SP mode. Then, press 100 button on the remote to enter EVR PG SHIFTER ADJUSTMENT mode. PG ADJUSTMENT screen will appear on the TV Monitor.**

Fig. E2-1

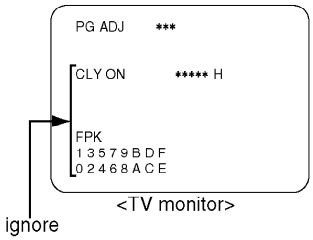

3. **Connect the channel-1 scope probe to TP3001 and the channel-2 scope probe to TP6205. Used TP6205 as a trigger**
4. **Adjust value so that the trailing edge of the head switching pulse is placed 6 H±0.5 H (0.38 ms±0.03 ms) before the start of the vertical sync pulse by pressing CH UP and CH DOWN buttons on the remote control.**

Fig. E2-2

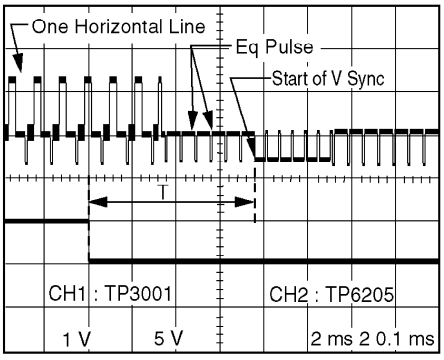

5. After adjustment is completed, press REC button on the remote control. Then " COMP " will appear on the TV monitor and adjusted value will be written to Memory IC (IC6005).

Fig.E2-3

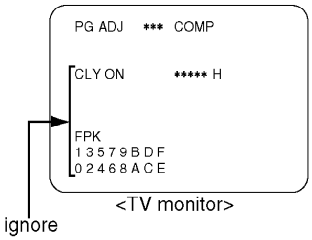

6. Press STOP button on the remote control to release from EVR PG SHIFTER ADJUSTMENT MODE.

6.4. TEST POINTS AND CONTROL LOCATION

Main C.B.A.

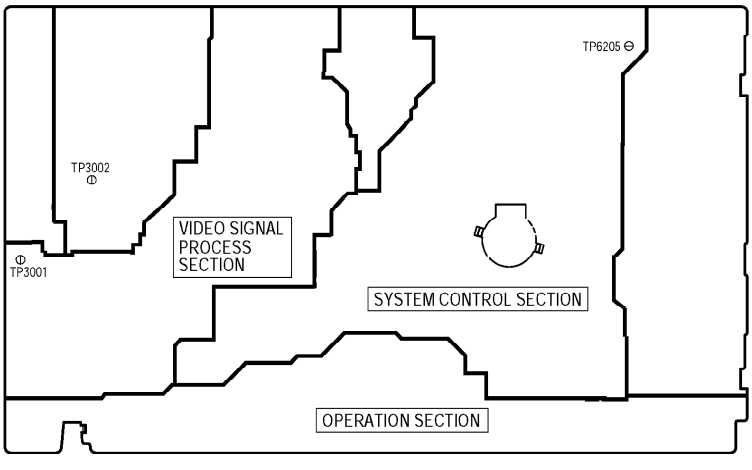

(Component Side)

FUNCTION OF IMPORTANT TEST POINTS	
TP3001	Video Signal to Jack
TP3002	REC/PB Video envelope signal
TP6205	Head SW.

Test Point Information

Ⓘ Test Point with a jumper wire across a hole in the P.C.B.

7. SCHEMATIC DIAGRAMS

7.1. SCHEMATIC DIAGRAM& CIRCUIT BOARD LAYOUT NOTES

7.2. MAIN SCHEMATIC DIAGRAMS

7.3. INTERCONNECTION SCHEMATIC DIAGRAM

7.4. SIGNAL WAVEFORMS

8. CIRCUIT BOARD LAYOUT

8.1. MAIN C.B.A.

9. BLOCK DIAGRAMS

9.1. OVERALL BLOCK DIAGRAM (Model: NV-SJ4130PN)

9.2. OVERALL BLOCK DIAGRAM (Model: NV-FJ6130PN)

10. EXPLODED VIEWS

10.1. MECHANISM (TOP) SECTION

❶ MECHANISM (TOP) SECTION

LUBRICATION POINTS
When the marked parts are replaced, apply the recommended lubricants or adhesive for better maintenance of the unit.

Mark	Kind of Lubricant	Availability	Part Number
△△△	Grease	Available from Factory	VFKS0081

Note: Parts with no Ref. No. in "EXPLODED VIEWS" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.

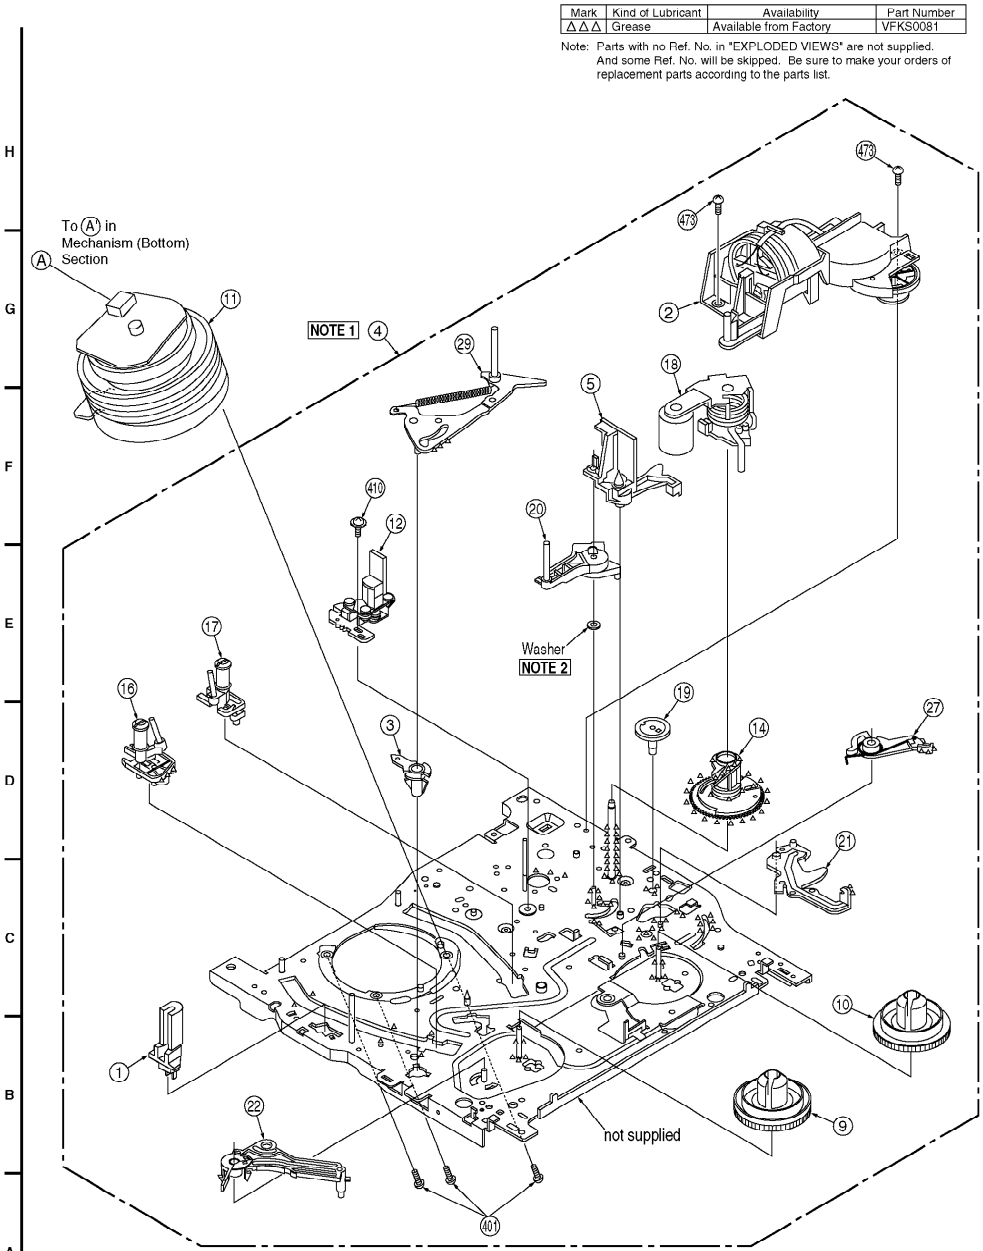

NOTE 1: The Mechanical Chassis Sub Ass'y (Ref. No. 4) consists of all the mechanical parts except the Cylinder Unit (Ref. No. 11) and the Cassette Up Ass'y (Ref. No. 61). After replacing the Mechanical Chassis Sub Ass'y, be sure to perform "TAPE INTERCHANGEABILITY ADJUSTMENT" in MECHANICAL ADJUSTMENT procedures.

NOTE 2: In early units, a washer is used. When servicing the washer or the P5 Arm Unit, replace only the P5 Arm Unit with a new one, and remove the washer.

10.2. MECHANISM (BOTTOM) SECTION

❷ MECHANISM (BOTTOM) SECTION

LUBRICATION POINTS
When the marked parts are replaced, apply the recommended lubricants or adhesive for better maintenance of the unit.

Mark	Kind of Lubricant	Availability	Part Number
△△△	Grease	Available from Factory	VFKS0081

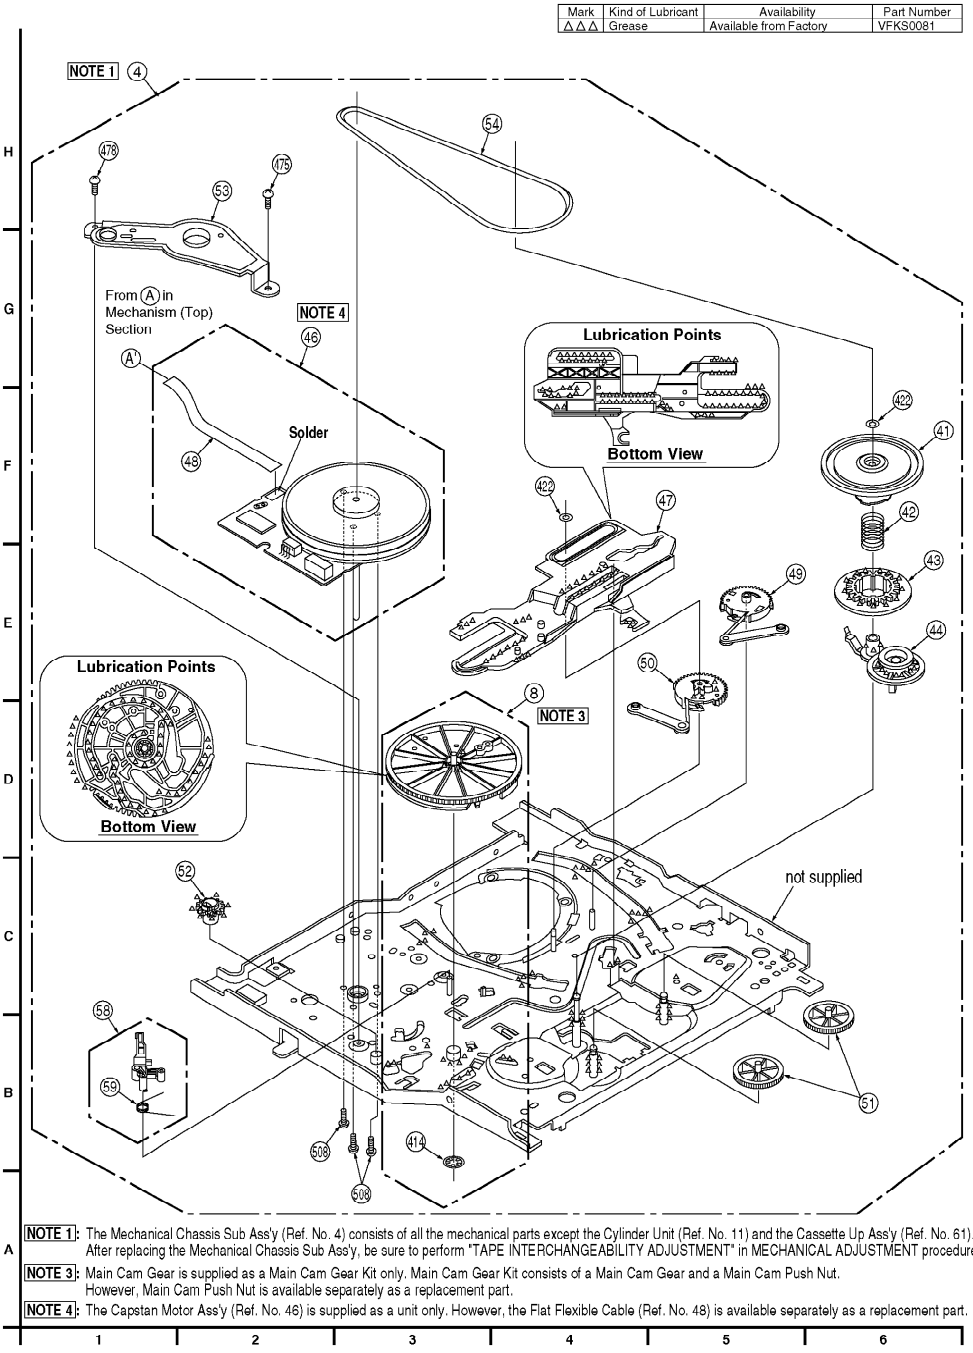

NOTE 1: The Mechanical Chassis Sub Ass'y (Ref. No. 4) consists of all the mechanical parts except the Cylinder Unit (Ref. No. 11) and the Cassette Up Ass'y (Ref. No. 61). After replacing the Mechanical Chassis Sub Ass'y, be sure to perform "TAPE INTERCHANGEABILITY ADJUSTMENT" in MECHANICAL ADJUSTMENT procedures.

NOTE 3: Main Cam Gear is supplied as a Main Cam Gear Kit only. Main Cam Gear Kit consists of a Main Cam Gear and a Main Cam Push Nut. However, Main Cam Push Nut is available separately as a replacement part.

NOTE 4: The Capstan Motor Ass'y (Ref. No. 46) is supplied as a unit only. However, the Flat Flexible Cable (Ref. No. 48) is available separately as a replacement part.

10.3. CASSETTE UP COMPARTMENT SECTION

❸ CASSETTE UP COMPARTMENT SECTION

LUBRICATION POINTS
When the marked parts are replaced, apply the recommended lubricants or adhesive for better maintenance of the unit.

Mark	Kind of Lubricant	Availability	Part Number
△△△	Grease	Available from Factory	VFKS0081

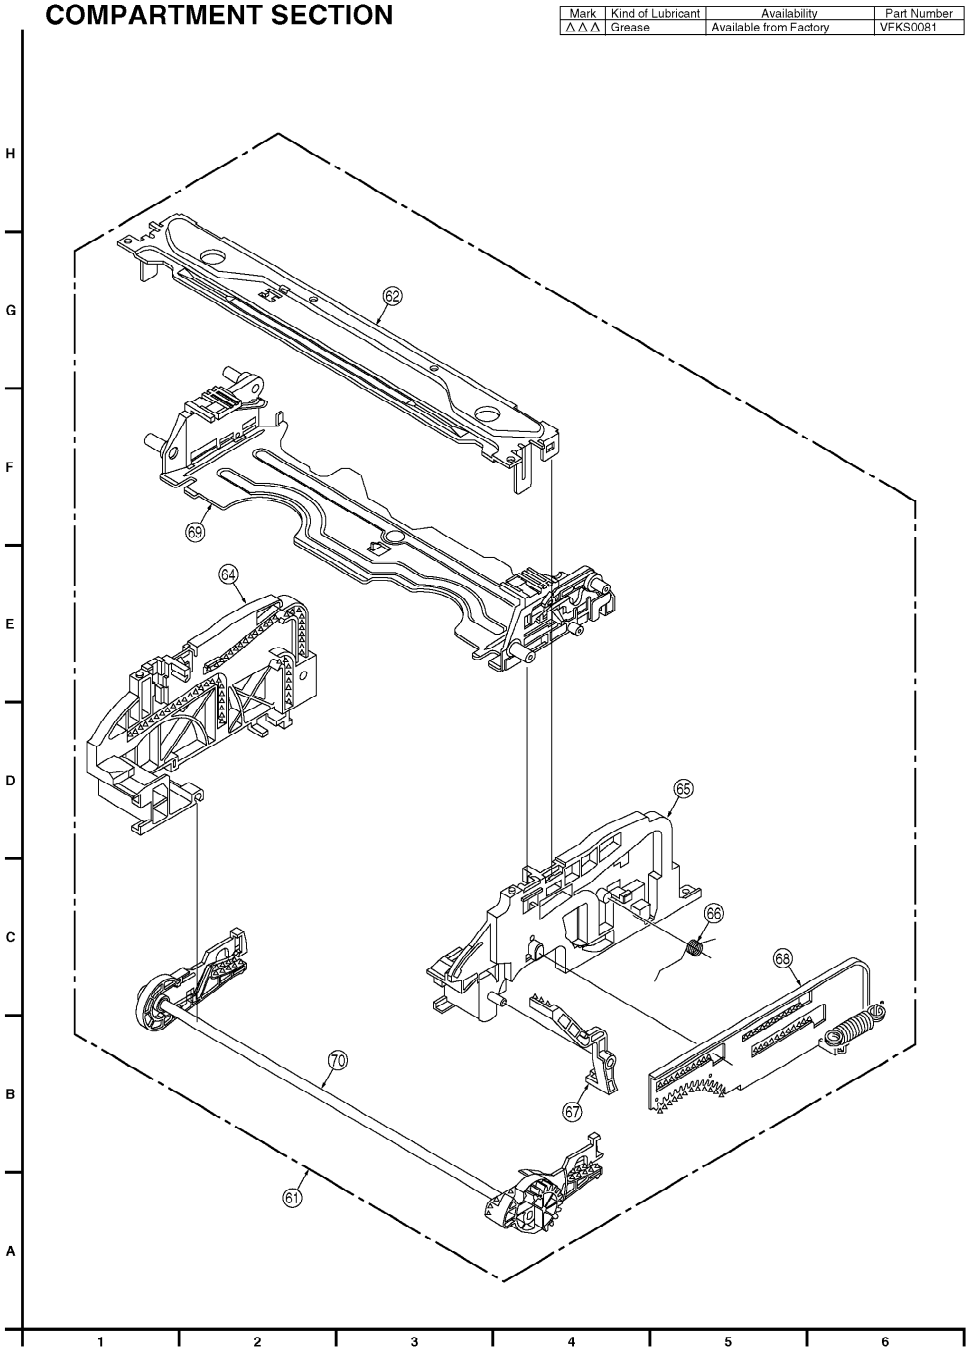

10.4. CHASSIS FRAME AND CASING PARTS SECTION

IMPORTANT SAFETY NOTICE
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

❹ CHASSIS FRAME AND CASING PARTS SECTION

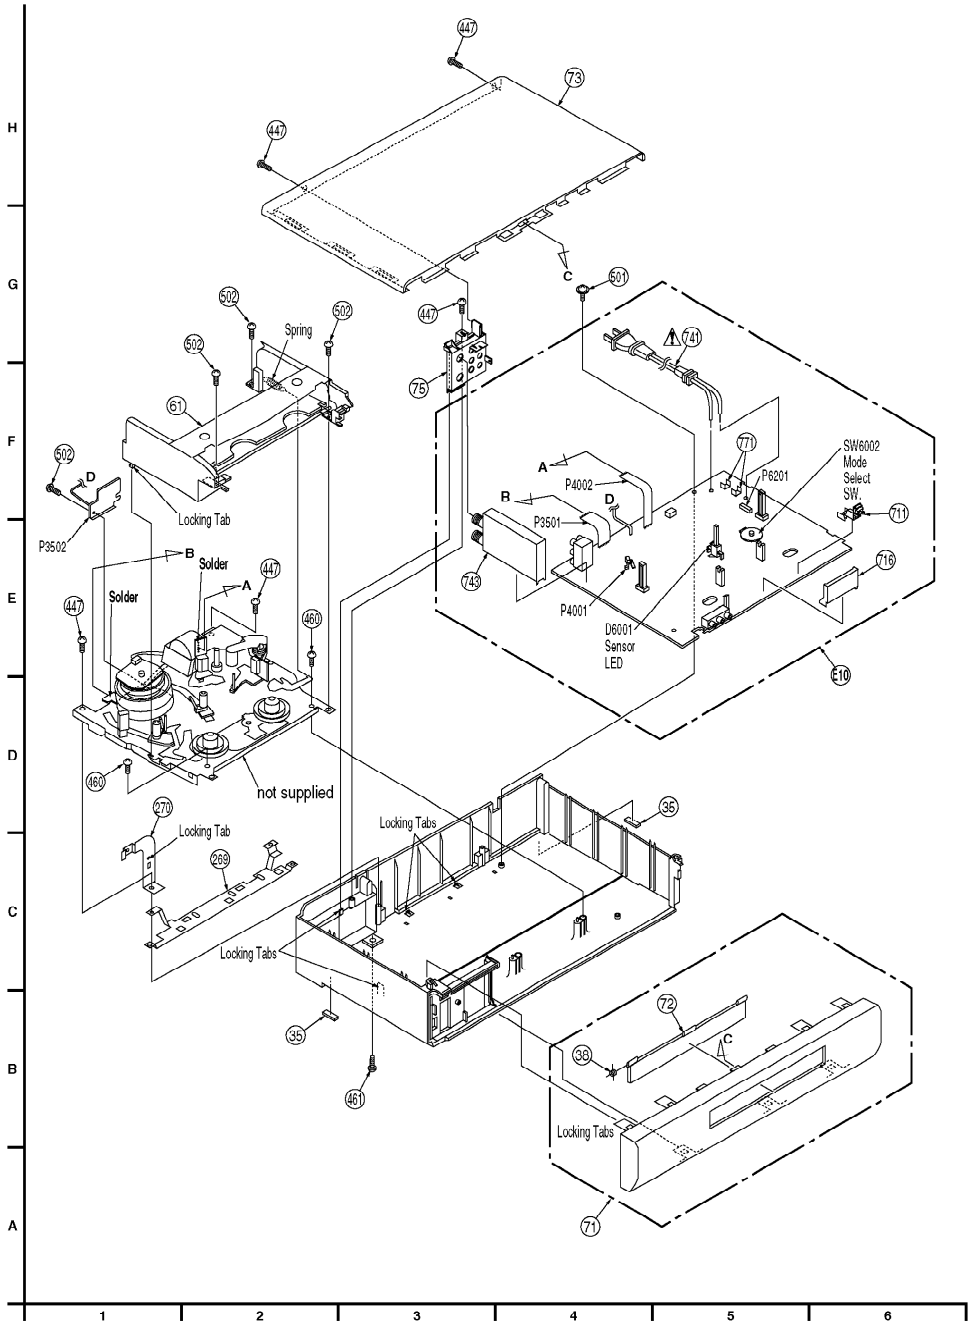

10.5. PACKING PARTS AND ACCESSORIES SECTION

❺ PACKING PARTS AND ACCESSORIES SECTION

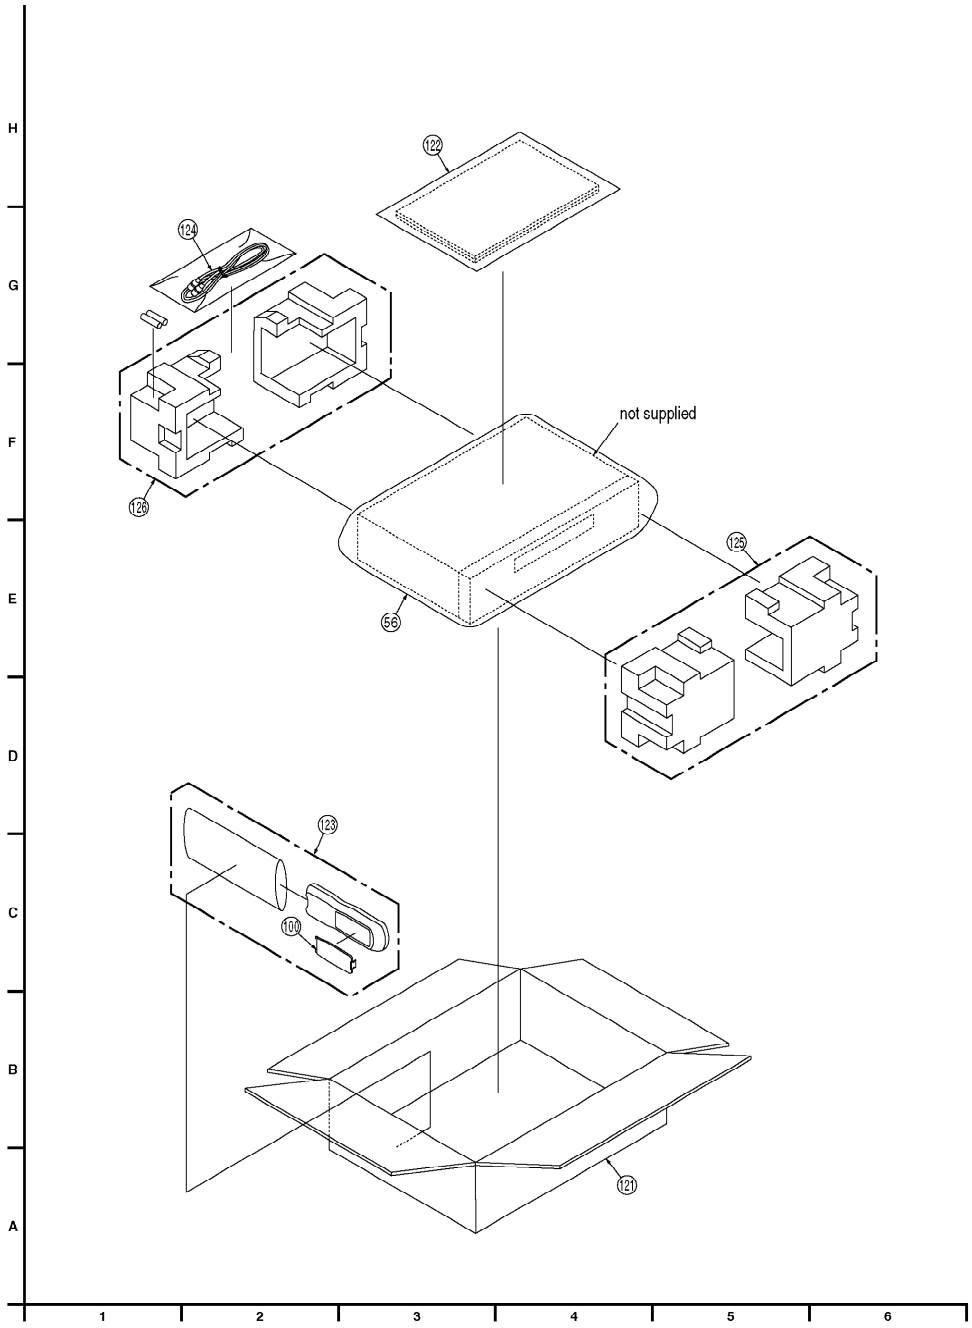

11. REPLACEMENT PARTS LISTS

BEFORE REPLACING PARTS, READ THE FOLLOWING:

11.1. REPLACEMENT NOTES

11.1.1. General Notes

1. Use only original replacement parts:

To maintain original function and reliability of repaired units, use

only original replacement parts which are listed with their part numbers in the parts list.

2. IMPORTANT SAFETY NOTICE
   Components identified by the sign ⚠ have special characteristics important for safety. When replacing any of these components, use only the specified parts.
3. SPECIAL NOTE
   All integrated circuits and many other semiconductor devices are electrostatically sensitive and therefore require the special handling techniques described under the "ELECTROSTATICALLY SENSITIVE (ES) DEVICES" section of this service manual.
4. Parts with no Ref. No. in "EXPLODED VIEWS" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
5. Parts different in shape or size may be used. However, only interchangeable parts will be supplied as service replacement parts.
6. All of parts are supplied from MKI.
7. Item numbers with capital letter E (Example: E10, E20, ...) in the Ref. No. column are shown in the exploded views.
8. Parts whose Ref. Nos. are the same are interchangeable as replacement parts. Any of these parts may be ordered and used as a replacement part.

11.1.2. Mechanical Replacement Notes

1. Section No. of parts shown in Exploded Views are indicated in the Remarks column.
2. The Mechanical Chassis Sub Ass'y (Ref. No. 4) consists of all the mechanical parts except the Cylinder Unit (Ref. No. 11) and the Cassette Up Ass'y (Ref. No. 61).
   After replacing the Mechanical Chassis Sub Ass'y, be sure to perform "TAPE INTERCHANGEABILITY ADJUSTMENT" in MECHANICAL ADJUSTMENT procedures.
3. In early units, a washer is used.

When servicing the washer or the P5 Arm Unit, replace only the P5 Arm Unit with a new one, and remove the washer.

4. **Main Cam Gear is supplied as a Main Cam Gear Kit (Ref. No. 8) only. Main Cam Gear Kit consists of a Main Cam Gear and a Main Cam Push Nut. However, Main Cam Push Nut is available separately as a replacement part.**
5. **The Capstan Motor Ass'y (Ref. No. 46) is supplied as a unit only. However, the Flat Flexible Cable (Ref. No. 48) is available separately as a replacement part.**
6. **The Infrared Remote Control Unit (Ref. No. 123) replacement part is available as a complete assembly unit only. Do not try to disassemble the Infrared Remote Control Unit. However, the battery cover is available separately as a replacement part.**
7. **Main Cam Push Nut (Ref. No. 414) is not reusable.**
   If removed, install a new one.

11.1.3. Electrical Replacement Notes

1. **Unless otherwise specified;**
   All resistors are in Ω, K = 1,000 Ω, M = 1,000 kΩ.
2. **Abbreviation**

RTL:
Retention Time Limited
This indicates that the retention time is limited for this item. After the discontinuation of this item in production, it will no longer be available.

NR:
Non Repairable Board Ass'y

MGF CHIP:
Metal Glaze Film Chip

C CHIP:
Ceramic Chip

COMPLX CMP:
Complex Component

W FLMPRF:

Wirewound Flameproof

C.B.A.:
Circuit Board Assembly

P.C.B.:
Printed Circuit Board

E.S.D.:
Electrostatically Sensitive Devices

3. When replacing 0 Ω resistor, a wire can be substituted for it.

4. Since the UHF/VHF TUNER/TV DEMODULATOR UNIT (Ref. No. 743) has already been pre-adjusted at the factory, do not try to adjust the UHF/VHF TUNER/TV DEMODULATOR UNIT. The UHF/ VHF TUNER/TV DEMODULATORUNIT replacement part is available as a complete assembly unit only.

5. EEP ROM IC (IC6005), MAIN C.B.A. replacement note:
After replacing EEP ROM IC (IC6005) or MAIN C.B.A., be sure to perform the "PG SHIFTER ADJUSTMENT" in ELECTRICAL ADJUSTMENT procedures.

6. Microcontroller IC (IC6001) and EEP ROM IC (IC6005) replacement note:
In early units, MN101D06FPK is used for Microcontroller IC (IC6001). In later units, MN101D09EPA is used for Microcontroller IC (IC6001).
Please note that only MN101D09EPA is supplied as a replacement part for Microcontroller IC (IC6001) and this can be used with both types of EEP ROM IC (IC6005).
When replacing EEP ROM IC (IC6005), be sure to confirm which type of Microcontroller IC (IC6001) is used on the unit you are servicing and install the proper part for EEP ROM IC (IC6005).

	Microcontroller IC (IC6001)	EEP ROM IC (IC6005)
Early Unit	MN101D06FPK	LSEQ0642
Later Unit	MN101D09EPA	KS24C011CS or AT24C01A10SI or C0ZBZ0000015 or C3EBCC000038 or KS24C011IS or M24C01-MN6

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
NV-SJ4130PN	A
NV-FJ6130PN	B

11.2. MECHANICAL REPLACEMENT PARTS LIST

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
NV-SJ4130PN	A
NV-FJ6130PN	B

MECHANICAL REPLACEMENT PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
1	VBSS0033	FULL ERASE HEAD	1
2	LSXK0094	MOTOR BLOCK UNIT	1
3	LSDB0045	TENSION ARM BOSS	1
4	LSXY0278	MECHANICAL CHASSIS SUB ASS'Y (A)	1,2
4	LSXY0279	MECHANICAL CHASSIS SUB ASS'Y (B)	1,2
5	LSMD0209	OPENER PIECE	1
8	VVGS0009	MAIN CAM GEAR KIT	2
9	LSDR0004	S REEL TABLE	1
10	LSDR0005	T REEL TABLE	1
11	LSEG0014	CYLINDER UNIT (A)	1
11	LSEG0015	CYLINDER UNIT (B)	1
12	VEHS0596	AUDIO CONTROL/ERASE HEAD UNIT (A)	1
12	VEHS0598	AUDIO CONTROL/ERASE HEAD UNIT (B)	1
14	LSDG0112	LIFT GEAR	1
16	VXDS0213	LOADING POST BASE-S UNIT	1
17	VXDS0214	LOADING POST BASE-T UNIT	1
18	LSXL0079	PINCH ARM UNIT	1
19	LSDG0110	INTERMEDIATE GEAR A	1
20	LSXL0078	P5 ARM UNIT	1
21	LSML0131	DRIVE RACK ARM	1
22	LSXL0077	TENSION CONTROL ARM UNIT	1
27	VXLS1130	T BRAKE UNIT	1
29	VXLS1129	TENSION ARM UNIT	1
35	LSKA0012	RUBBER FOOT	4
38	VMBS1161	CASSETTE DOOR SPRING	4
41	VXPS0389	CENTER CLUTCH UNIT	2
42	VMBS1151	CHANGING GEAR SPRING	2
43	LSDG0114	CHANGING GEAR	2
44	VXLS1091	IDLER ARM UNIT	2
46	LSEM0056	CAPSTAN MOTOR ASS'Y	2
47	LSMM0003	MAIN ROD	2
48	LSJW0027	FLAT FLEXIBLE CABLE W/OUT PLUG	2
49	VXLS1099	S LOADING ARM UNIT	2
50	VXLS1098	T LOADING ARM UNIT	2
51	LSDG0116	REEL GEAR	2
52	LSDG0111	INTERMEDIATE GEAR B	2
53	LSMA0532	SUPPORT ANGLE	2
54	LSDV0009	CAPSTAN BELT SQUARE,ELASTOMER 2MM	2
56	LSPF0056	SHEET,POLYETHYLENE	5

Ref. No.	Part No.	Part Name & Description	Remarks
58	LSXL0081	SS BRAKE ARM UNIT	2
59	LSMB0196	SS BRAKE SPRING	2
61	VXYS1347	CASSETTE UP ASS'Y	3,4
62	LSMA0352	TOP PLATE	3
64	LSMD0174	SIDE PLATE L	3
65	LSMD0173	SIDE PLATE R	3
66	LSMB0218	SUPPORT SPRING	3
67	LSML0096	OPENER LEVER	3
68	VXLS1111	DRIVE RACK UNIT	3
69	VXAS4423	HOLDER UNIT	3
70	VXLS1110	WIPER ARM UNIT	3
71	VYPS7126	FRONT PANEL ASS'Y (A)	4
71	VYPS7127	FRONT PANEL ASS'Y (B)	4
72	VYPS7128	CASSETTE DOOR-LID UNIT (A)	4
72	VYPS7129	CASSETTE DOOR-LID UNIT (B)	4
73	LSKM0766	TOP COVER	4
75	LSGP0244	REAR PANEL (A)	4
75	LSGP0243	REAR PANEL (B)	4
100	LSKF0322	BATTERY COVER	5
121	LSPG1260	PACKING CASE,PAPER (A)	5
121	LSPG1261	PACKING CASE,PAPER (B)	5
122	LSQF0530	FAN BAG	5
123	LSSQ0263	INFRARED REMOTE CONTROL UNIT (A)	5
123	LSSQ0264	INFRARED REMOTE CONTROL UNIT (B)	5
124	LSJA0372	VHF CONNECTING CABLE W/PLUG,0V	5
124	LSJA0274	VHF CONNECTING CABLE W/PLUG,0V	5
124	LSJA0328	VHF CONNECTING CABLE W/PLUG,0V	5
124	VJAS0212	VHF CONNECTING CABLE W/PLUG,0V	5
125	LSPN0209	FRONT CUSHION,STYROFOAM	5
126	LSPN0210	REAR CUSHION,STYROFOAM	5
269	LSSC0425	GROUNDING PLATE	4
270	LSSC0426	GROUNDING PLATE	4
401	VHDS0475	SCREW,STEEL	1
410	VHDS0498	SCREW W/WASHER,STEEL	1
414	VHNS0070	MAIN CAM PUSH NUT,STEEL	2
422	XWGV2D5G	WASHER,NYLON	2
447	VHDS0310	SCREW,STEEL	4
460	XTN4+12A	TAPPING SCREW,STEEL	4
461	VHDS0460	SCREW,STEEL	4
473	XYN26+C6	SCREW W/WASHER,STEEL	1
475	XTV26+5FJ	TAPPING SCREW,STEEL	2
478	VHDS0495	SCREW,STEEL	2
501	LSHD0074	SCREW,STEEL	4
502	LSHD0075	TAPPING SCREW,STEEL	4
508	XTB26+6J	TAPPING SCREW,STEEL	2
711	LSSZ0004	INFRARED RECEIVER UNIT	4
716	B3CKS0000001	LED DISPLAY PANEL	4
741	LSJA0360	AC CORD W/PLUG,AC 120V	4 ⚠
741	LSJA0358	AC CORD W/PLUG,AC 120V	4 ⚠
741	LSJA0359	AC CORD W/PLUG,AC 120V	4 ⚠
741	LSJA0361	AC CORD W/PLUG,AC 120V	4 ⚠
741	LSJA0348	AC CORD W/PLUG,AC 120V	4 ⚠
743	ENG56717G1	TUNER,UHF/VHF NR	4

Ref. No.	Part No.	Part Name & Description	Remarks
771	EYF52BC	FUSE HOLDER	4
E10	LSEP2006GA	MAIN C.B.A. (A)	4 RTL
E10	LSEP2006HA	MAIN C.B.A. (B)	4 RTL

SERVICE FIXTURES AND TOOLS

Ref. No.	Part No.	Part Name & Description	Remarks
	VFMS0003H6	VHS ALIGNMENT TAPE	
	VFKS0081	GREASE	
	VFK0329	POST ADJUSTMENT DRIVER	
	VFK27	HEAD CLEANING STICK	
	VFK0330	H-POSITION ADJUSTMENT DRIVER	

11.3. ELECTRICAL REPLACEMENT PARTS LIST

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
NV-SJ4130PN	A
NV-FJ6130PN	B

PRINTED CIRCUIT BOARD ASSEMBLY

Ref. No.	Part No.	Part Name & Description	Remarks
E10	LSEP2006GA	MAIN C.B.A. (A)	E.S.D. RTL
E10	LSEP2006HA	MAIN C.B.A. (B)	E.S.D. RTL

11.3.1. MAIN C.B.A.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
NV-SJ4130PN	A
NV-FJ6130PN	B

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC1001	0N3131-R.KT	IC, LINEAR	⚠
IC1001	PS2501-1-X	IC, LINEAR	⚠
IC1001	0N3131-S.KT	IC, LINEAR	⚠
IC1002	TA76431ASTP6	IC, LINEAR	
IC1002	C0DAEMZ00001	IC, LINEAR	
IC3001	NN13400A	IC, LINEAR	
IC3101	MN3885S	IC, LINEAR	
IC4151	C0JBAR000292	IC, CMOS STANDARD LOGIC (A)	E.S.D.
IC4151	CD4053BCM	IC, CMOS STANDARD LOGIC (A)	E.S.D.
IC4151	C0JBAR000338	IC, CMOS STANDARD LOGIC (A)	E.S.D.
IC4201	AN3663FBP-V	IC, LINEAR (B)	
IC6001	MN101D09EPA	IC, 8BIT MICROCONTROLLER *See Replacement Note	E.S.D.
IC6002	B3NAA0000049	PHOTO INTERRUPUTER	
IC6003	B3NAA0000049	PHOTO INTERRUPUTER	
IC6004	C0EBJ0000080	IC, CMOS STANDARD LOGIC	E.S.D.
IC6004	C0EBJ0000099	IC, CMOS STADNARD LOGIC	E.S.D.
IC6004	RN5VS47CA-TR	IC, CMOS STADNARD LOGIC	E.S.D.
IC6005	LSEQ0642	IC, 1K EEP ROM *See Replacement Note	E.S.D.
IC6005	KS24C011CS	IC, 1K EEP ROM *See Replacement Note	E.S.D.
IC6005	AT24C01A10SI	IC, 1K EEP ROM *See Replacement Note	E.S.D.
IC6005	C0ZBZ0000015	IC, 1K EEP ROM *See Replacement Note	E.S.D.
IC6005	C3EBCC000038	IC, 1K EEP ROM *See Replacement Note	E.S.D.
IC6005	KS24C011IS	IC, 1K EEP ROM *See Replacement Note	E.S.D.
IC6005	M24C01-MN6	IC, 1K EEP ROM *See Replacement Note	E.S.D.

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q1001	2SC4533LP.KT	TRANSISTOR SI NPN	⚠
Q1001	2SC4953LP.KT	TRANSISTOR SI NPN	⚠
Q1001	2SC5130LF608	TRANSISTOR SI NPN	⚠
Q1002	2SD1458	TRANSISTOR SI NPN	
Q1002	2SD225900A	TRANSISTOR SI NPN	
Q1051	2SD2159-T	TRANSISTOR SI NPN	
Q1051	2SD1581-T	TRANSISTOR SI NPN	
Q1052	2SD601A-RS	TRANSISTOR SI NPN CHIP	
Q1052	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q1053	2SD235800A	TRANSISTOR SI NPN CHIP	
Q1053	B1AAQB000002	TRANSISTOR SI NPN CHIP	
Q3001	2SB0709A0L	TRANSISTOR SI PNP CHIP	
Q3001	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q3002	2SB709A-RS	TRANSISTOR SI PNP CHIP	
Q3002	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q3003	2SD601A-RS	TRANSISTOR SI NPN CHIP	
Q3003	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q4001	2SB1218ARS	TRANSISTOR SI PNP CHIP	
Q4001	B1ADCF000063	TRANSISTOR SI PNP CHIP	
Q4002	2SD1819A-RS	TRANSISTOR SI NPN CHIP	
Q4003	2SD1819A-RS	TRANSISTOR SI NPN CHIP	
Q4101	2SD601A-RS	TRANSISTOR SI NPN CHIP	
Q4101	B1ABCF000011	TRANSISTOR SI NPN CHIP	
Q4151	UNR521200L	TRANSISTOR SI NPN CHIP (A)	
Q4151	B1GBCFLL0012	TRANSISTOR SI NPN CHIP (A)	

Ref. No.	Part No.	Part Name & Description	Remarks
Q4151	MUN5212T1	TRANSISTOR SI NPN CHIP (A)	
Q6001	2SD1819A-RS	TRANSISTOR SI NPN CHIP	
Q6001	B1ABCF000020	TRANSISTOR SI NPN CHIP	
Q6002	2SB709A-RS	TRANSISTOR SI PNP CHIP	
Q6002	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q6003	2SD1819A-RS	TRANSISTOR SI NPN CHIP	
Q6003	B1ABCF000020	TRANSISTOR SI NPN CHIP	
Q6005	2SB709A-RS	TRANSISTOR SI PNP CHIP	
Q6005	B1ADCF000001	TRANSISTOR SI PNP CHIP	
Q6006	2SD1819A-RS	TRANSISTOR SI NPN CHIP	
Q6006	B1ABCF000020	TRANSISTOR SI NPN CHIP	
Q6009	VEKS5707	PHOTO SENSOR UNIT	
Q6010	VEKS5707	PHOTO SENSOR UNIT	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D1001	DB105G	DIODE SI	⚠
D1001	B0EBKR000003	DIODE SI	⚠
D1001	B0EBKR000020	DIODE SI	⚠
D1002	B0HAHP000014	DIODE SI	
D1002	B0HAJP000007	DIODE SI	
D1002	B0HAMP000061	DIODE SI	
D1003	B0HAHP000014	DIODE SI	
D1003	B0HAJP000007	DIODE SI	
D1003	B0HAMP000061	DIODE SI	
D1005	B0HAHP000014	DIODE SI	
D1005	B0HAJP000007	DIODE SI	
D1005	B0HAMP000061	DIODE SI	
D1006	ERB32-01L3	DIODE SI	
D1006	B0HAML000013	DIODE SI	
D1006	B0HAML000014	DIODE SI	
D1006	RGP15GL-5008	DIODE SI	
D1008	ERB81-004V1	DIODE SI	
D1008	B0JAME000049	DIODE SI	
D1008	B0JANE000011	DIODE SI	
D1009	B0JCME000028	DIODE SI	
D1009	B0JCMD000006	DIODE SI	
D1009	B0JCMD000014	DIODE SI	
D1009	MA2YD2300L	DIODE SI	
D1009	SFPJ-53	DIODE SI	
D1015	MA2180LA	DIODE ZENER 18V	⚠
D1015	1N4746A-T	DIODE ZENER 18V	⚠
D1015	1N4746ARL	DIODE ZENER 18V	⚠
D1016	MA2C165001VT	DIODE SI	
D1016	B0AACK000004	DIODE SI	
D1016	1SS119	DIODE SI	
D1017	B0AAML000001	DIODE SI	
D1017	ERA15-01V3	DIODE SI	
D1051	MA4110N-H	DIODE ZENER 11V	
D3006	MAZ40510MF	DIODE ZENER 5.1V	
D3006	HZS5C2TD	DIODE ZENER 5.1V	
D3006	HZS5C3TD	DIODE ZENER 5.1V	

Ref. No.	Part No.	Part Name & Description	Remarks
D3007	MAZ40510MF	DIODE ZENER 5.1V	
D3007	HZS5C2TD	DIODE ZENER 5.1V	
D3007	HZS5C3TD	DIODE ZENER 5.1V	
D4209	MA2C165001VT	DIODE SI (B)	
D4209	B0AACK000004	DIODE SI (B)	
D4209	1SS119	DIODE SI (B)	
D6001	VEKS5708	SENSOR LED UNIT	
D6003	MA2C165001VT	DIODE SI	
D6003	B0AACK000004	DIODE SI	
D6003	1SS119	DIODE SI	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R1001	VRESC2TK275	CARBON 1/2W 2.7M	⚠
R1001	VRESC2TK275C	CARBON 1/2W 2.7M	⚠
R1001	VRESC2TK275T	CARBON 1/2W 2.7M	⚠
R1003	D0AF334JA038	CARBON 1/2W 330K	
R1004	ERG2SJ333H	METAL OXIDE 2W 33K	
R1005	ERG1SJ560P	METAL OXIDE 1W 56	
R1006	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R1007	ERDS2TJ101	CARBON 1/4W 100	
R1008	ERDS2TJ392	CARBON 1/4W 3.9K	
R1010	ERD25FJ100P	CARBON 1/4W 10	⚠
R1010	ERD25FPJ100P	CARBON 1/4W 10	⚠
R1010	VRESF4FJ100P	CARBON 1/4W 10	⚠
R1014	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R1015	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R1016	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R1017	D1BD2431A016	MGF CHIP 2.43K	
R1018	D0HD222ZA002	MGF CHIP 2.2K	
R1019	ERDS2T0	CARBON 1/4W 0	
R1025	ERDS2TJ300	CARBON 1/2W 30	
R1026	ERDS2TJ300	CARBON 1/2W 30	
R1051	ERJ6GEYJ122V	MGF CHIP 1/10W 1.2K	
R1052	ERDS2TJ153	CARBON 1/4W 15K	
R1053	ERDS2TJ153	CARBON 1/4W 15K	
R1057	ERDS2TJ331	CARBON 1/4W 330	
R1058	ERDS2TJ104	CARBON 1/4W 100K	
R3001	ERJ6GEYJ750V	MGF CHIP 1/10W 75	
R3002	ERDS2TJ561	CARBON 1/4W 560	
R3003	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R3004	ERJ6GEYJ750V	MGF CHIP 1/10W 75	
R3006	ERDS2TJ152	CARBON 1/4W 1.5K	
R3007	ERDS2TJ152	CARBON 1/4W 1.5K	
R3008	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R3009	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R3022	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K	
R3023	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R3027	ERJ6GEYJ821V	MGF CHIP 1/10W 820	
R3029	ERJ6GEYJ125V	MGF CHIP 1/10W 1.2M	
R3031	ERJ6GEYJ474V	MGF CHIP 1/10W 470K	
R3033	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	

Ref. No.	Part No.	Part Name & Description	Remarks
R3034	ERJ6GEYJ121V	MGF CHIP 1/10W 120	
R3035	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R3036	ERJ6GEYJ122V	MGF CHIP 1/10W 1.2K	
R3041	ERJ6GEYJ750V	MGF CHIP 1/10W 75	
R3301	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R3302	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R3305	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K	
R4001	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R4002	ERJ6GEYJ334V	MGF CHIP 1/10W 330K	
R4003	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R4004	ERJ6GEYJ333V	MGF CHIP 1/10W 33K	
R4005	ERJ6GEYJ225V	MGF CHIP 1/10W 2.2M	
R4006	ERJ6GEYJ681V	MGF CHIP 1/10W 680	
R4007	ERJ6GEYJ821V	MGF CHIP 1/10W 820	
R4008	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R4009	ERJ6GEYJ473V	MGF CHIP 1/10W 47K (A)	
R4010	ERJ6GEYJ473V	MGF CHIP 1/10W 47K (A)	
R4010	ERJ6GEYJ103V	MGF CHIP 1/10W 10K (B)	
R4011	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R4012	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R4013	ERJ6GEYJ331V	MGF CHIP 1/10W 330 (A)	
R4014	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R4015	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R4017	ERJ6GEYJ101V	MGF CHIP 1/10W 100 (A)	
R4017	ERJ6GEYJ102V	MGF CHIP 1/10W 1K (B)	
R4018	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K (A)	
R4028	ERJ6GEY0R00V	MGF CHIP 1/10W 0	
R4102	ERJ6GEYJ333V	MGF CHIP 1/10W 33K	
R4103	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R4151	ERJ6GEYJ101V	MGF CHIP 1/10W 100 (A)	
R4152	ERJ6GEYJ101V	MGF CHIP 1/10W 100 (A)	
R4153	ERJ6GEYJ104V	MGF CHIP 1/10W 100K (A)	
R4154	ERJ6GEYJ104V	MGF CHIP 1/10W 100K (A)	
R4155	ERJ6GEYJ104V	MGF CHIP 1/10W 100K (A)	
R4156	ERJ6GEYJ104V	MGF CHIP 1/10W 100K (A)	
R4157	ERJ6GEYJ104V	MGF CHIP 1/10W 100K (A)	
R4158	ERJ6GEYJ104V	MGF CHIP 1/10W 100K (A)	
R4161	ERJ6GEYJ223V	MGF CHIP 1/10W 22K (A)	
R4201	ERJ6GEYJ473V	MGF CHIP 1/10W 47K (B)	
R4202	ERJ6GEYJ473V	MGF CHIP 1/10W 47K (B)	
R4203	ERJ6GEYJ822V	MGF CHIP 1/10W 8.2K (B)	
R4204	ERJ6GEYJ822V	MGF CHIP 1/10W 8.2K (B)	
R4205	ERJ6GEYJ473V	MGF CHIP 1/10W 47K (B)	
R4206	ERJ6GEYJ473V	MGF CHIP 1/10W 47K (B)	
R4207	ERJ6GEYJ822V	MGF CHIP 1/10W 8.2K (B)	
R4208	ERJ6GEYJ822V	MGF CHIP 1/10W 8.2K (B)	
R4209	ERJ6GEYJ102V	MGF CHIP 1/10W 1K (B)	
R4210	ERJ6GEYJ102V	MGF CHIP 1/10W 1K (B)	
R4213	ERJ6GEYJ103V	MGF CHIP 1/10W 10K (B)	
R4214	ERJ6GEYJ103V	MGF CHIP 1/10W 10K (B)	
R4218	ERJ6GEYJ102V	MGF CHIP 1/10W 1K (B)	
R4223	ERJ6GEYJ103V	MGF CHIP 1/10W 10K (B)	
R4224	ERJ6GEYJ333V	MGF CHIP 1/10W 33K (B)	
R4225	ERJ6GEYJ103V	MGF CHIP 1/10W 10K (B)	

Ref. No.	Part No.	Part Name & Description	Remarks
R4226	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K (B)	
R4228	ERJ6GEYJ103V	MGF CHIP 1/10W 10K (B)	
R4453	ERJ6GEYJ333V	MGF CHIP 1/10W 33K (B)	
R4455	ERJ6GEYJ152V	MGF CHIP 1/10W 1.5K (B)	
R6001	ERDS2TJ101	CARBON 1/4W 100	
R6003	ERJ6GEYJ222V	MGF CHIP 1/10W 2.2K	
R6005	ERJ6GEYJ563V	MGF CHIP 1/10W 56K	
R6006	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6007	ERJ6GEYJ272V	MGF CHIP 1/10W 2.7K	
R6008	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6010	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6012	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6019	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R6024	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6026	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6027	ERJ6GEYJ101V	MGF CHIP 1/10W 100	
R6028	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6029	ERJ6GEYJ561V	MGF CHIP 1/10W 560	
R6030	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6033	ERDS2TJ681	CARBON 1/4W 680	
R6037	ERJ6GEYJ391V	MGF CHIP 1/10W 390	
R6052	ERJ6GEYJ472V	MGF CHIP 1/10W 4.7K	
R6057	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6059	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6060	ERJ6GEYJ105V	MGF CHIP 1/10W 1M	
R6062	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R6063	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R6064	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	
R6066	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R6069	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R6070	ERJ6GEYJ104V	MGF CHIP 1/10W 100K	
R6071	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6072	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6073	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R6074	ERDS2TJ272	CARBON 1/4W 2.7K	
R6075	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6078	ERJ6GEYJ221V	MGF CHIP 1/10W 220	
R6080	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6082	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6085	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6086	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6087	ERJ6GEYJ223V	MGF CHIP 1/10W 22K	
R6109	ERJ6GEYJ183V	MGF CHIP 1/10W 18K	
R6110	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6115	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6116	ERJ6GEYJ102V	MGF CHIP 1/10W 1K	
R6202	ERJ6GEYJ274V	MGF CHIP 1/10W 270K	
R6203	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R6204	ERJ6GEYJ334V	MGF CHIP 1/10W 330K	
R6205	ERJ6GEYJ473V	MGF CHIP 1/10W 47K	
R6228	ERJ6GEYJ122V	MGF CHIP 1/10W 1.2K	
R6231	ERJ6GEYJ683V	MGF CHIP 1/10W 68K	
R6232	ERJ6GEYJ682V	MGF CHIP 1/10W 6.8K	
R6233	ERJ6GEYJ153V	MGF CHIP 1/10W 15K	

Ref. No.	Part No.	Part Name & Description	Remarks
R6236	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6237	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6238	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6239	ERJ6GEYJ562V	MGF CHIP 1/10W 5.6K	
R6301	ERJ6GEYJ121V	MGF CHIP 1/10W 120	
R6302	ERDS2TJ3R3	CARBON 1/4W 3.3	
R6303	ERDS2TJ470	CARBON 1/4W 47	
R6310	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6311	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R6313	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6314	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R6315	ERJ6GEYJ123V	MGF CHIP 1/10W 12K	
R6316	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6317	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R6319	ERJ6GEYJ182V	MGF CHIP 1/10W 1.8K	
R6320	ERJ6GEYJ392V	MGF CHIP 1/10W 3.9K	
R6321	ERJ6GEYJ123V	MGF CHIP 1/10W 12K	
R6521	ERJ6GEYJ103V	MGF CHIP 1/10W 10K	
R7001	ERJ6GEYJ473V	MGF CHIP 1/10W 47K (A)	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C1001	ECKATS103MF	CERAMIC 250V 0.01UF	⚠
C1001	ECKETS103MF	CERAMIC 125V 0.01UF	⚠
C1001	VCKST3G103MY	CERAMIC 250V 0.01UF	⚠
C1001	VCKSU3D103MY	C CHIP 125V 0.01UF	⚠
C1002	ECKATS332ME8	CERAMIC 250V 3300PF	⚠
C1002	ECKDNB332ME8	CERAMIC 125V 3300PF	⚠
C1002	ECKETS332ME8	CERAMIC 125V 3300PF	⚠
C1002	VCKST3G332MX	CERAMIC 250V 3300PF	⚠
C1002	VCKSU3D332MX	CERAMIC 125V 3300PF	⚠
C1003	ECKATS332ME8	CERAMIC 250V 3300PF	⚠
C1003	ECKDNB332ME8	CERAMIC 125V 3300PF	⚠
C1003	ECKETS332ME8	CERAMIC 125V 3300PF	⚠
C1003	VCKST3G332MX	CERAMIC 250V 3300PF	⚠
C1003	VCKSU3D332MX	CERAMIC 125V 3300PF	⚠
C1004	ECEA2DU820YE	ELECTROLYTIC 200V 82UF	⚠
C1004	F2A2D8200001	ELECTROLYTIC 220V 82UF	⚠
C1004	F2A2D8200003	ELECTROLYTIC 200V 82UF	⚠
C1004	VCESR2D820XE	ELECTROLYTIC 200V 82UF	⚠
C1005	ECA2DHG4R7B	ELECTROLYTIC 200V 4.7UF	
C1006	ECKR2H221KB5	CERAMIC 500V 220PF	
C1007	ECJ2VB1C224K	C CHIP 16V 0.22UF	
C1009	VCYSBRE183KX	CERAMIC 25V 0.018UF	
C1010	ECJ2VC1H101J	C CHIP 50V 100PF	
C1011	ECA1HHG4R7I	ELECTROLYTIC 50V 4.7UF	
C1012	ECEA1PEE331	ELECTROLYTIC 18V 330UF	
C1013	ECA1EM331B	ELECTROLYTIC 25V 330UF	
C1016	ECEA1PEE331	ELECTROLYTIC 18V 330UF	
C1017	ECA0JM102B	ELECTROLYTIC 6.3V 1000UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C1018	ECJ2VB1E104K	C CHIP 25V 0.1UF	
C1019	ECA0JM471	ELECTROLYTIC 6.3V 470UF	
C1027	ECKATS103MF	CERAMIC 250V 0.01UF	⚠
C1027	ECKETS103MF	CERAMIC 125V 0.01UF	⚠
C1027	VCKST3G103MY	CERAMIC 250V 0.01UF	⚠
C1027	VCKSU3D103MY	CERAMIC 125V 0.01UF	⚠
C1029	ECJ2VC1H101J	C CHIP 50V 100PF	
C1030	VCYSBRE183KX	CERAMIC 25V 0.018UF	
C1051	ECEA1HKAR47	ELECTROLYTIC 50V 0.47UF	
C1052	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C1058	ECEA0JEE101	ELECTROLYTIC 6.3V 100UF	
C1059	ECEA1CKA220	ELECTROLYTIC 16V 22UF	
C1060	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C3001	ECA0JM471	ELECTROLYTIC 6.3V 470UF	
C3003	ECEA1CKA470	ELECTROLYTIC 16V 47UF	
C3004	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3014	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3015	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3017	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C3018	ECJ2VC1H181J	C CHIP 50V 180PF	
C3019	ECJ2VC1H560J	C CHIP 50V 56PF	
C3021	ECJ2VF1C224Z	C CHIP 16V 0.22UF	
C3022	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3023	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C3024	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C3025	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3026	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3027	ECJ2VF1C224Z	C CHIP 16V 0.22UF	
C3028	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C3029	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3030	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C3031	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C3032	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C3033	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C3034	ECJ2VF1C224Z	C CHIP 16V 0.22UF	
C3035	ECJ2VC1H680J	C CHIP 50V 68PF	
C3036	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3037	ECEA0JKA220	ELECTROLYTIC 6.3V 22UF	
C3038	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C3039	ECJ2VB1H822K	C CHIP 50V 8200PF	
C3043	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3044	ECEA1HKAR47	ELECTROLYTIC 50V 0.47UF	
C3045	ECJ2VF1C474Z	C CHIP 16V 0.47UF	
C3047	ECJ2VC1H181J	C CHIP 50V 180PF	
C3048	ECJ2VC1H560J	C CHIP 50V 56PF	
C3049	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3050	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3051	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C3052	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3053	ECEA1HKAR47	ELECTROLYTIC 50V 0.47UF	
C3054	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF	
C3055	ECJ2VB1H392K	C CHIP 50V 3900PF	
C3056	ECEA1HKA010	ELECTROLYTIC 50V 1UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C3062	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3101	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C3102	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3104	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3105	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3106	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C3108	ECJ2VB1H102K	C CHIP 50V 1000PF	
C3109	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C3302	ECEA1HKAR47	ELECTROLYTIC 50V 0.47UF	
C3303	ECJ2VC1H121J	C CHIP 50V 120PF	
C3306	ECEA1HKAR47	ELECTROLYTIC 50V 0.47UF	
C3308	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3501	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3502	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3503	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3504	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3505	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3506	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3507	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3508	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3514	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C3515	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C3517	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3518	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C3519	ECJ2VB1H102K	C CHIP 50V 1000PF	
C4001	ECJ2VF1C224Z	C CHIP 16V 0.22UF	
C4002	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4003	ECJ2VB1H272K	C CHIP 50V 2700PF	
C4004	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C4005	ECEA0JKA220	ELECTROLYTIC 6.3V 22UF	
C4006	ECJ2VB1H102K	C CHIP 50V 1000PF	
C4007	ECEA0JKA220	ELECTROLYTIC 6.3V 22UF	
C4008	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF	
C4009	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4010	ECJ2VB1E273K	C CHIP 25V 0.027UF	
C4011	ECJ2VB1H822K	C CHIP 50V 8200PF	
C4012	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4013	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C4014	ECEA1HKA010	ELECTROLYTIC 50V 1UF	
C4017	ECJ2VB1H103K	C CHIP 50V 0.01UF (B)	
C4018	ECEA1HKA010	ELECTROLYTIC 50V 1UF (A)	
C4102	ECQB1562JF	POLYESTER 100V 5600PF	
C4103	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C4104	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C4106	ECEA1CKA220	ELECTROLYTIC 16V 22UF	
C4151	ECEA1HKA010	ELECTROLYTIC 50V 1UF (A)	
C4152	ECEA1HKA010	ELECTROLYTIC 50V 1UF (A)	
C4153	ECEA1HKA010	ELECTROLYTIC 50V 1UF (A)	
C4154	ECEA1CKA101	ELECTROLYTIC 16V 100UF (A)	
C4155	ECJ2VF1E104Z	C CHIP 25V 0.1UF (A)	
C4201	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF (B)	
C4202	ECEA1EKA4R7	ELECTROLYTIC 25V 4.7UF (B)	
C4203	ECEA0JKA330	ELECTROLYTIC 6.3V 33UF (B)	
C4204	ECEA0JKA330	ELECTROLYTIC 6.3V 33UF (B)	

Ref. No.	Part No.	Part Name & Description	Remarks
C4205	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4206	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4207	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4208	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4209	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4210	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4211	ECJ2VB1H153K	C CHIP 50V 0.015UF (B)	
C4212	ECJ2VB1H153K	C CHIP 50V 0.015UF (B)	
C4213	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4214	ECEA1CKA101	ELECTROLYTIC 16V 100UF (B)	
C4216	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4217	ECEA0JKA220	ELECTROLYTIC 6.3V 22UF (B)	
C4218	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4219	ECEA1HKA010	ELECTROLYTIC 50V 1UF (B)	
C4227	ECJ2VF1C224Z	C CHIP 16V 0.22UF (B)	
C4229	ECJ2VF1H103Z	C CHIP 50V 0.01UF (B)	
C4230	ECEA0JKA470	ELECTROLYTIC 6.3V 47UF (B)	
C4451	ECJ2VB1H103K	C CHIP 50V 0.01UF (B)	
C4452	ECJ2VB1H103K	C CHIP 50V 0.01UF (B)	
C4455	ECJ2VB1E104K	C CHIP 25V 0.1UF (B)	
C4456	ECJ2VB1E104K	C CHIP 25V 0.1UF (B)	
C4459	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF (B)	
C4901	ECEA1HKA010	ELECTROLYTIC 50V 1UF (B)	
C4902	ECEA1HKA2R2	ELECTROLYTIC 50V 2.2UF (B)	
C4903	ECEA1HKA3R3	ELECTROLYTIC 50V 3.3UF (B)	
C4904	ECEA1HKA3R3	ELECTROLYTIC 50V 3.3UF (B)	
C4905	ECEA1CKA100	ELECTROLYTIC 16V 10UF (B)	
C4906	ECEA1HKA010	ELECTROLYTIC 50V 1UF (B)	
C4911	ECJ2VB1E223K	C CHIP 25V 0.022UF (B)	
C4912	ECJ2VB1E104K	C CHIP 25V 0.1UF (B)	
C4913	ECJ2VB1H103K	C CHIP 50V 0.01UF (B)	
C4917	ECJ2VB1E104K	C CHIP 25V 0.1UF (B)	
C4918	ECJ2VB1E104K	C CHIP 25V 0.1UF (B)	
C4919	ECJ2VB1E104K	C CHIP 25V 0.1UF (B)	
C4920	ECJ2VB1E223K	C CHIP 25V 0.022UF (B)	
C6001	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C6003	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C6005	ECJ2VC1H100C	C CHIP 50V 10PF	
C6006	ECJ2VC1H090C	C CHIP 50V 9PF	
C6019	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C6021	ECJ2VF1H103Z	C CHIP 50V 0.01UF	
C6026	ECJ2VB1H102K	C CHIP 50V 1000PF	
C6027	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C6033	ECJ2VF1H104Z	C CHIP 50V 0.1UF	
C6201	ECJ2VB1H332K	C CHIP 50V 3300PF	
C6202	ECJ2VB1H102K	C CHIP 50V 1000PF	
C6203	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C6204	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C6217	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C6218	ECEA1CKA100	ELECTROLYTIC 16V 10UF	
C6221	ECEA0JKA220	ELECTROLYTIC 6.3V 22UF	
C6223	ECJ2VB1H103K	C CHIP 50V 0.01UF	
C6224	VCESAM0J331I	ELECTROLYTIC 6.3V 330UF	
C6228	ECJ2VF1E104Z	C CHIP 25V 0.1UF	

Ref. No.	Part No.	Part Name & Description	Remarks
C6231	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C6232	ECA1HM470I	ELECTROLYTIC 50V 47UF	
C6233	ECEA1CKA470	ELECTROLYTIC 16V 47UF	
C6302	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C6303	ECJ2VF1E104Z	C CHIP 25V 0.1UF	
C6304	VCESAM0J331I	ELECTROLYTIC 6.3V 330UF	
C6307	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C7001	ECEA0JKA101	ELECTROLYTIC 6.3V 100UF	
C7005	ECJ2VB1E183K	C CHIP 25V 0.018UF (A)	
C7010	ECJ2VB1H102K	C CHIP 50V 1000PF	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L1001	ELF15N005A	LINE FILTER 0.5A 18MH	⚠
L1001	ELF18D290A	LINE FILTER 0.5A 18MH	⚠
L1001	G0B183D00001	LINE FILTER 0.5A 18MH	⚠
L1001	J0HBLD000001	LINE FILTER 0.5A 18MH	⚠
L1001	VLQS0167	LINE FILTER 0.5A 18MH	⚠
L1001	VLQS0170	LINE FILTER 0.6A 18MH	⚠
L1002	VLQSAB7D220K	COIL 22UH	
L1003	VLQSAB7D100K	COIL 10UH	
L1006	J0JHB0000021	FILTER	
L3001	ELESN470KA	COIL 47UH	
L3014	G0C330KA0045	COIL 33UH	
L3016	ELESN330KA	COIL 33UH	
L3018	ELESN470KA	COIL 47UH	
L3101	ELESN101KA	COIL 100UH	
L3506	ELESN101KA	COIL 100UH	
L3507	ELESN101KA	COIL 100UH	
L4001	ELELN153KA	COIL 15MH	
L4002	ELESN101KA	COIL 100UH	
L4101	ELESN471KA	COIL 470UH	
L4201	ELESN101KA	COIL 100UH (B)	
L4451	ELESN101KA	COIL 100UH (B)	
L6201	ELEXT101KE04	COIL 100UH	
L6302	ELESN470KA	COIL 47UH	
L7003	G0C101KA0045	COIL 100UH	

CRYSTAL OSCILLATOR

Ref. No.	Part No.	Part Name & Description	Remarks
X3010	VSXS0195	CRYSTAL OSCILLATOR	
X6001	VSXS0232-TB	CRYSTAL OSCILLATOR	

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
P3501	LSJWM6N050LL	CONNECTOR CABLE W/PLUG,DC 9V (A)	
P3501	LSJWM9N050LL	CONNECTOR CABLE W/PLUG,DC 9V (B)	
P3502	LSEK0407	SHIELD PLATE UNIT	
P4001	VJSS0888	FE CONNECTOR 2P	
P4002	LSJWM6N130LL	CONNECTOR CABLE W/PLUG,DC 9V	
P6201	K1KA12A00234	CONNECTOR 12P	

SWITCHES

Ref. No.	Part No.	Part Name & Description	Remarks
SW6001	LSSH0002	SWITCH LEAF SWITCH-SAFETY TAB	
SW6002	LSSS0012	SWITCH MODE SELECT	
SW6303	EVQ11A09K	SWITCH PUSH	
SW6304	EVQ11A09K	SWITCH PUSH	
SW6305	EVQ11A09K	SWITCH PUSH	
SW6310	EVQ11A09K	SWITCH PUSH	
SW6311	EVQ11A09K	SWITCH PUSH	
SW6314	EVQ11A09K	SWITCH PUSH	
SW6315	EVQ11A09K	SWITCH PUSH	
SW6317	EVQ11A09K	SWITCH PUSH	

FUSE& PROTECTOR

Ref. No.	Part No.	Part Name & Description	Remarks
F1001	VSFS0003A16	FUSE 125V 1.6A	⚠
F1001	K5D162AB0003	FUSE 125V 1.6A	⚠
F1001	K5D162AQ0004	FUSE 125V 1.6A	⚠
PR1001	UNH000600A	IC PROTECTOR 1.5A	⚠
PR1001	B1ZAZ0000040	IC PROTECTOR 1.5A	⚠
PR1001	LSSF009A25E	IC PROTECTOR 1.5A	⚠
PR1002	UNH000600A	IC PROTECTOR 1.5A	⚠
PR1002	B1ZAZ0000040	IC PROTECTOR 1.5A	⚠
PR1002	LSSF009A25E	IC PROTECTOR 1.5A	⚠

TRANSFORMER

Ref. No.	Part No.	Part Name & Description	Remarks
T1001	ETS28AD2J3AC	SW TRANSFORMER	⚠
T1001	ETS28AD2J3NC	SW TRANSFORMER	⚠
T1001	LSTP0105	TRANSFORMER POWER	⚠
T1001	LSTP0105-1	TRANSFORMER	⚠
T1001	VTPS0042	SW TRANSFORMER	⚠
T1001	VTPS0042-1	SW TRANSFORMER	⚠
T4101	EIQ7QF018Q	OSC TRANSFORMER (A)	
T4101	LSLT0051	TRANSFORMER (B)	

JACKS

Ref. No.	Part No.	Part Name & Description	Remarks
JK3001	LSJH0028	AUDIO/VIDEO JACK SOCKET (A)	
JK3001	K2HA608B0002	Hi-Fi AUDIO/VIDEO JACK SOCKET (B)	
JK3002	K2HA104B0007	FRONT AUDIO/VIDEO JACK SOCKET (A)	
JK3002	K2HA306B0058	FRONT AUDIO/VIDEO JACK SOCKET (B)	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
711	LSSZ0004	INFRARED RECEIVER UNIT	
716	B3CKS0000001	LED DISPLAY PANEL	
741	LSJA0360	AC CORD W/PLUG,AC 120V	⚠
741	LSJA0358	AC CORD W/PLUG,AC 120V	⚠
741	LSJA0359	AC CORD W/PLUG,AC 120V	⚠
741	LSJA0361	AC CORD W/PLUG,AC 120V	⚠
741	LSJA0348	AC CORD W/PLUG,AC 120V	⚠
743	ENG56717G1	TUNER,UHF/VHF NR	
771	EYF52BC	FUSE HOLDER	

12. SCHEMATIC DIAGRAMS FOR PRINTING WITH LETTER SIZE

1. **Important safety notice**
   Components identified by the sign ⚠ have special characteristics important for safety. When replacing any of these components. Use only the specified parts.

2. Do not use the part number shown on this drawing for ordering.
   The correct part number and part value is shown in the parts list, and may be slightly different or amended since this drawing was prepared.

3. Use only original replacement parts:
   To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

4. Parts different in shape or size may be used.
   However, only interchangeable parts will be supplied as service replacement parts.

5. Test point information
   ● : Test point with a jumper wire across a hole in P.C.B.
   ○ : Test point with no test pin.

Schematic Diagram Notes

1. Indication for Zener Voltage of Zener Diodes
   The Zener Voltage of Zener Diodes are indicated as such on Schematic Diagrams.

   Example:
   (6.2V).....Zener Voltage

2. How to identify Connectors
   Each connector is labeled with a Connector No. and Pin No. Indicating what it is connected to,
   in other words, its counter part.
   Use the interconnection schematic diagram to find the connection between associated connectors.

   Example:
   The connections between C.B.A.s are shown below.

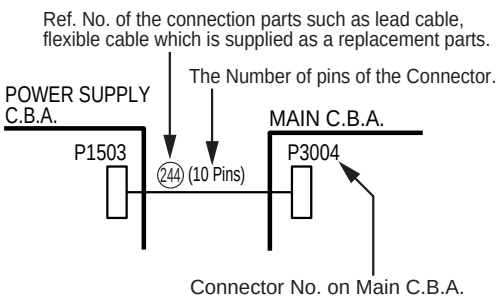
Ref. No. of the connection parts such as lead cable, flexible cable which is supplied as a replacement parts.
The Number of pins of the Connector.
POWER SUPPLY C.B.A.
MAIN C.B.A.
P1503
244 (10 Pins)
P3004
Connector No. on Main C.B.A.

3. Parts marked "PT" are not used in any models included in this service model.



4. The part number shown on this drawing is only main part number, except for safety parts. Be sure to make your orders of replacement parts according to the parts list.

5. Jumper wires are used for WA10, WA5 etc and these are not supplied as replacement parts.

Signal Waveform Note

How to read Signal Waveform

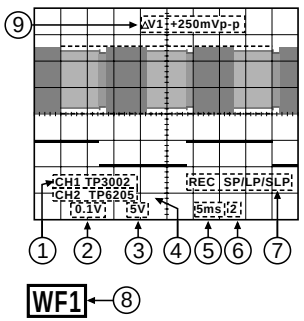

① Connecting Point
② Volts/Div
③ Volts/Div
④ Connecting Point
⑤ Time/Div
⑥ Trigger Channel of the scope
(1:CH1,2:CH2)
⑦ Operation Mode of VCR
⑧ Waveform Point on Schematic
⑨ ΔV1:Peak to Peak

Circuit Board Layout Note

Circuit Board Layout shows components installed for various models.
For proper parts content for the model you are servicing, please refer to the schematic diagram and parts list.

NOTE:
Circuit Board Layout includes components which are not used.

Model No. Identification Mark

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

Note : Refer to item 3 of Schematic Diagram Notes for mark "PT".

MAIN I (SYSTEM CONTROL/ SERVO) SCHEMATIC DIAGRAM

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

❖1 Microcontroller IC (IC6001) and EEP ROM IC (IC6005) replacement note:
In early units, MN101D06FPK is used for Microcontroller IC (IC6001).
In later units, MN101D09EPA is used for Microcontroller IC (IC6001).
Please note that only MN101D09EPA is supplied as a replacement part and this can be used with both types of EEP ROM IC (IC6005).
When replacing EEP ROM IC (IC6005), be sure to confirm which type of Microcontroller IC (IC6001) is used on the unit you are servicing and install the proper part for EEP ROM IC (IC6005).

	Microcontroller IC (IC6001)	EEPROM IC (IC6005)
Early Unit	MN101D06FPK	LSEQ0642
Later Unit	MN101D09EPA	KS24C011CS or AT24C01A10SI or C0ZBZ0000015 or C3EBCC000038 or KS24C011IS or M24C01-MN6

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

MODE SELECT SWITCH

PIN NO. OF IC6001 / MODE	A (97)	B (96)	C (95)
FF/REW	H	H	L
BRAKE	L	H	H
PLAY/CUE/SLOW/STILL	L	H	L
REVIEW	H	L	L
STANDBY/STOP	H	L	H
CASSETTE DOWN	L	L	H
EJECT	L	L	L

KEY VOLTAGE CHART (SW6301, 6303, 6304, 6305, 6307, 6312, 6313, 6314, 6316)

TERMINAL VOLTAGE	0V～0.6V	0.7V～1.9V	2.0V～3.1V	3.2V～4.4V
KEY DATA1 (PIN 89)	-----	REC	REW	-----
KEY DATA2 (PIN 88)	-----	PLAY	FF	-----
KEY DATA3 (PIN 87)	CH DOWN	-----	-----	-----
KEY DATA4 (PIN 86)	STOP/EJECT	CH UP	TV/VCR	POWER

KEY VOLTAGE CHART (SW6303, 6304, 6305, 6310, 6311, 6314, 6315, 6317)

TERMINAL VOLTAGE	0V～0.6V	0.7V～1.9V	2.0V～3.1V	3.2V～4.4V
KEY DATA1 (PIN 89)	-----	REW	FF	-----
KEY DATA2 (PIN 88)	-----	STOP/EJECT	PLAY	-----
KEY DATA3 (PIN 87)	CH DOWN	-----	-----	-----
KEY DATA4 (PIN 86)	REC	CH UP	-----	POWER

KEY VOLTAGE CHART (SW6303, 6304, 6305, 6306, 6311, 6314, 6315, 6317)

TERMINAL VOLTAGE	0V～0.6V	0.7V～1.9V	2.0V～3.1V	3.2V～4.4V
KEY DATA1 (PIN 89)	-----	-----	STOP/EJECT	-----
KEY DATA2 (PIN 88)	-----	REW	PLAY	FF
KEY DATA3 (PIN 87)	CH DOWN	-----	-----	-----
KEY DATA4 (PIN 86)	REC	CH UP	-----	POWER

REC VIDEO SIGNAL / PB VIDEO SIGNAL / CAPSTAN SERVO / CYLINDER SERVO

LINK TO SERVO BLOCK DIAGRAM
LINK TO I/O CHART

I/O CHART OF IC6001

Pin No.	I/O	Signal Name	Description
1	I	POWER_DOWN_L	POWER DOWN(L)
2	O	E/V-MASK	REW LED ON(H)/E/V-MASK
3	I	T-REEL	TAKEUP REEL PULSE
4	I	S-REEL	SUPPLY REEL PULSE
5	I	IR-DATA	IR-DATA
6	-	NC	(Not used)
7	-	NC	(Not used)
8	-	NC	(Not used)
9	-	NC	(Not used)
10	-	NC	(Not used)
11	O	SCK_1	SERIAL CLOCK 1
12	O	SLAVE_DATA_1	SERIAL DATA 1
13	O	MASTER_DATA_1	SERIAL DATA 0
14	O	LD_CTL	LOADING MOTOR CONTROL REVERSE(L)/STOP(M)/FORWARD(H)
15	O	LED_F&G	FF LED ON(H)
16	O	TV_L/VCR_H	TV(L)/VCR(H)
17	I/O	IIC_DATA	I2C SERIAL DATA
18	O	IIC_CLK	I2C SERIAL CLOCK
19	O	INPUT2	INPUT SELECT 2
20	O	DEFEAT_H	AUDIO DEFEAT(H)
21	O	CAP_R/F	CAPSTAN MOTOR REVERSE(H)/FORWARD(L)
22	O	A-MUTE_H	AUDIO MUTE(H)
23	O	HSW	HEAD SW
24	O	V-LOCKPLS	V-LOCK PULSE
25	I	RST	RESET
26	O	1/4_OSC	3.58MHz
27	O	HIFI-HSW	Hi-Fi HEAD SW
28	O	V-D-REC_H	VIDEO DELAY REC(H)
29	I	HIFI-PB_H	Hi-Fi PB(H)
30	I	S-TAB	SAFETY TAB BROKEN(H)
31	I/O	BLACK-DET-V/LED_B	VIDEO BLACK DETECT(L)/VCR LED ON(H)
32	I/O	BLACK-DET-A/LED_C	AUDIO BLACK DETECT(L)/TIMER LED ON(H)
33	O	PWM1(CAP)	CAP ERROR
34	O	PWM0(CYL)	CYL ERROR
35	O	PANE_CLK/LED_K	PANEL CLOCK/REC LED ON(H)
36	I	DVDD	VDD
37	O	OSC_OUT	OSC 2
38	I	OSC_IN	OSC 1
39	-	DVSS	GND
40	I	KEY12	KEY DATA 12
41	I	KEY13	KEY DATA 13
42	-	SXI	SXI
43	-	NC	(Not used)
44	-	NC	(Not used)
45	-	NC	(Not used)
46	-	NC	(Not used)
47	O	CV_OUT	VIDEO
48	-	OSD_VSS	GND
49	I	CV_IN	VIDEO
50	I	CV_IN2	V-SYNC

Pin No.	I/O	Signal Name	Description
51	I	OSD_VDD	VDD
52	O	AFCC	AFC
53	I	AFCLPF	AFC
54	O	PANE_CS	PANEL CS(L)
55	O	3CH_HIZ/4CH_L	CH3(H)/CH4(L)
56	-	NC	(Not used)
57	-	NC	(Not used)
58	-	NC	(Not used)
59	-	NC	(Not used)
60	-	NC	(Not used)
61	-	NC	(Not used)
62	-	NC	(Not used)
63	-	NC	(Not used)
64	-	NC	(Not used)
65	I	PFG	CYL PG/FG
66	O	C/R/SS_L	CUE/REV/SS(L)
67	I	FGF	CAP FG
68	-	AFG	CAP FG
69	O	VRO	V-REF 1
70	-	VRI	V-REF 2
71	-	AVSS	VSS
72	-	CTLA	CTL AMP
73	I	AVDD	VDD
74	I/O	RCTLP	CTL PULSE(+)
75	-	RCTLN	CTL PULSE(-)
76	-	CO	PB CONTROL PULSE
77	-	NC	(Not used)
78	-	NC	(Not used)
79	I	T-PHOTO_L	TAKEUP PHOTO TR(L)
80	I	S-PHOTO_L	SUPPLY PHOTO TR(L)
81	I	DTS-AFC	AFC
82	I	MTS_MODE	MTS MODE
83	O	POWER-ON_L	POWER ON(L)
84	O	27V_ON_H	SW+27V ON(H)
85	I	AT_ENV	ENV-VOLTAGE
86	I	KEY4	KEY DATA 4
87	I	KEY3	KEY DATA 3
88	I	KEY2	KEY DATA 2
89	I	KEY1	KEY DATA 1
90	I	KEY11	KEY DATA 11
91	I	KEY10	KEY DATA 10
92	O	LED_H&I&J	PLAY LED ON(H)
93	O	SCAN1/CATV_DATA	SCAN 1
94	O	SCAN2/CATV_CS	SCAN 2
95	I	POS.3	MODE SW POSITION C
96	I	POS.2	MODE SW POSITION B
97	I	POS.1	MODE SW POSITION A
98	O	ROT	ROTARY SW
99	O	HAMP	HEAD AMP SW
100	I	DENV	ENVELOPE DET

IC6001 SERVO BLOCK DIAGRAM

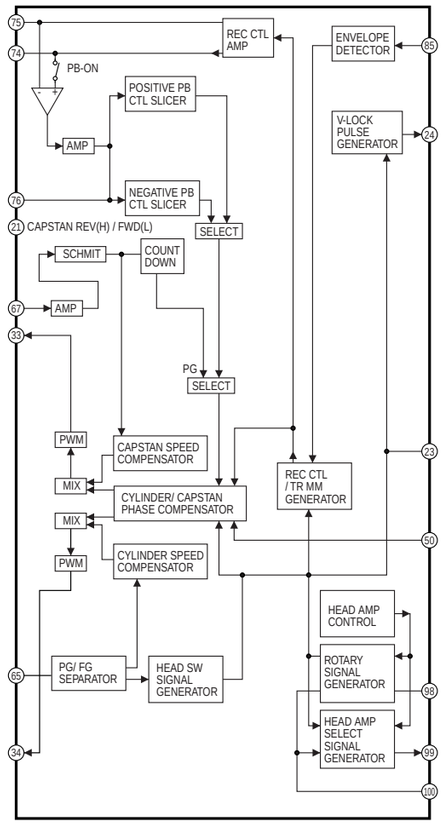

CAPSTAN MOTOR ASS'Y

NOTE:
CAPSTAN MOTOR ASS'Y (REF. NO. 46) IS SUPPLIED AS A UNIT ONLY.
HOWEVER, THE FLAT FLEXIBLE CABLE (REF. NO. 48) IS AVAILABLE SEPARATELY AS A REPLACEMENT PART.

"FOR REFERENCE ONLY"

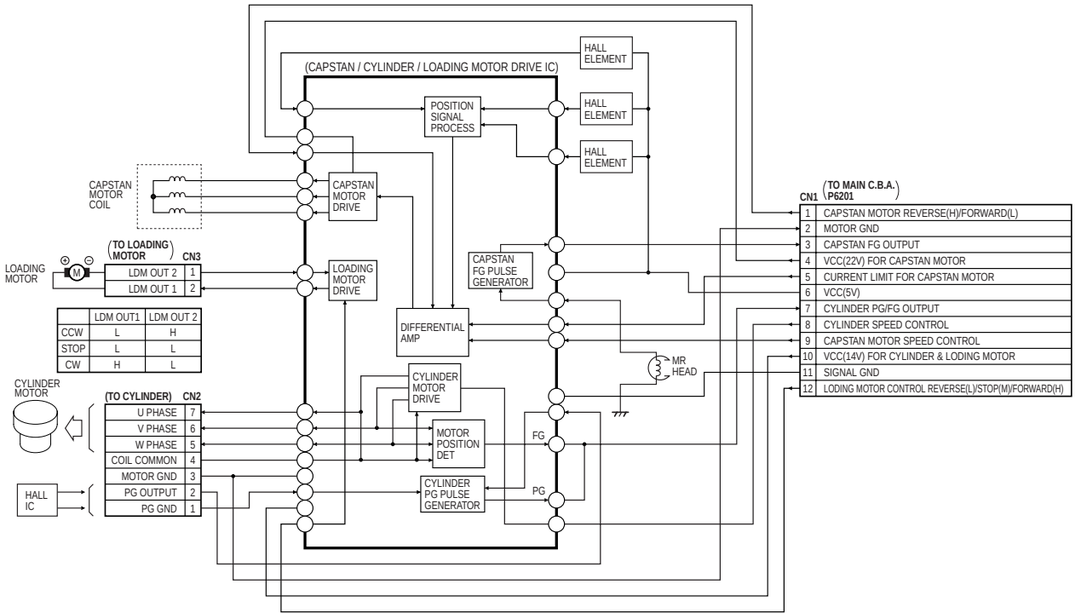

	LDM OUT1	LDM OUT 2
CCW	L	H
STOP	L	L
CW	H	L

MAIN II (SIGNAL PROCESS/AUDIO) SCHEMATIC DIAGRAM

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE: FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

REC VIDEO SIGNAL
PB VIDEO SIGNAL
REC AUDIO SIGNAL
PB AUDIO SIGNAL
CAPSTAN SERVO

LSJB2006
NV-SJ4130PN, NV-FJ6130PN
MAIN II (SIGNAL PROCESS/ AUDIO)
SCHEMATIC DIAGRAM

IC3001 VIDEO/AUDIO SIGNAL PROCESS / HEAD AMP IC- DETAIL BLOCK DIAGRAM

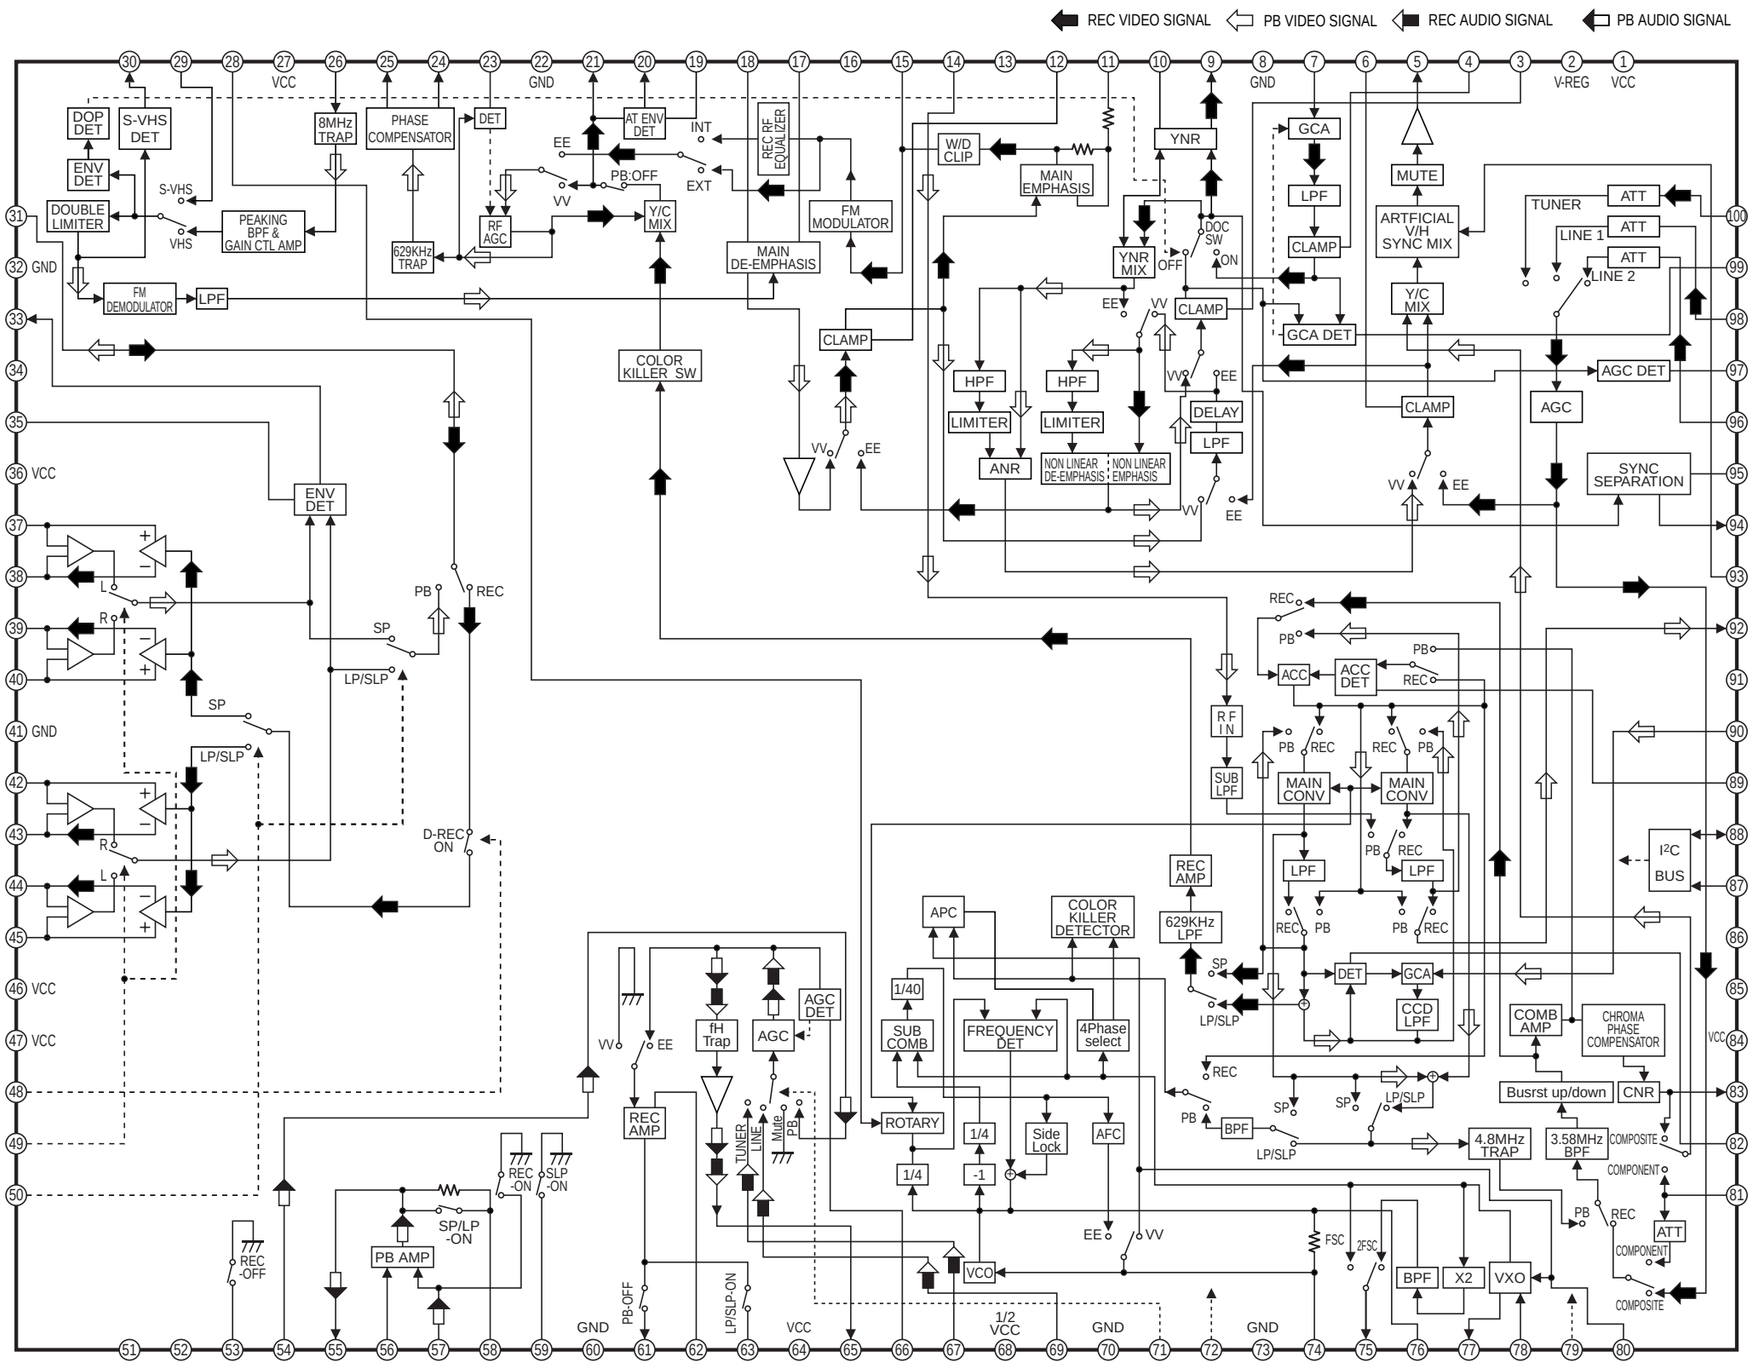

NV-SJ4130PN, NV-FJ6130PN
IC3001 DETAIL BLOCK DIAGRAM

MAIN III (OPERATION) SCHEMATIC DIAGRAM

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE: FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

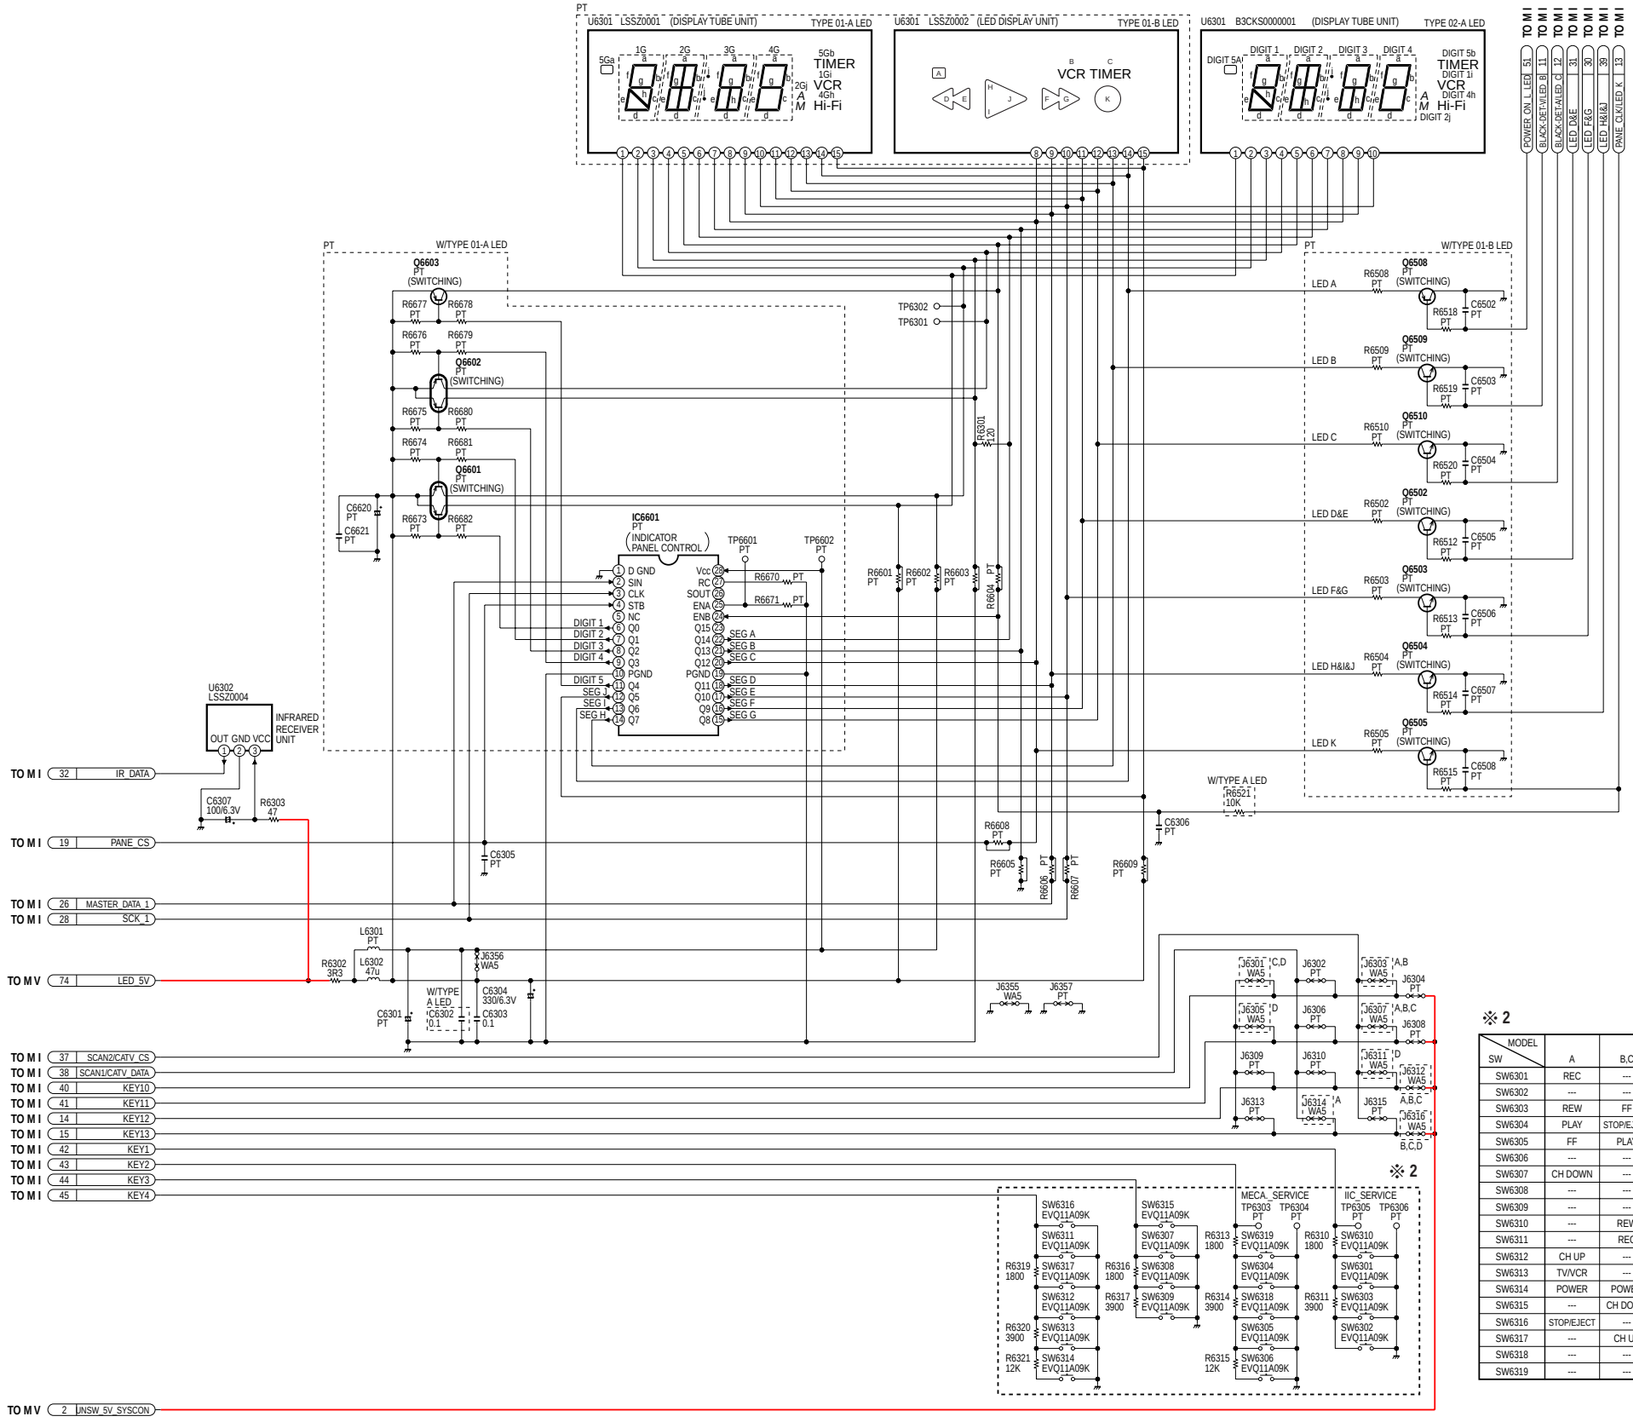

※2

SW \ MODEL	A	B,C	D
SW6301	REC	---	---
SW6302	---	---	---
SW6303	REW	FF	STOP/EJECT
SW6304	PLAY	STOP/EJECT	REW
SW6305	FF	PLAY	PLAY
SW6306	---	---	FF
SW6307	CH DOWN	---	---
SW6308	---	---	---
SW6309	---	---	---
SW6310	---	REW	---
SW6311	---	REC	REC
SW6312	CH UP	---	---
SW6313	TV/VCR	---	---
SW6314	POWER	POWER	POWER
SW6315	---	CH DOWN	CH DOWN
SW6316	STOP/EJECT	---	---
SW6317	---	CH UP	CH UP
SW6318	---	---	---
SW6319	---	---	---

LSJB2006

NV-SJ4130PN, NV-FJ6130PN

MAIN III (OPERATION) SCHEMATIC DIAGRAM

MAIN IV (Hi-Fi) SCHEMATIC DIAGRAM (C,D)

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE: FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

REC AUDIO SIGNAL

PB AUDIO SIGNAL

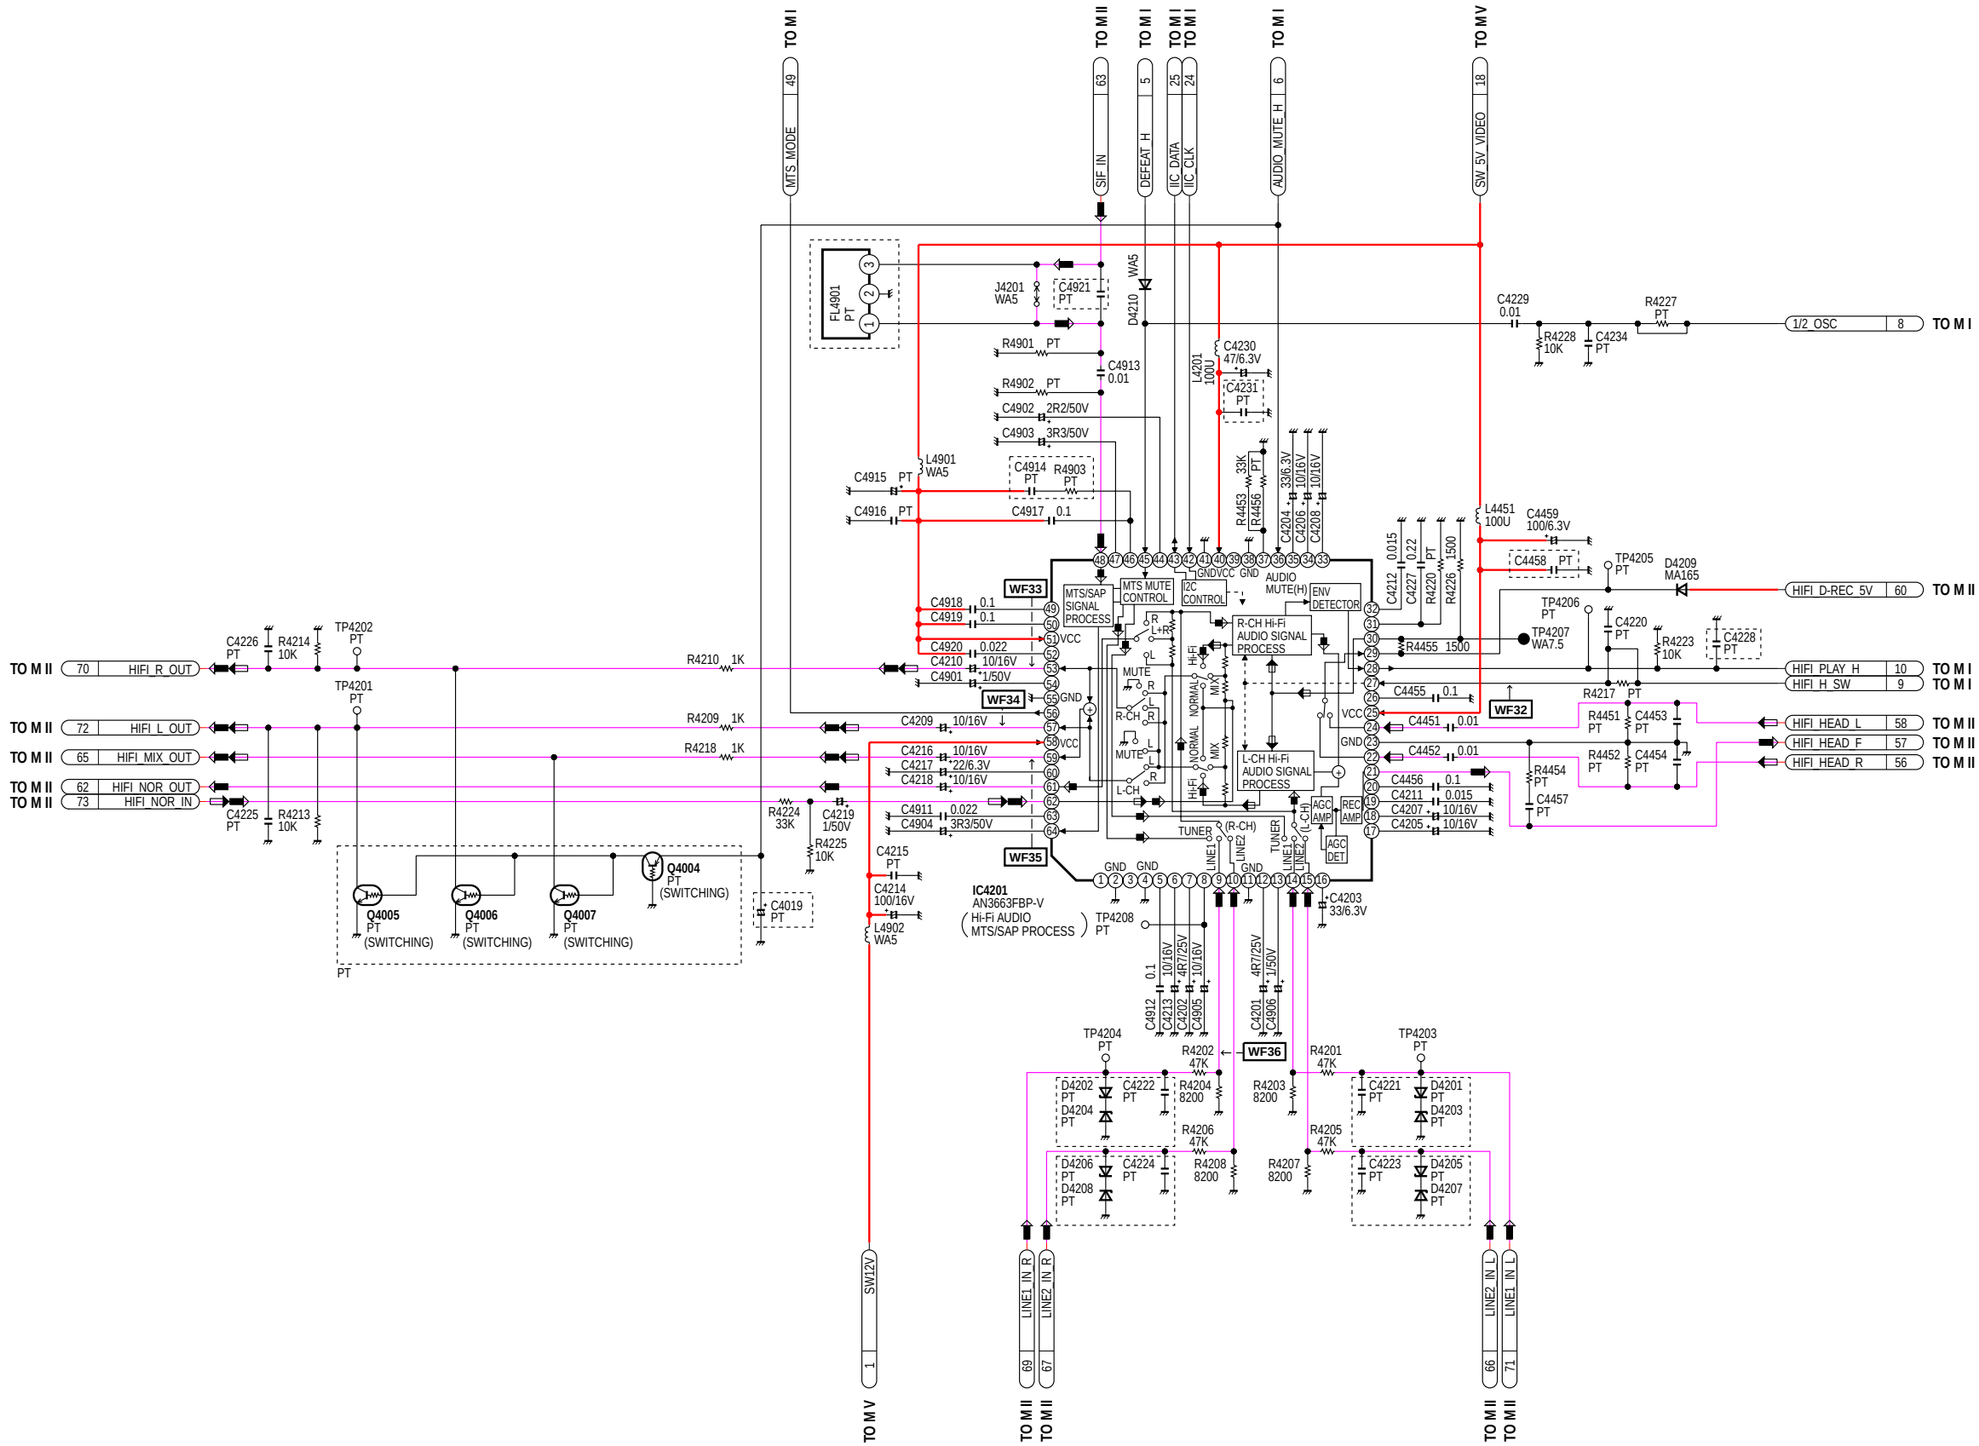

LSJB2006

NV-SJ4130PN

MAIN IV (Hi-fi) SCHEMATIC DIAGRAM (C,D)

MAIN V (POWER SUPPLY) SCHEMATIC DIAGRAM

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE: FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE 1.6A 125/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'T INCENDIE N'I UTILISERQUE DES FUSIBLE DE MÉME TYPE 1.6A 125/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

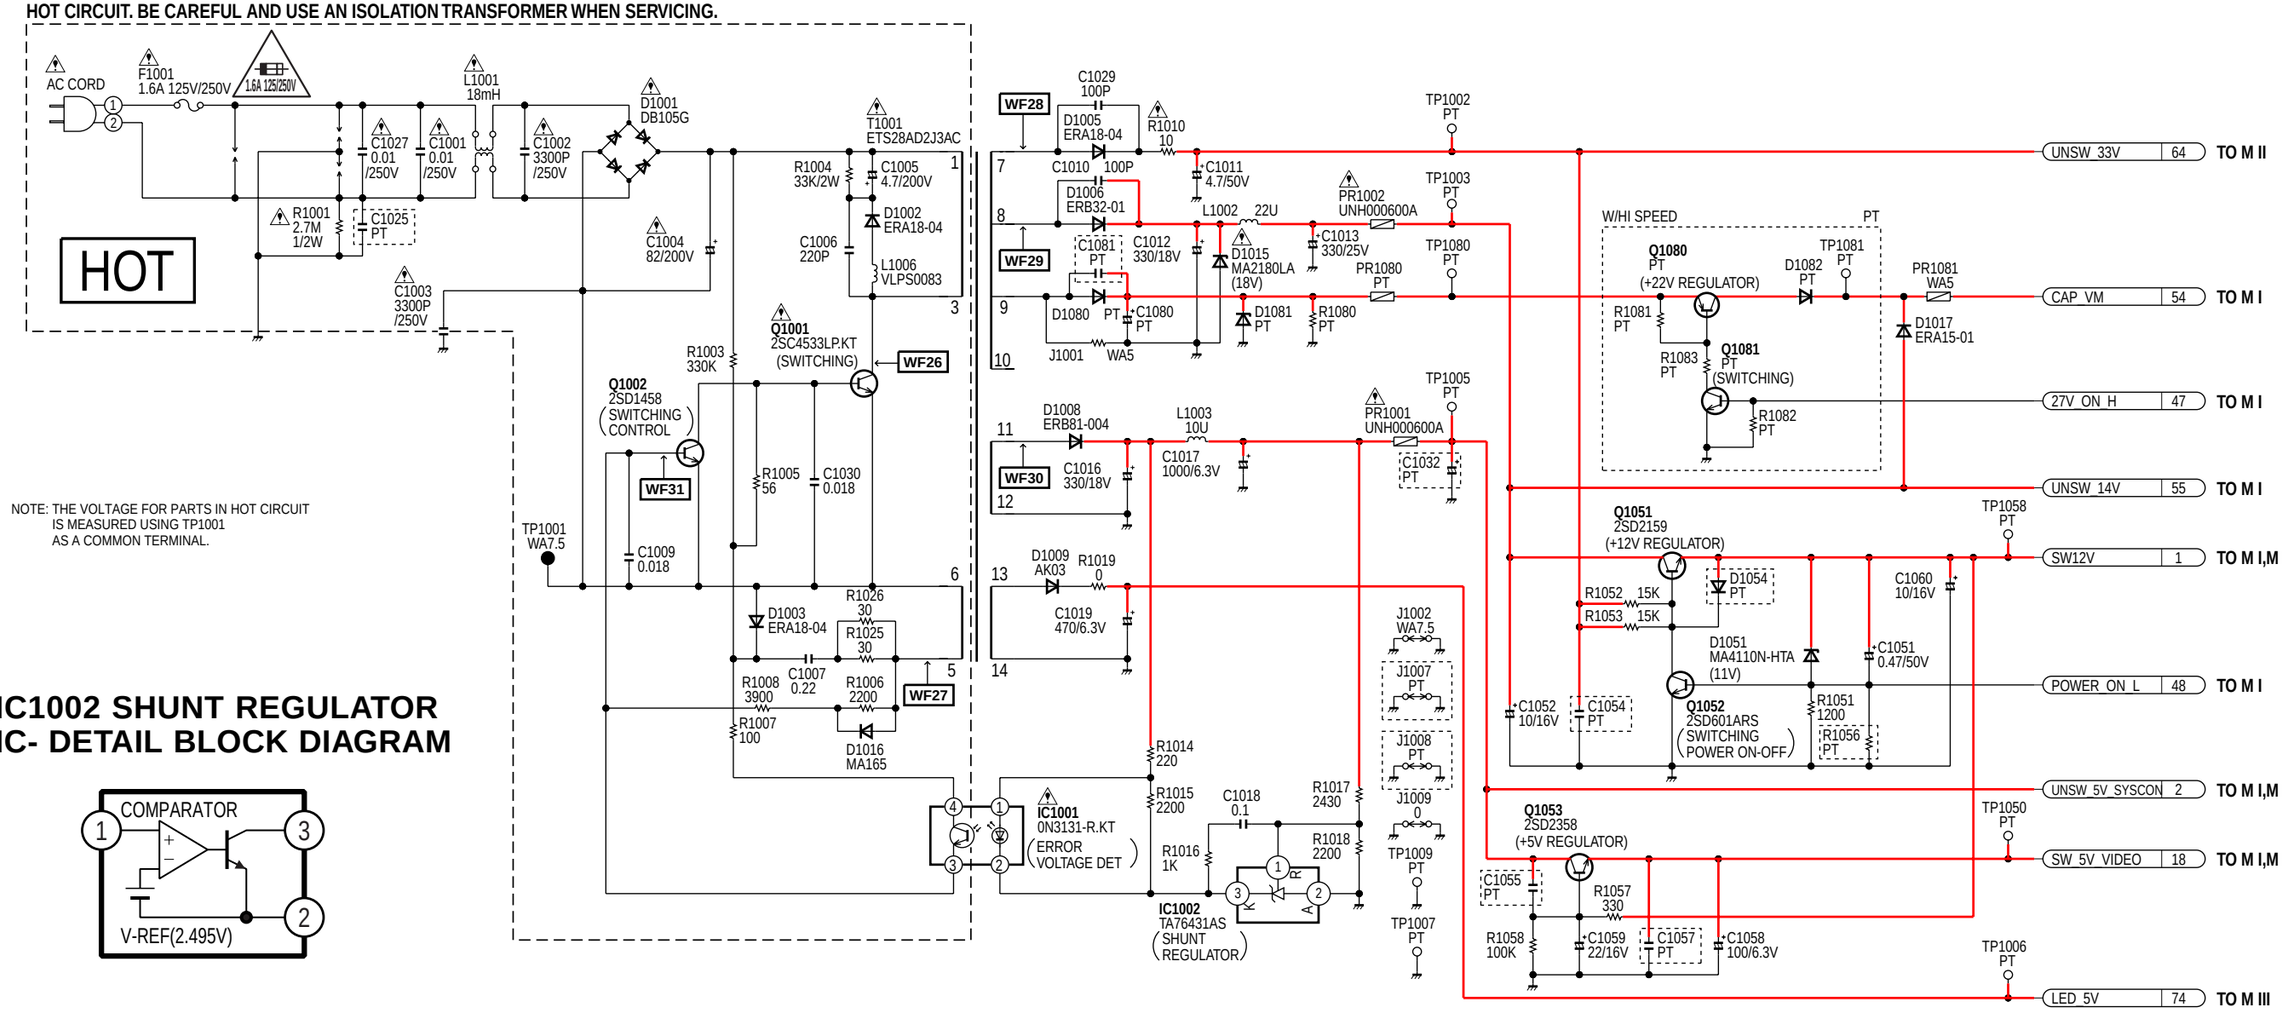

NOTE: THE VOLTAGE FOR PARTS IN HOT CIRCUIT IS MEASURED USING TP1001 AS A COMMON TERMINAL.

IC1002 SHUNT REGULATOR IC- DETAIL BLOCK DIAGRAM

LSJB2006

NV-SJ4130PN, NV-FJ6130PN

MAIN V (POWER SUPPLY) SCHEMATIC DIAGRAM

MAIN VI (ADVANCE) SCHEMATIC DIAGRAM (D)

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE: FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

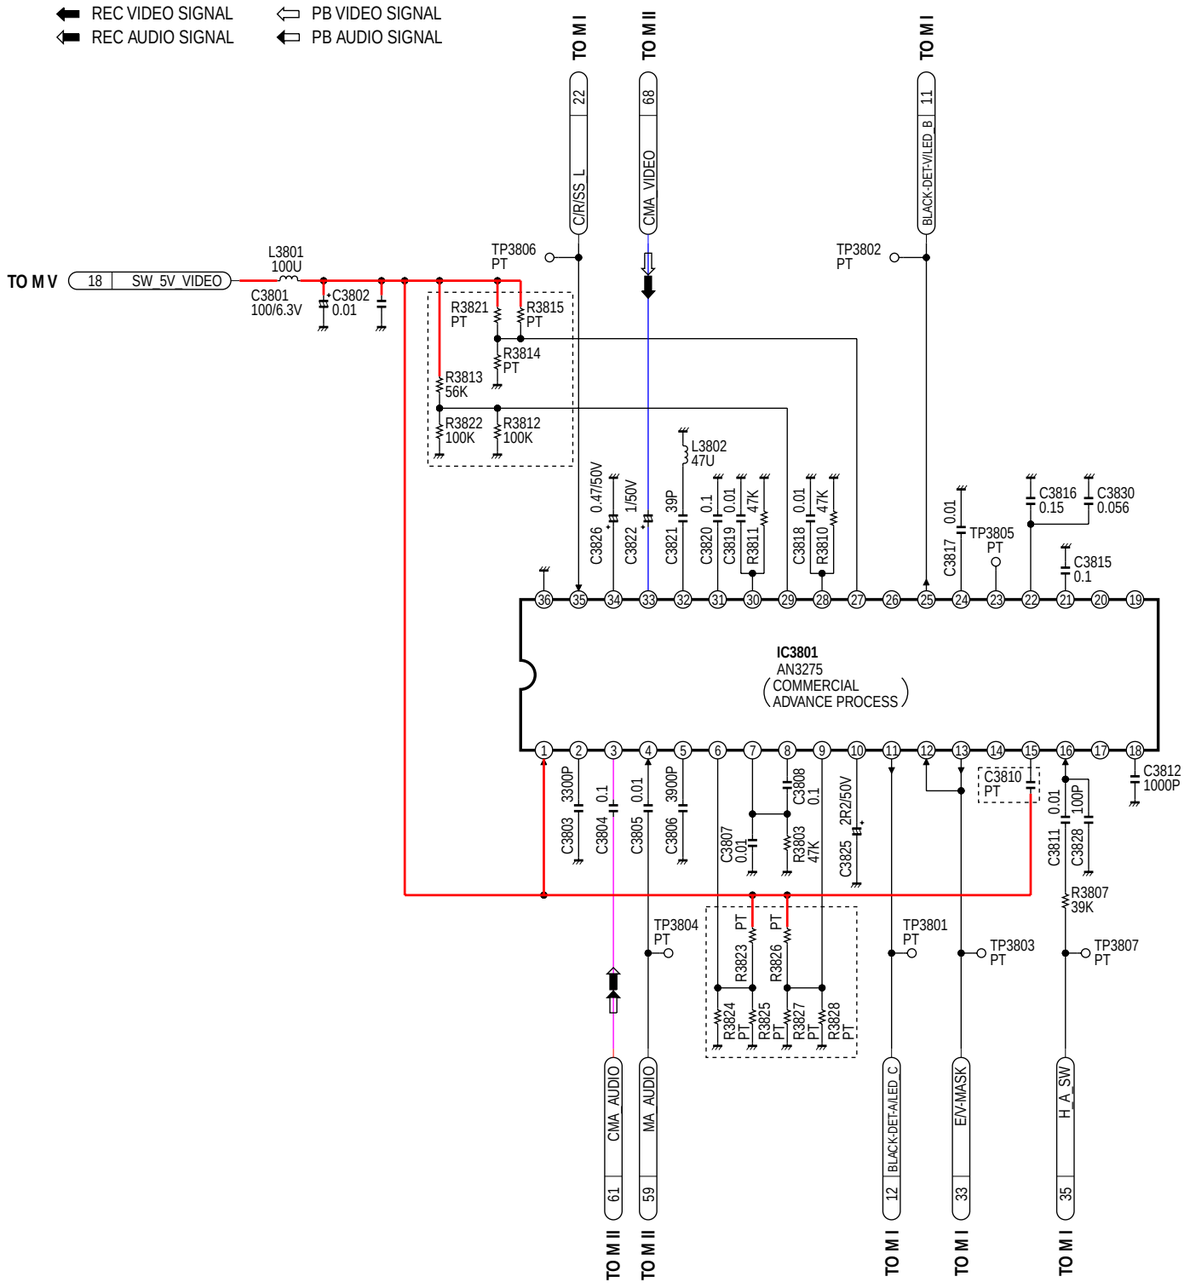

IC3801 COMMERCIAL ADVANCE PROCESS IC- DETAIL BLOCK DIAGRAM

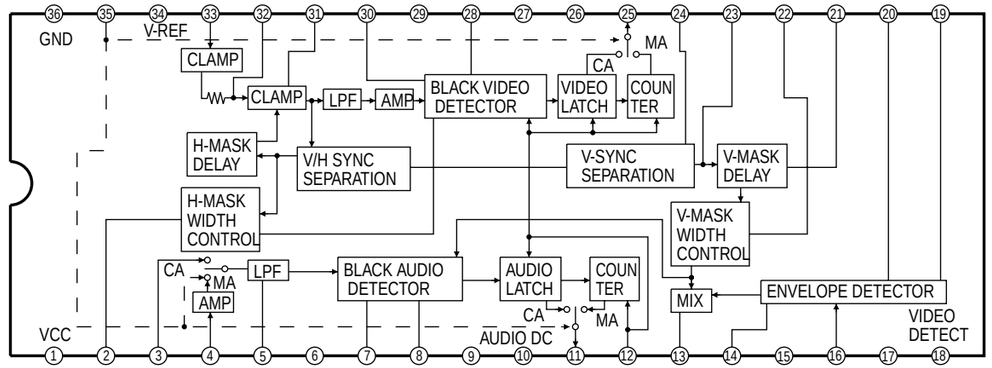

INTERCONNECTION SCHEMATIC DIAGRAM

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

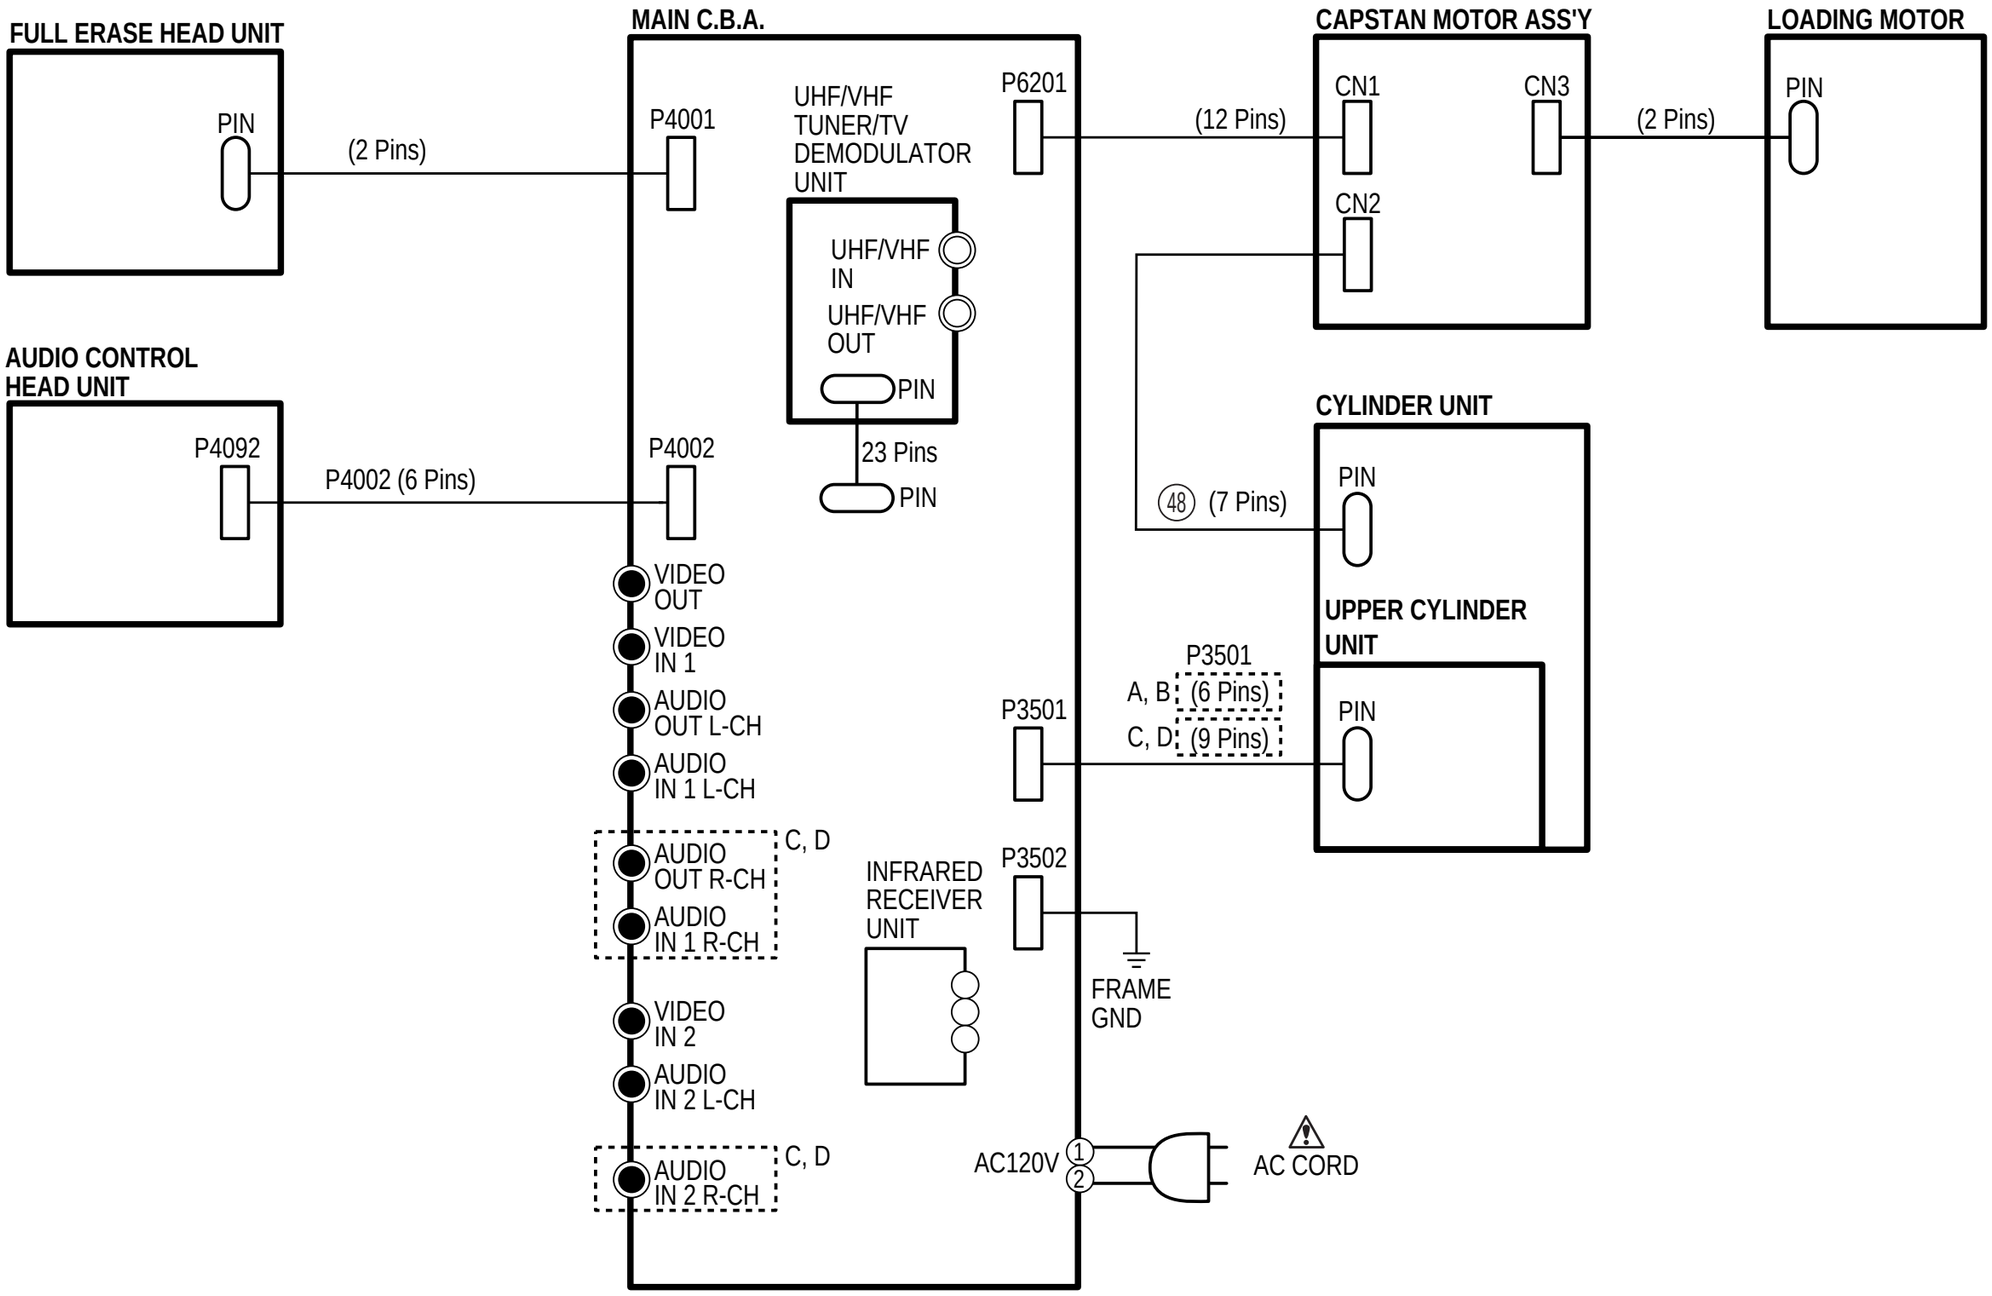

7.2. MAIN SCHEMATIC DIAGRAMS

MAIN I (SYSTEM CONTROL/ SERVO) SCHEMATIC DIAGRAM

A

KEY VOLTAGE CHART (SW6301, 6303, 6304, 6305, 6307, 6312, 6313, 6314, 6316)

TERMINAL VOLTAGE	0V～0.6V	0.7V～1.9V	2.0V～3.1V	3.2V～4.4V
KEY DATA1 (PIN 89)	-----	REC	REW	-----
KEY DATA2 (PIN 88)	-----	PLAY	FF	-----
KEY DATA3 (PIN 87)	CH DOWN	-----	-----	-----
KEY DATA4 (PIN 86)	STOP/EJECT	CH UP	TV/VCR	POWER

B, C

KEY VOLTAGE CHART (SW6303, 6304, 6305, 6310, 631

TERMINAL VOLTAGE	0V～0.6V	0.7V～1.9V	2.0V～3.1
KEY DATA1 (PIN 89)	-----	REW	FF
KEY DATA2 (PIN 88)	-----	STOP/EJECT	PLAY
KEY DATA3 (PIN 87)	CH DOWN	-----	-----
KEY DATA4 (PIN 86)	REC	CH UP	-----

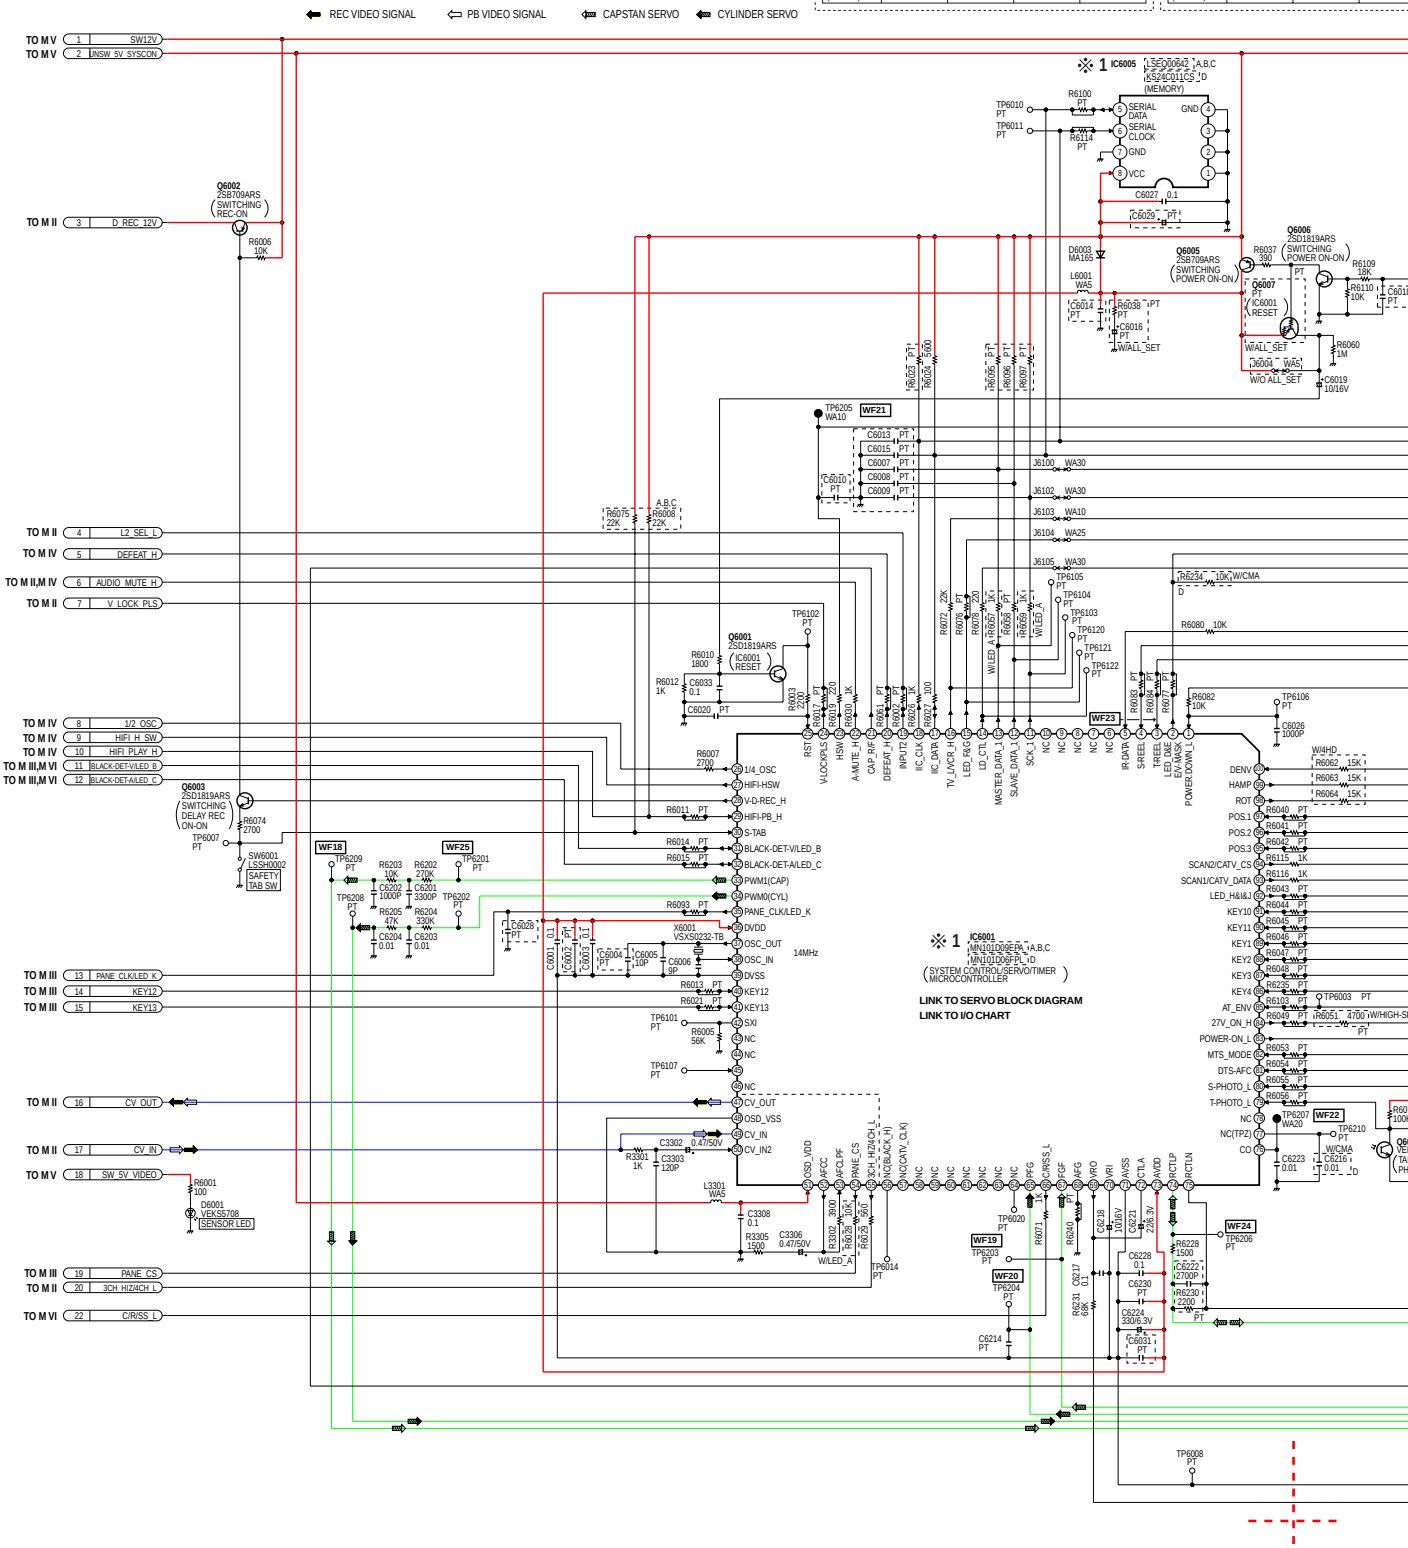

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

❖1 Microcontroller IC (IC6001) and EEP ROM IC (IC6005) replacement note:
In early units, MN101D06FPK is used for Microcontroller IC (IC6001).
In later units, MN101D09EPA is used for Microcontroller IC (IC6001).
Please note that only MN101D09EPA is supplied as a replacement part and this can be used with both types of EEP ROM IC (IC6005).
When replacing EEP ROM IC (IC6005), be sure to confirm which type of Microcontroller IC (IC6001) is used on the unit you are servicing and install the proper part for EEP ROM IC (IC6005).

	Microcontroller IC (IC6001)	EEPROM IC (IC6005)
Early Unit	MN101D06FPK	LSEQ0642
Later Unit	MN101D09EPA	KS24C011CS or AT24C01A10SI or C0ZBZ0000015 or C3EBCC000038 or KS24C011IS or M24C01-MN6

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

C

KEY VOLTAGE CHART (SW6303, 6304, 6305, 6310, 6311, 6314, 6315, 6317)

TERMINAL VOLTAGE	0V ~ 0.6V	0.7V ~ 1.9V	2.0V ~ 3.1V	3.2V ~ 4.4V
KEY DATA1 (PIN 89)	-----	REW	FF	-----
KEY DATA2 (PIN 88)	-----	STOP/EJECT	PLAY	-----
KEY DATA3 (PIN 87)	CH DOWN	-----	-----	-----
KEY DATA4 (PIN 86)	REC	CH UP	-----	POWER

D

KEY VOLTAGE CHART (SW6303, 6304, 6305, 6306, 6311, 6314, 6315, 6317)

TERMINAL VOLTAGE	0V ~ 0.6V	0.7V ~ 1.9V	2.0V ~ 3.1V	3.2V ~ 4.4V
KEY DATA1 (PIN 89)	-----	-----	STOP/EJECT	-----
KEY DATA2 (PIN 88)	-----	REW	PLAY	FF
KEY DATA3 (PIN 87)	CH DOWN	-----	-----	-----
KEY DATA4 (PIN 86)	REC	CH UP	-----	POWER

MODE SELECT SWITCH

PIN NO. OF IC6001 / MODE	A (97)	B (96)	C (95)
FF/REW	H	H	L
BRAKE	L	H	H
PLAY/CUE/SLOW/STILL	L	H	L
REVIEW	H	L	L
STANDBY/STOP	H	L	H
CASSETTE DOWN	L	L	H
EJECT	L	L	L

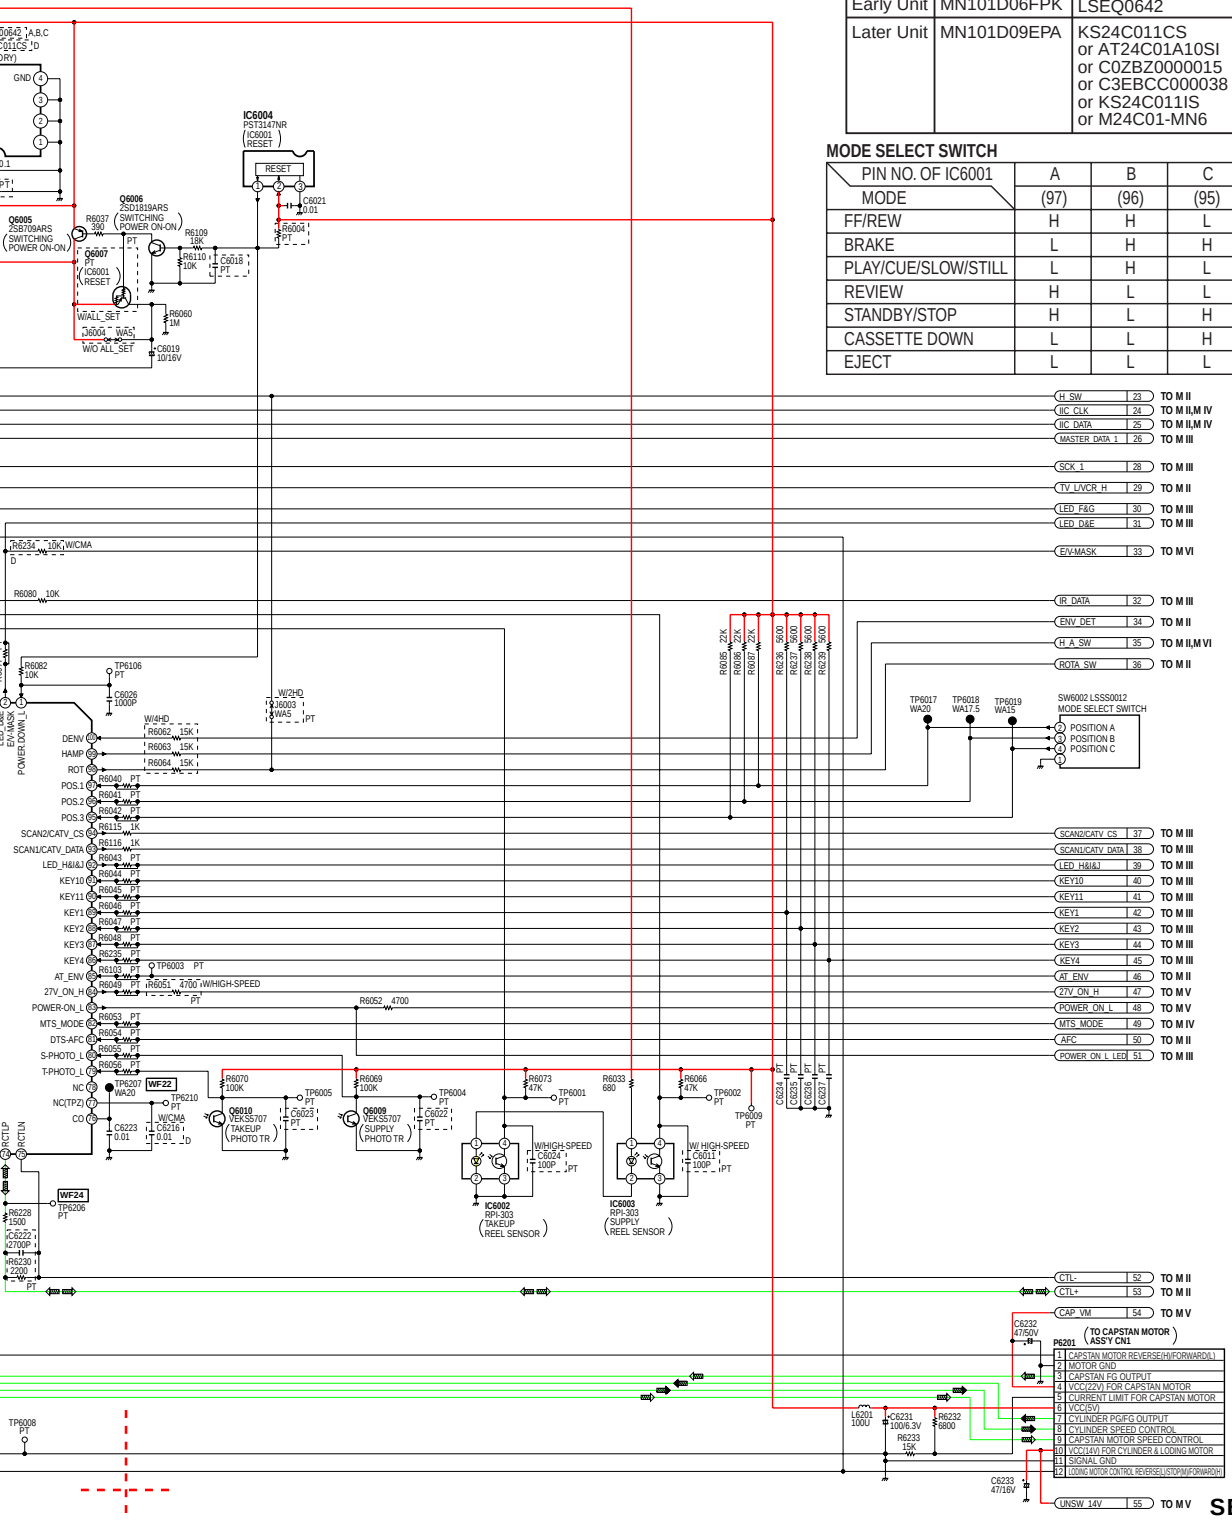

LSJB2006
NV-SJ4130PN, NV-FJ6130PN
MAIN I (SYSTEM CONTROL/ SERVO) SCHEMATIC DIAGRAM

MAIN II (SIGNAL PROCESS/AUDIO) SCHEMATIC DIAGRAM

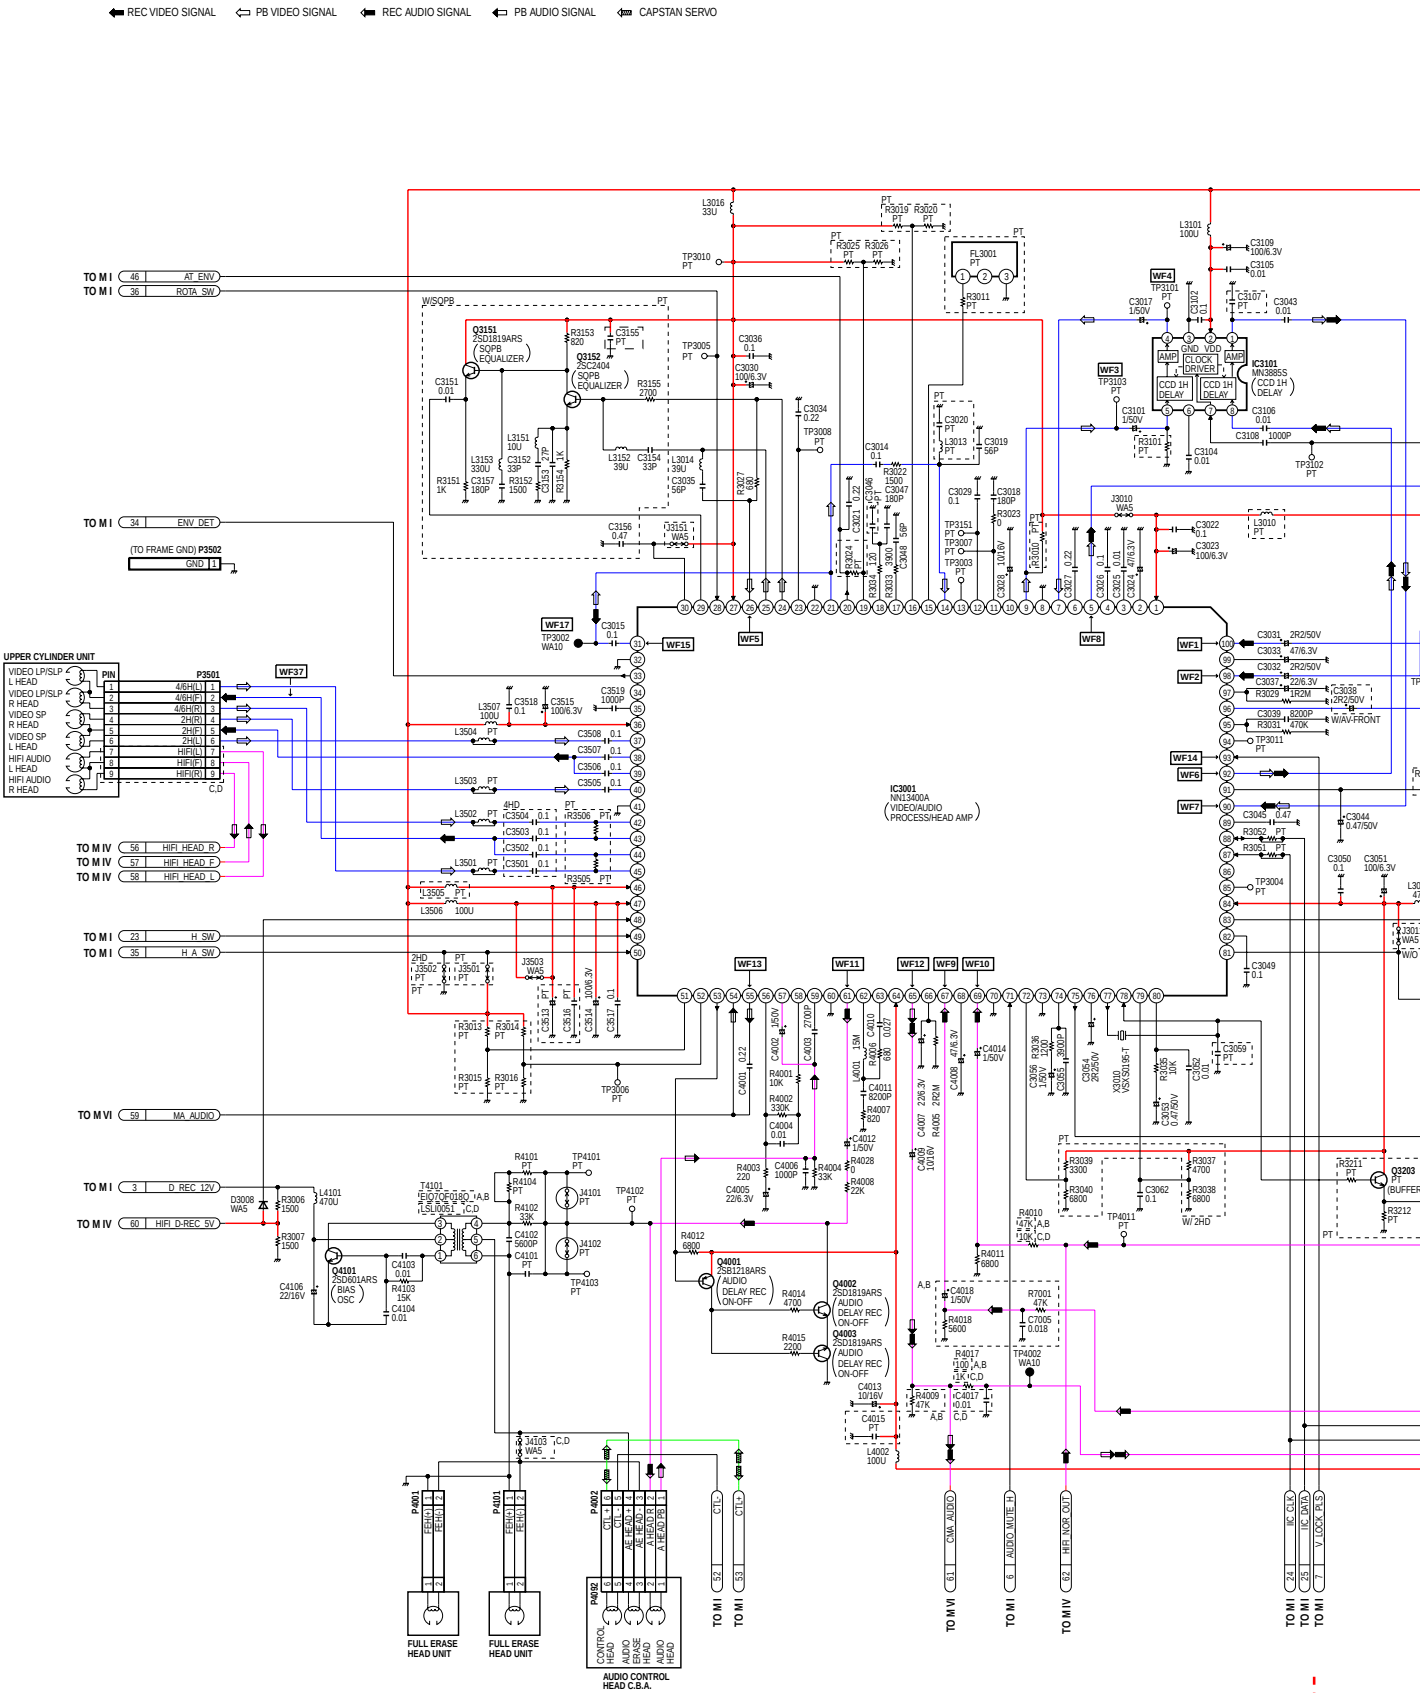

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE: FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

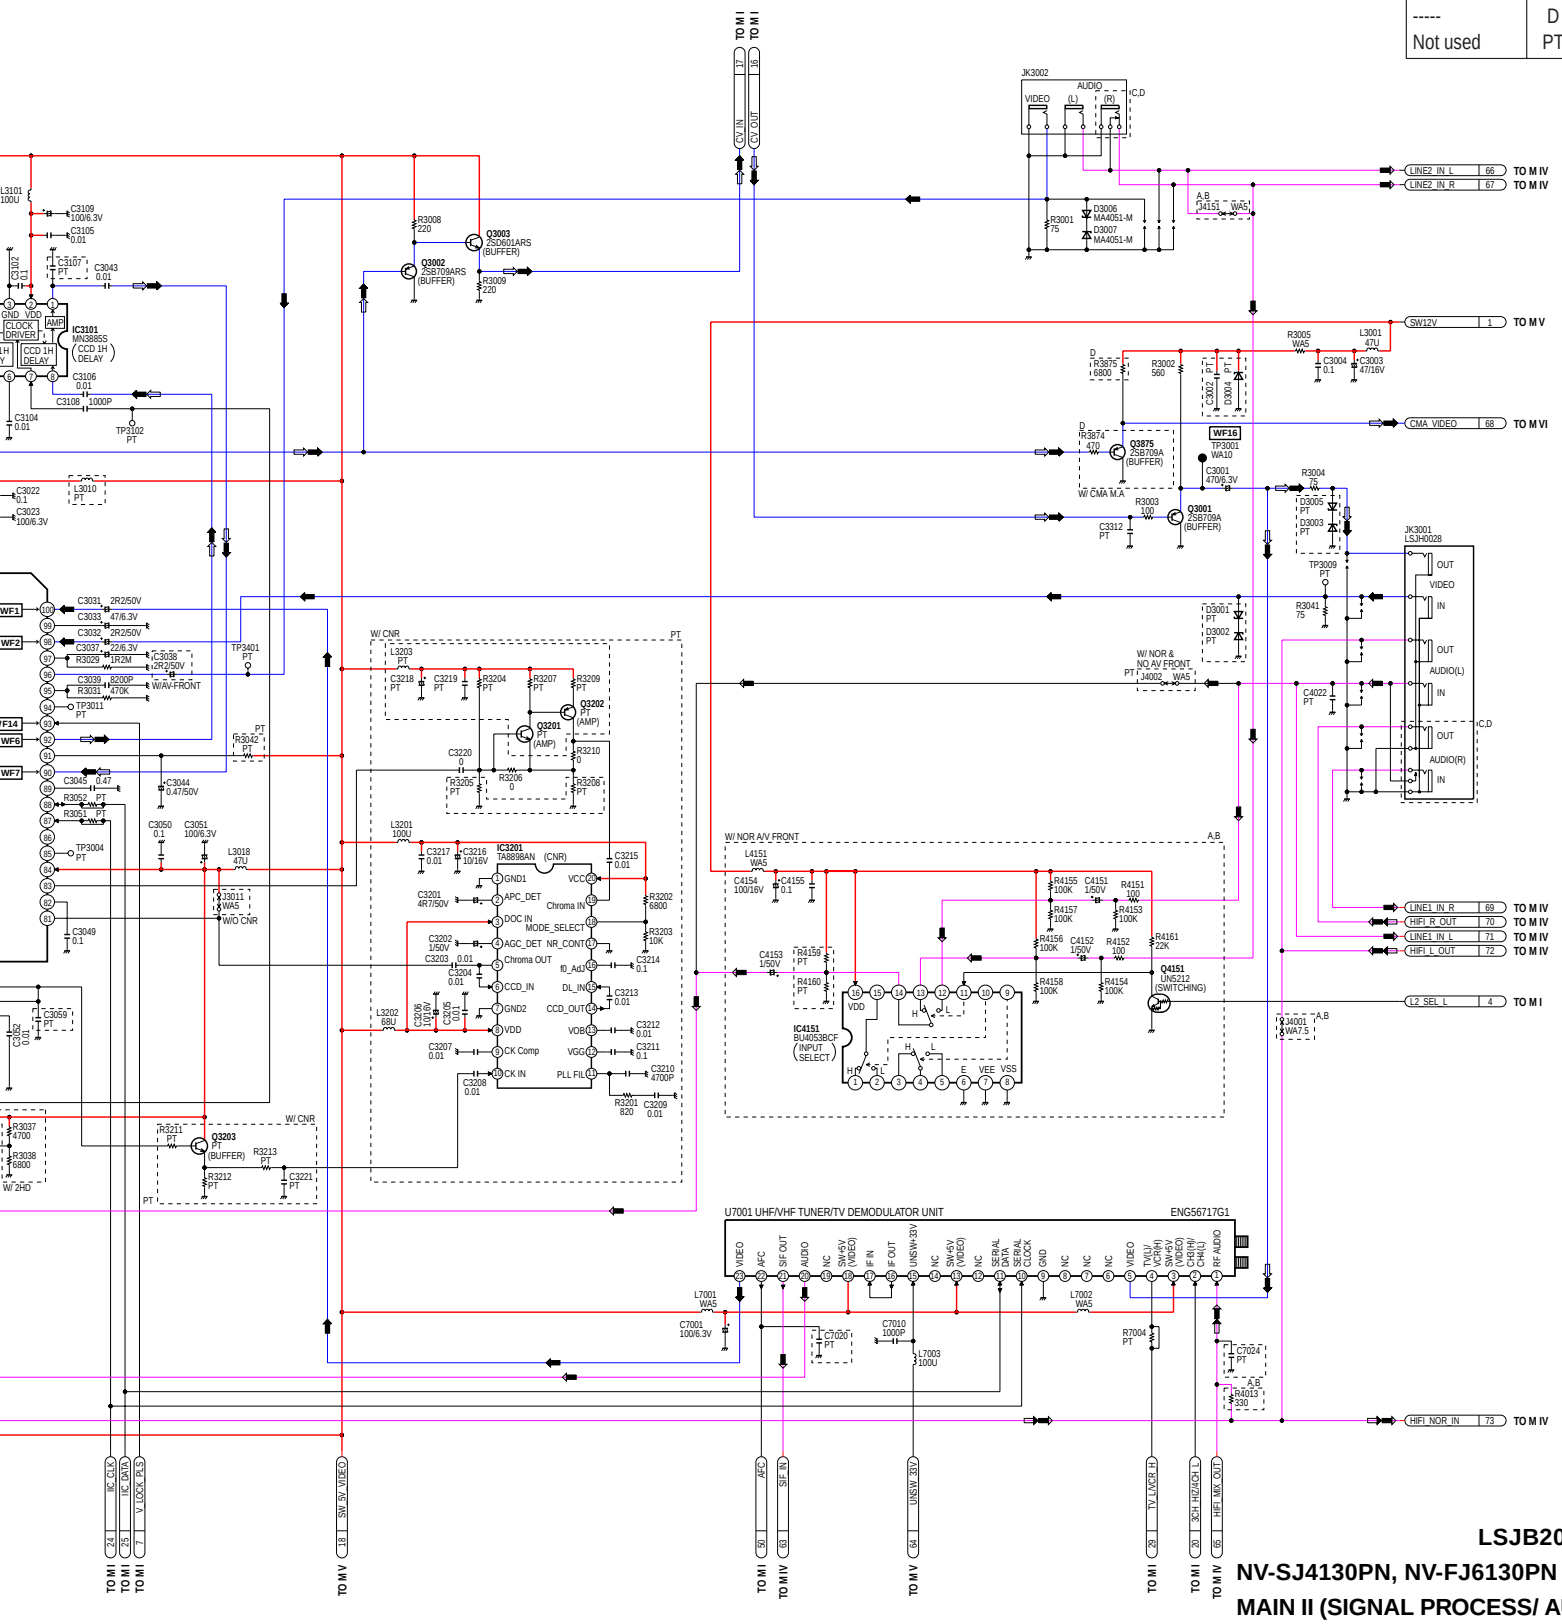

LSJB2006

NV-SJ4130PN, NV-FJ6130PN

MAIN II (SIGNAL PROCESS/ AUDIO) SCHEMATIC DIAGRAM

MAIN III (OPERATION) SCHEMATIC DIAGRAM

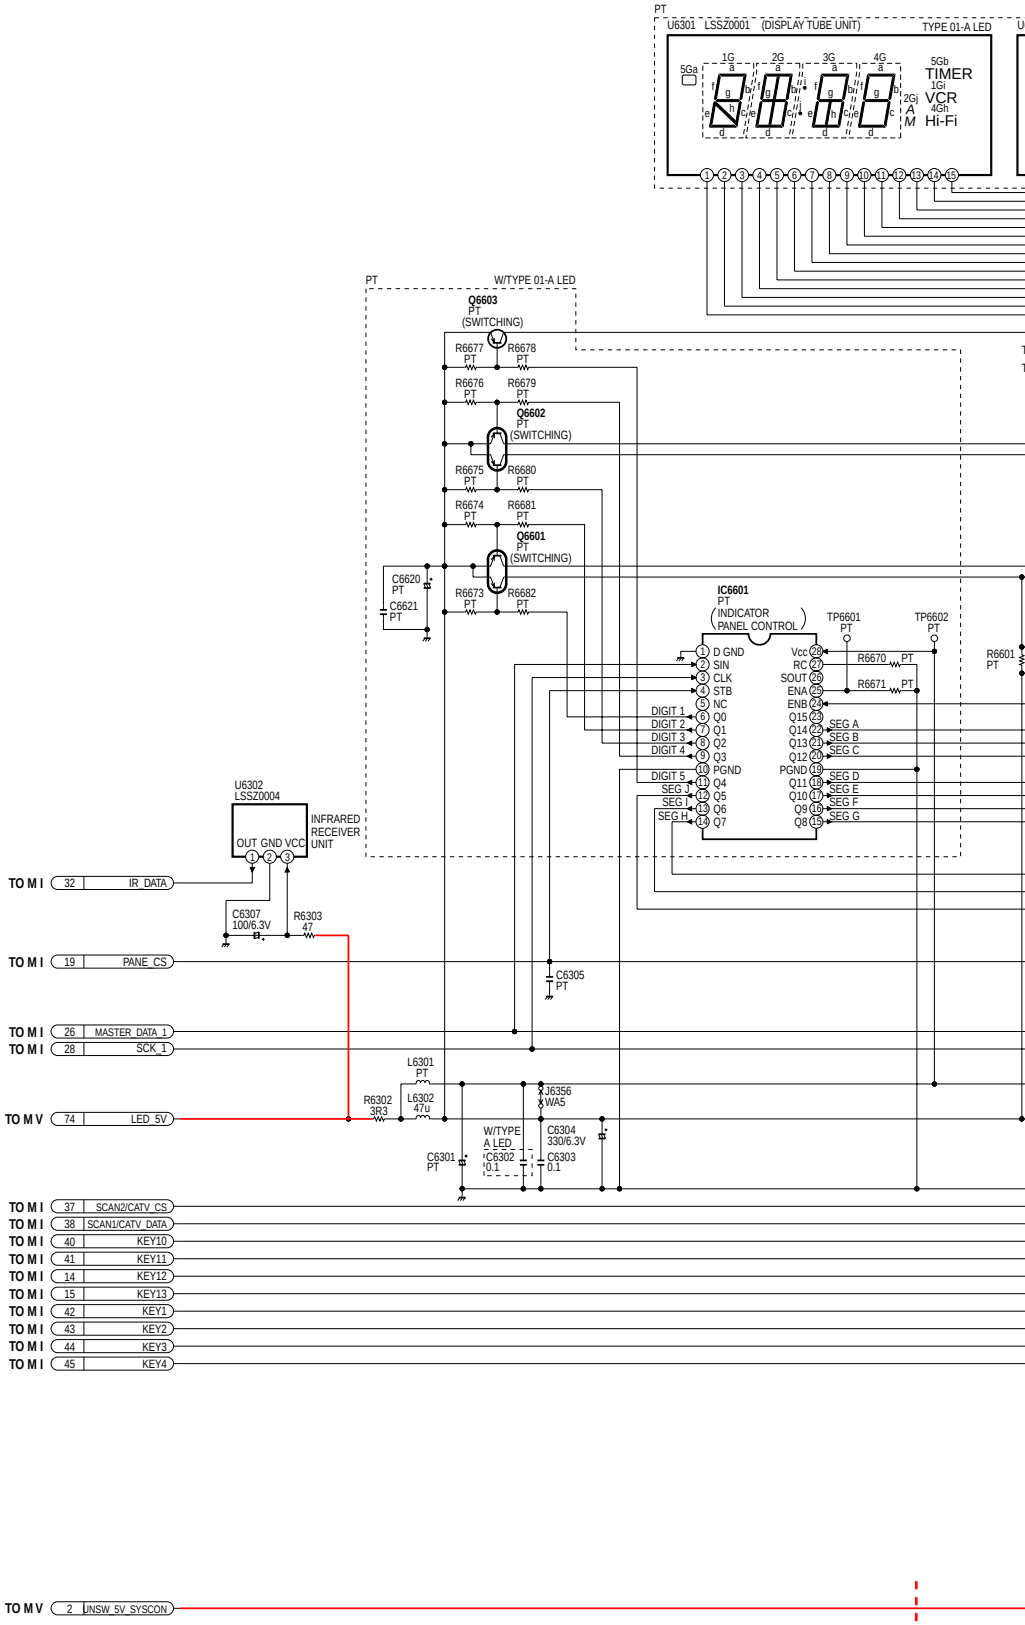

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

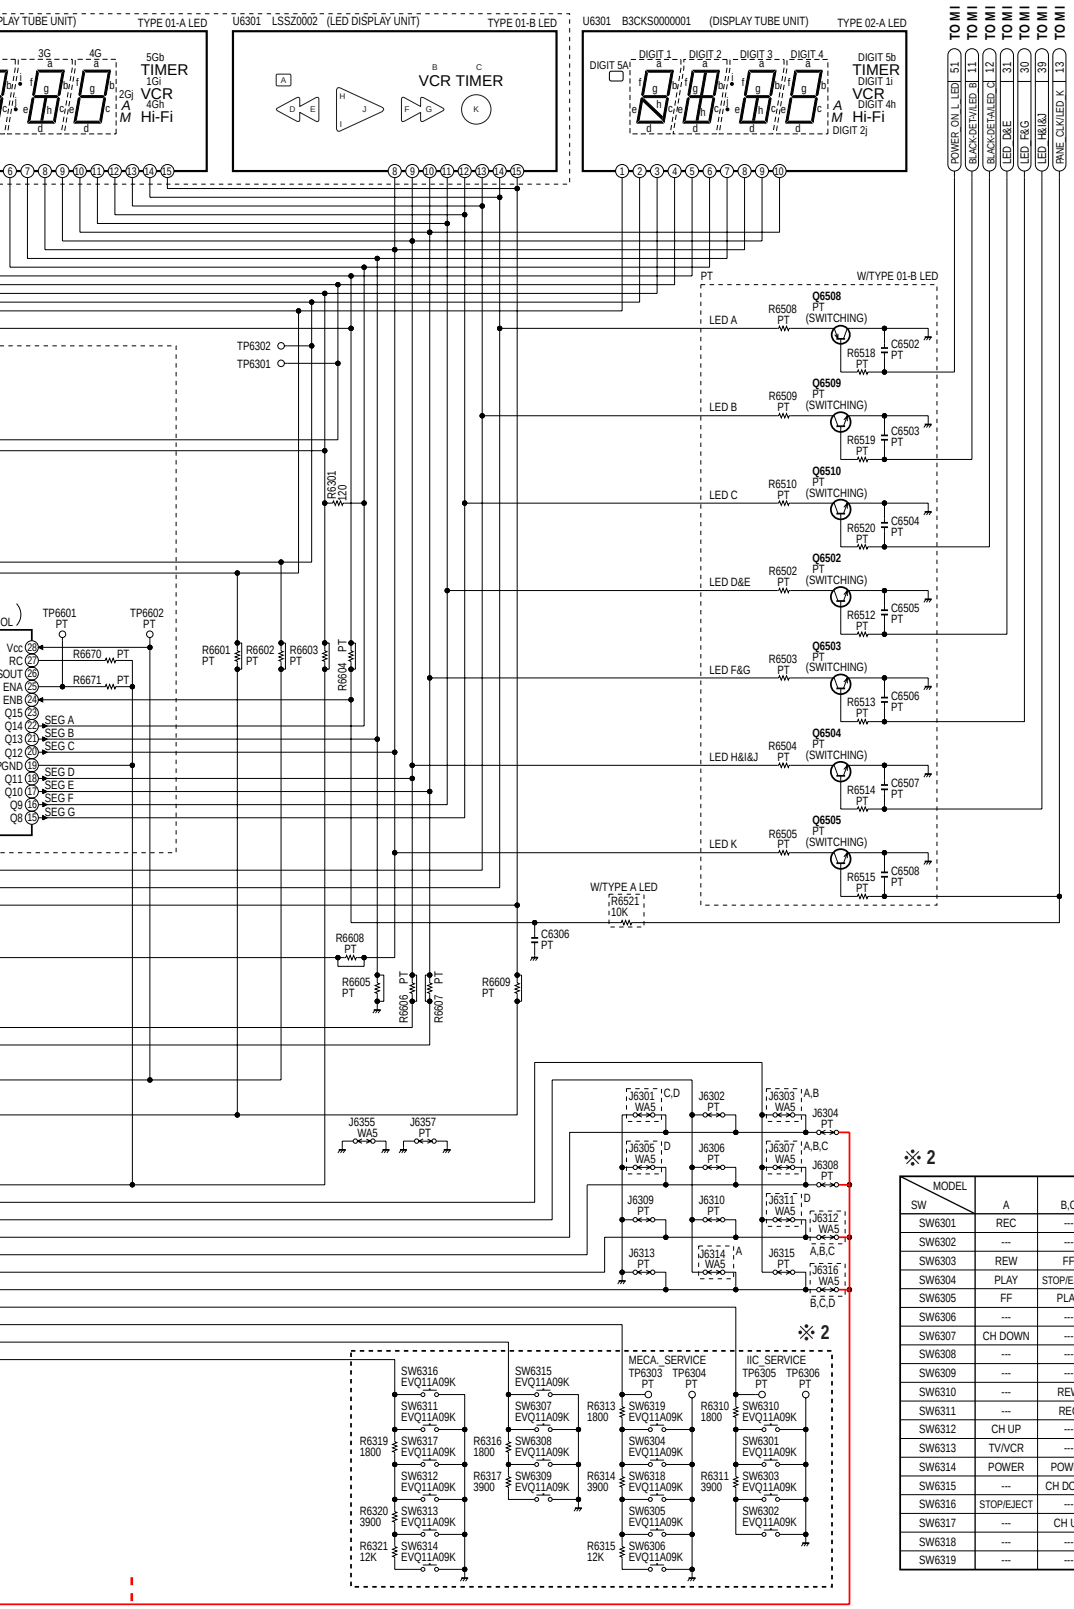

※2

SW \ MODEL	A	B,C	D
SW6301	REC	---	---
SW6302	---	---	---
SW6303	REW	FF	STOP/EJECT
SW6304	PLAY	STOP/EJECT	REW
SW6305	FF	PLAY	PLAY
SW6306	---	---	FF
SW6307	CH DOWN	---	---
SW6308	---	---	---
SW6309	---	---	---
SW6310	---	REW	---
SW6311	---	REC	REC
SW6312	CH UP	---	---
SW6313	TV/VCR	---	---
SW6314	POWER	POWER	POWER
SW6315	---	CH DOWN	CH DOWN
SW6316	STOP/EJECT	---	---
SW6317	---	CH UP	CH UP
SW6318	---	---	---
SW6319	---	---	---

LSJB2006
NV-SJ4130PN, NV-FJ6130PN
MAIN III (OPERATION) SCHEMATIC DIAGRAM

MAIN IV (Hi-Fi) SCHEMATIC DIAGRAM (C,D)

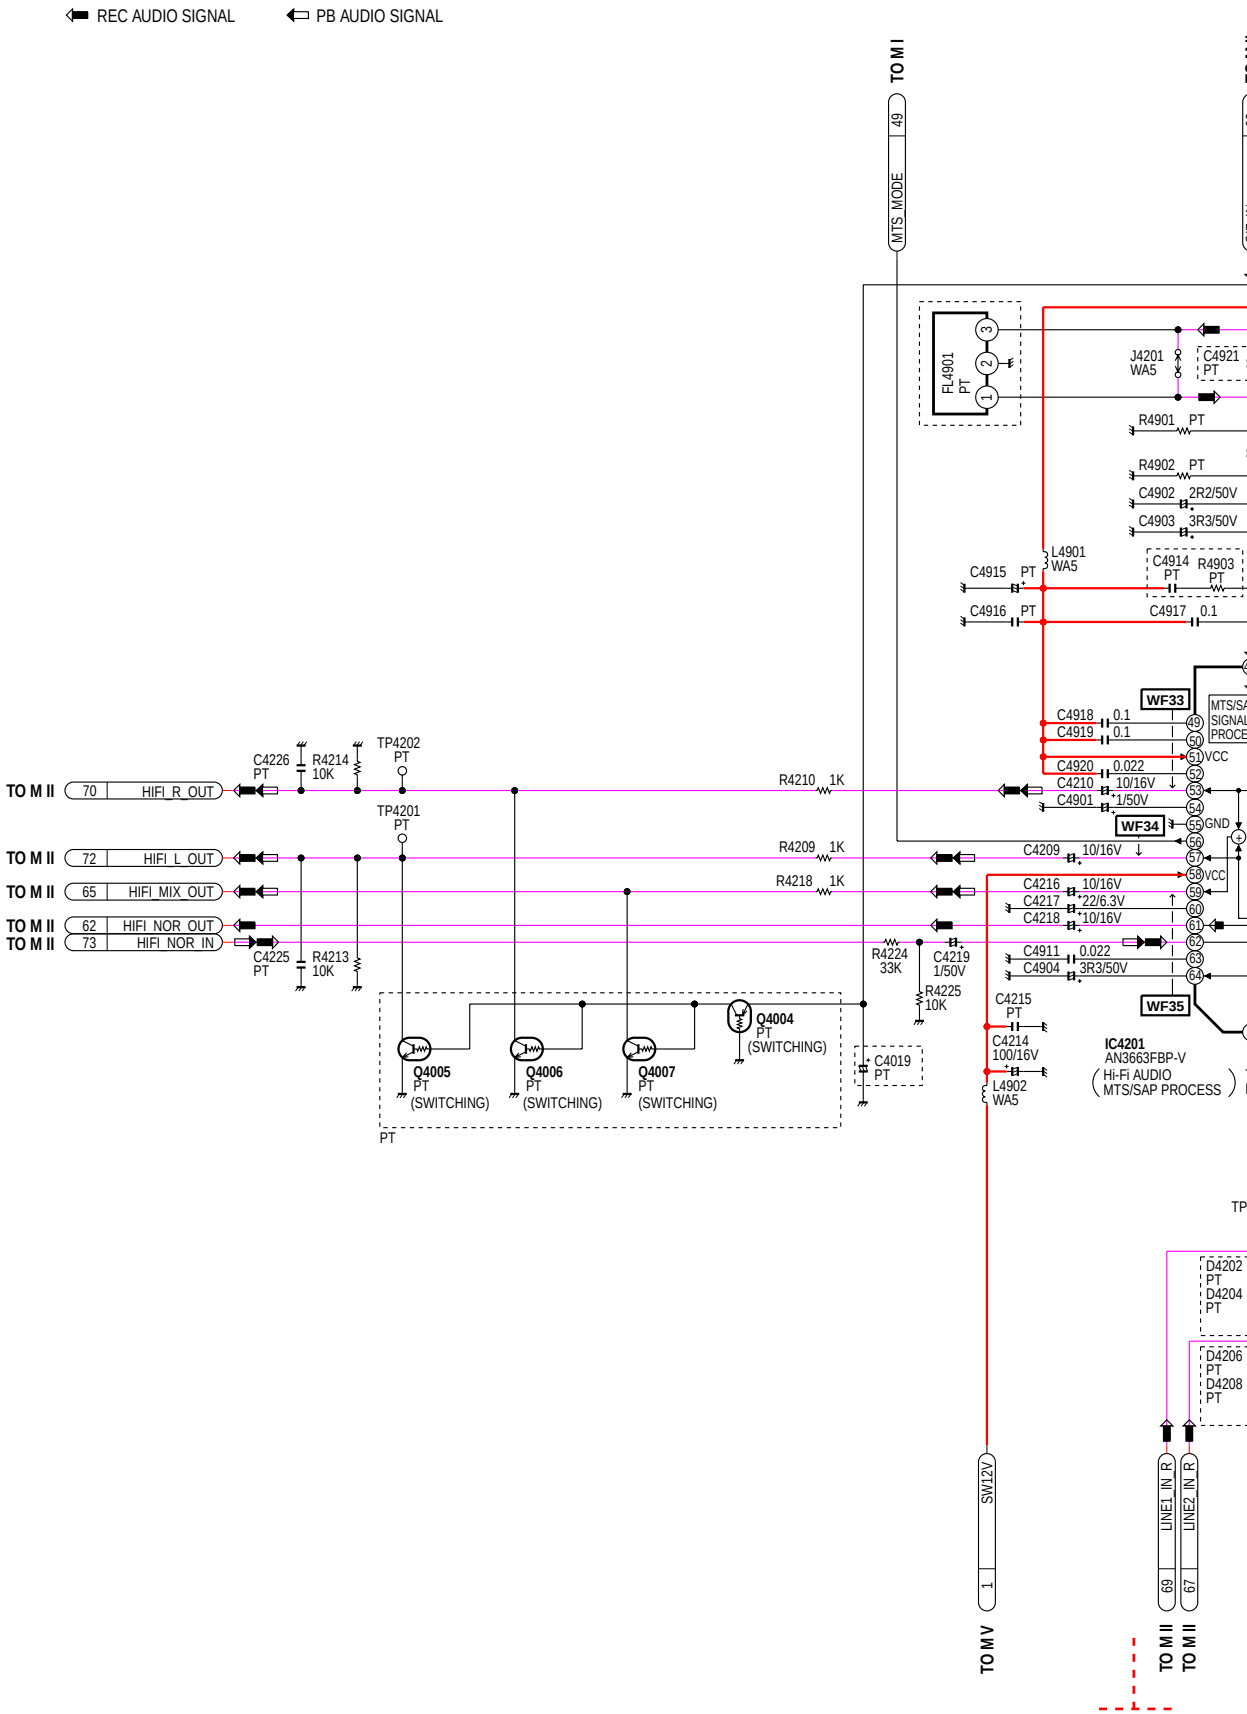

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

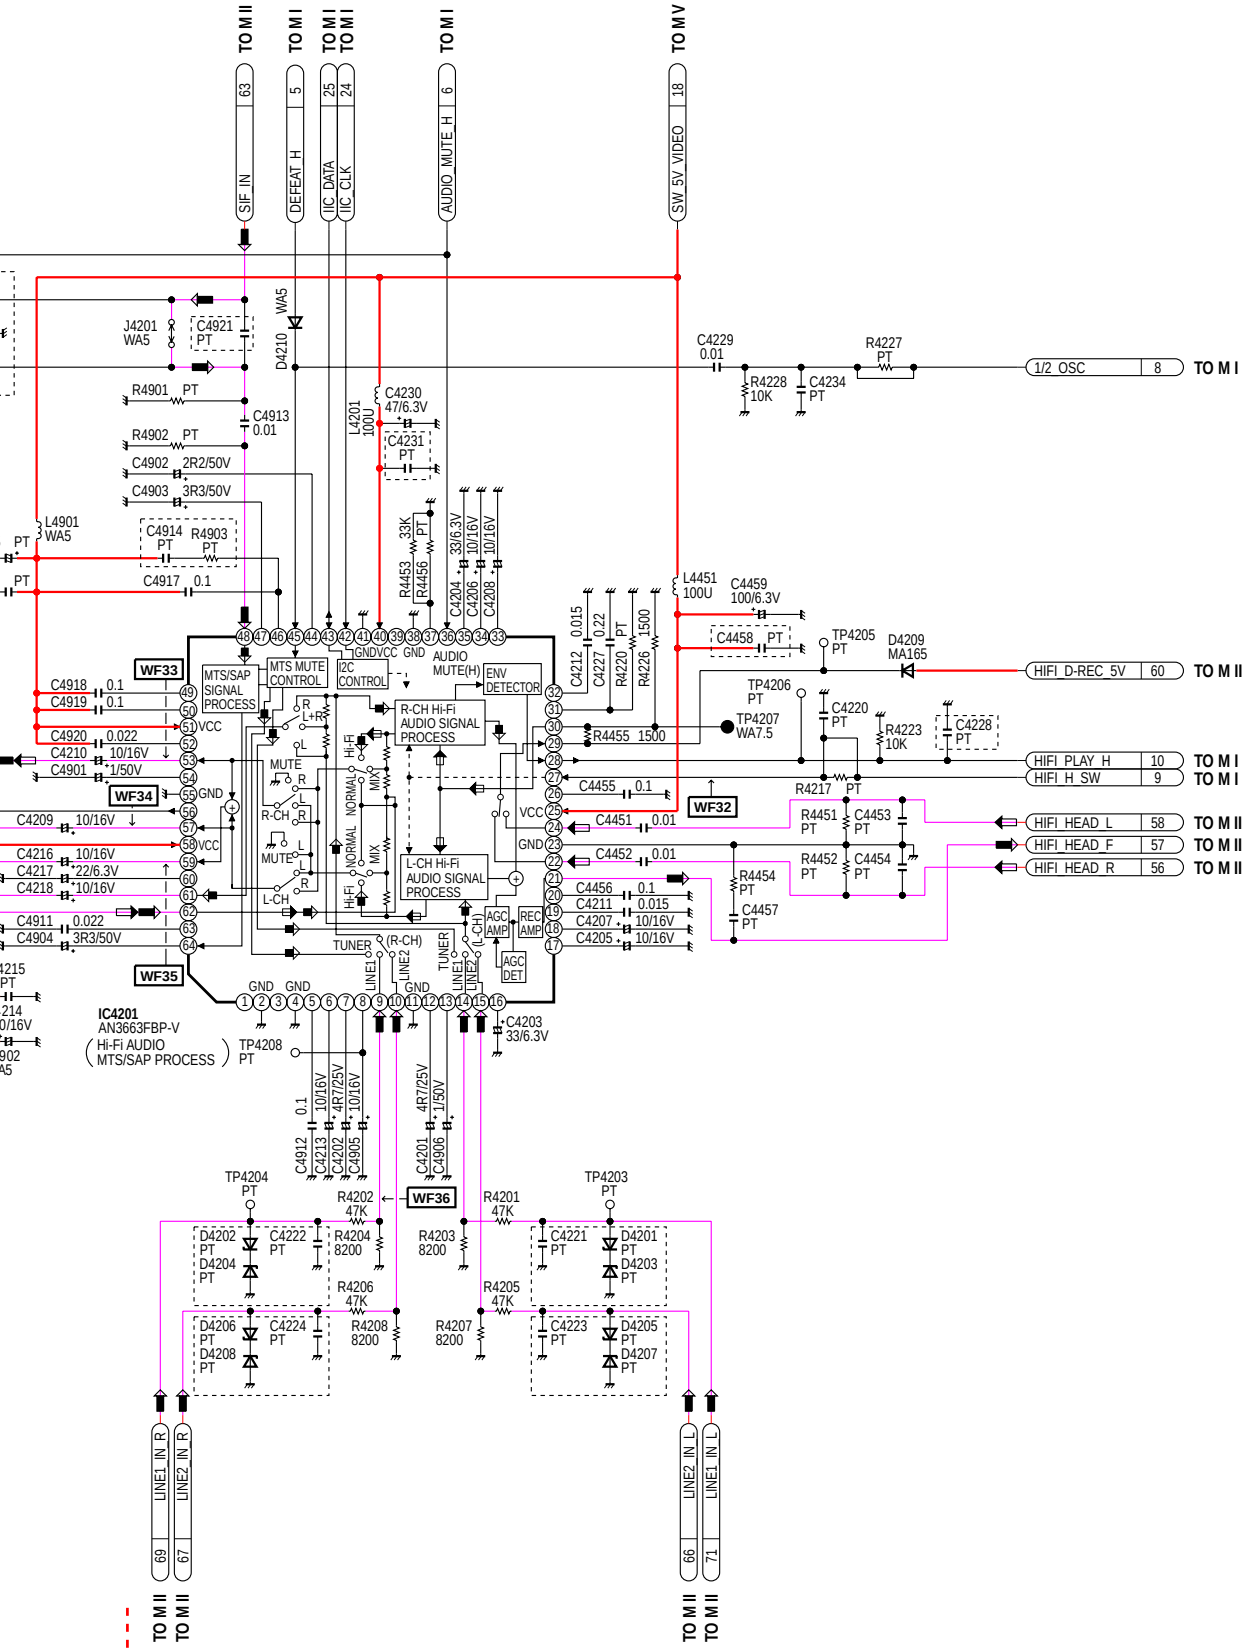

LSJB2006
NV-SJ4130PN
MAIN IV (Hi-fi) SCHEMATIC DIAGRAM (C,D)

MAIN V (POWER SUPPLY) SCHEMATIC DIAGRAM

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE 1.6A 125/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D'T INCENDIE N'I UTILISERQUE DES FUSIBLE DE MÉME
TYPE 1.6A 125/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

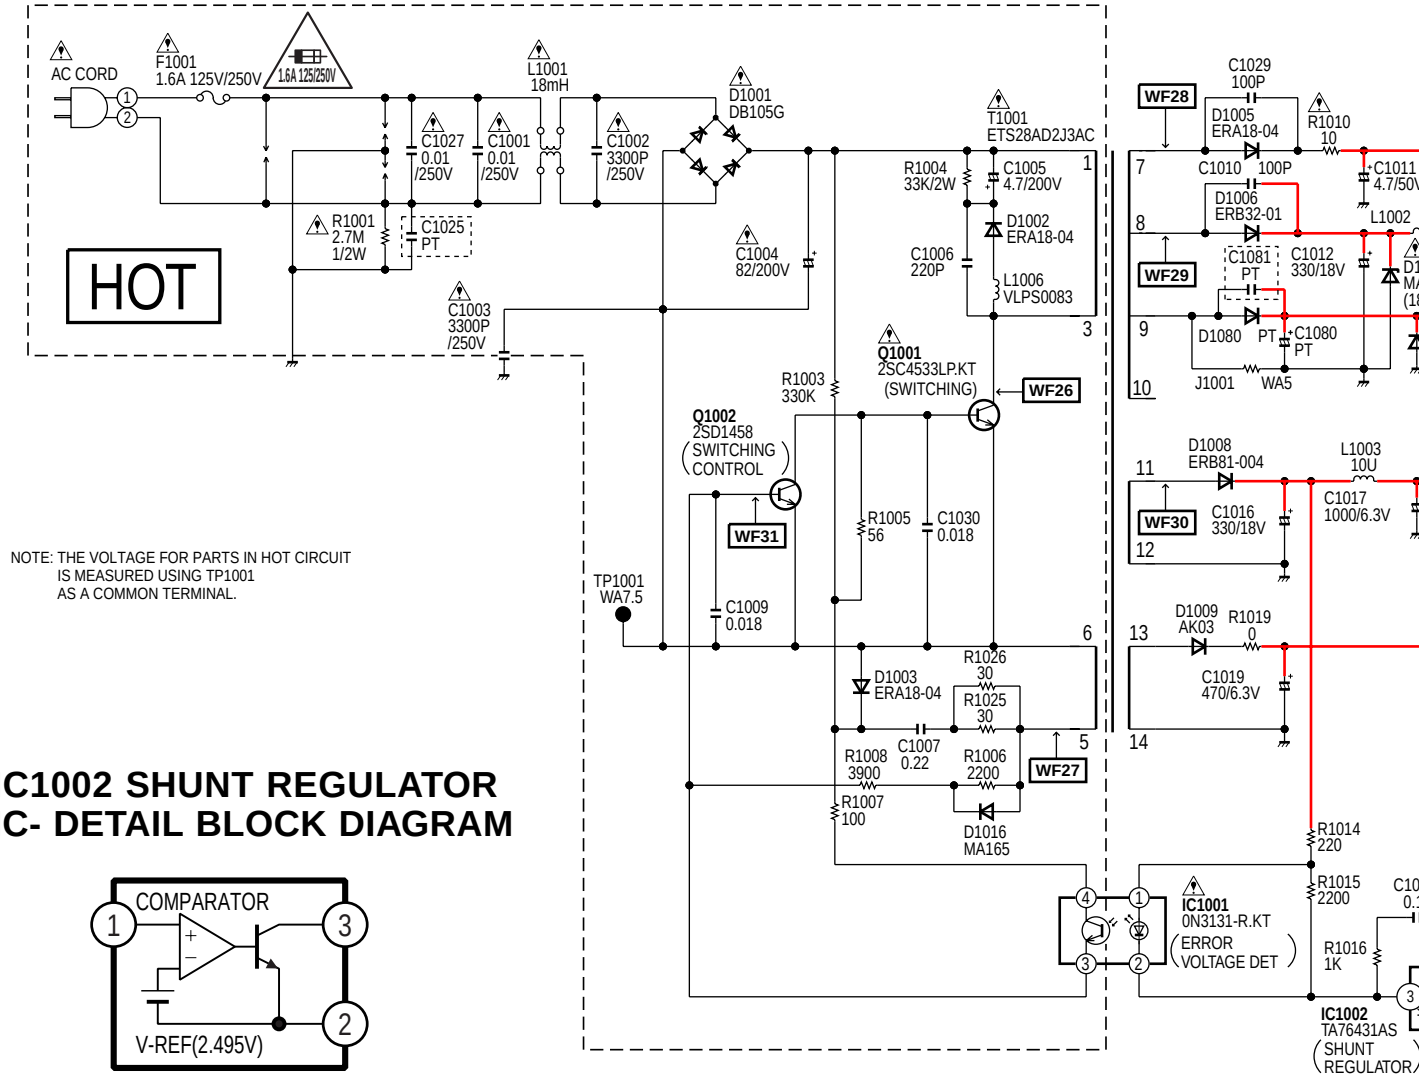

NOTE: THE VOLTAGE FOR PARTS IN HOT CIRCUIT
IS MEASURED USING TP1001
AS A COMMON TERMINAL.

IC1002 SHUNT REGULATOR IC- DETAIL BLOCK DIAGRAM

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

E
FETY.
,

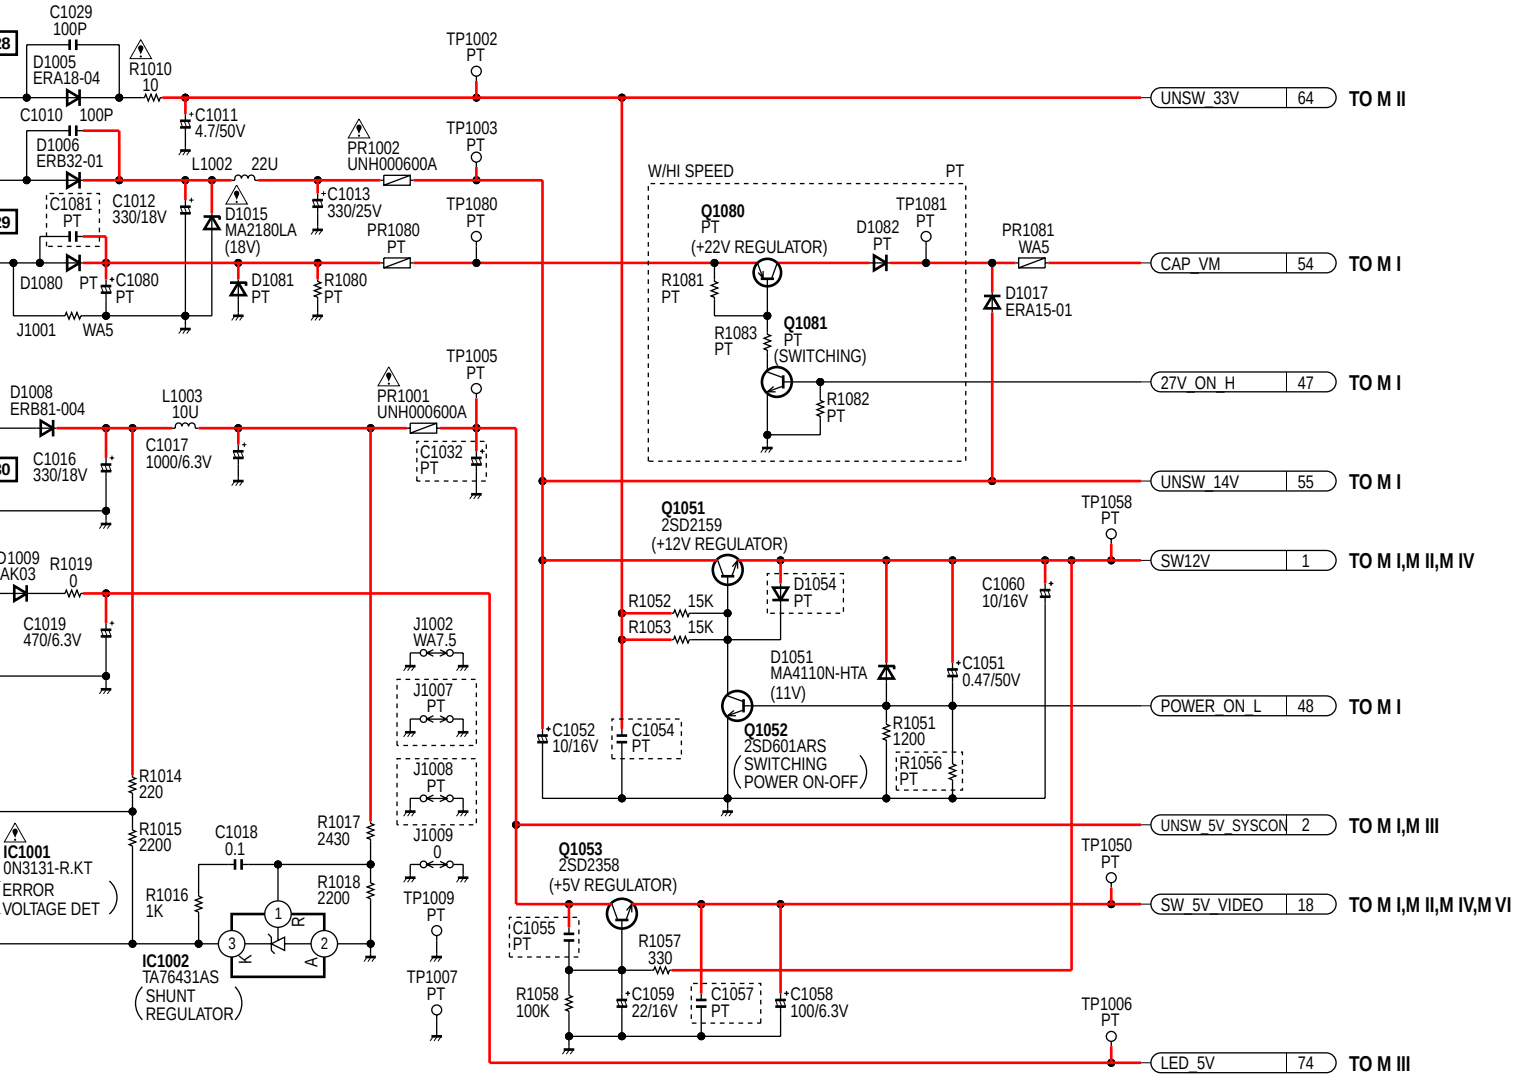

LSJB2006

NV-SJ4130PN, NV-FJ6130PN
MAIN V (POWER SUPPLY) SCHEMATIC DIAGRAM

MAIN VI (ADVANCE) SCHEMATIC DIAGRAM (D)

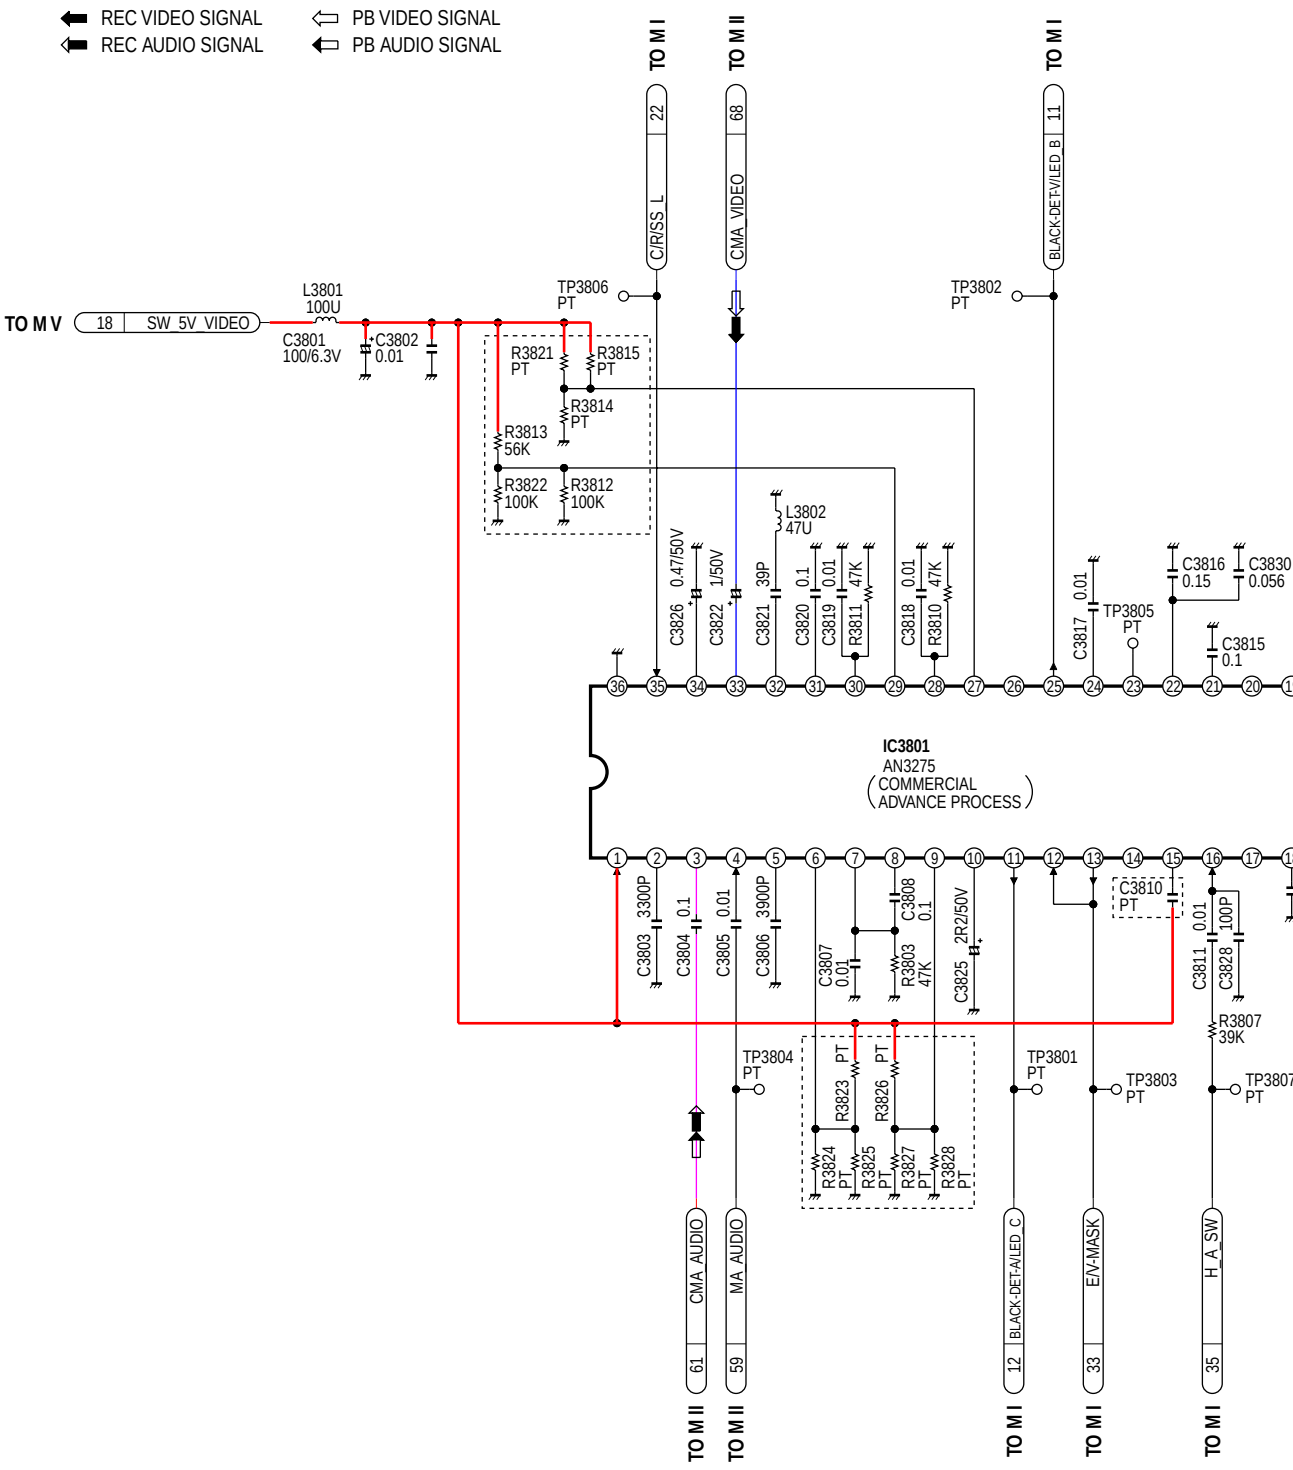

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

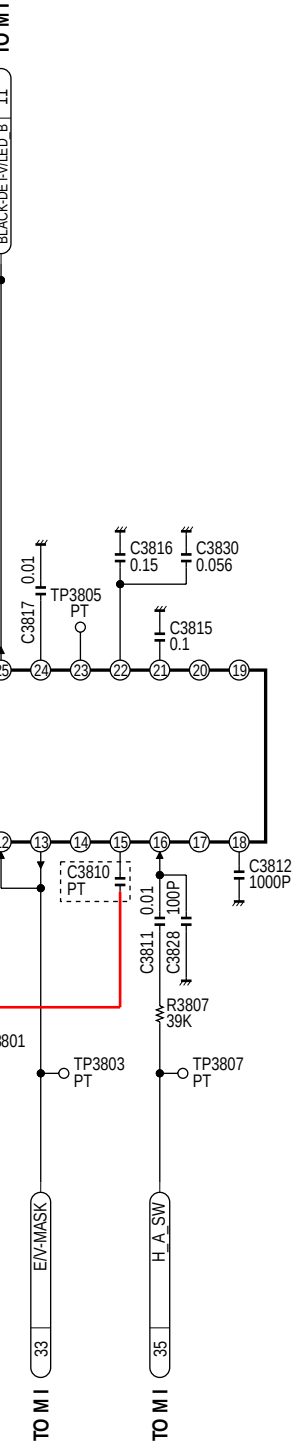

IC3801 COMMERCIAL ADVANCE PROCESS IC- DETAIL BLOCK DIAGRAM

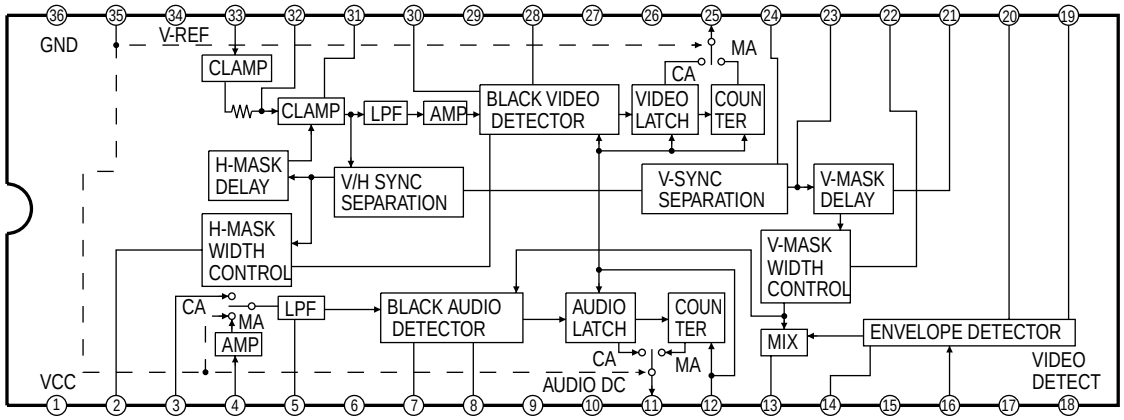

7.3. INTERCONNECTION SCHEMATIC DIAGRAM

INTERCONNECTION SCHEMATIC DIAGRAM

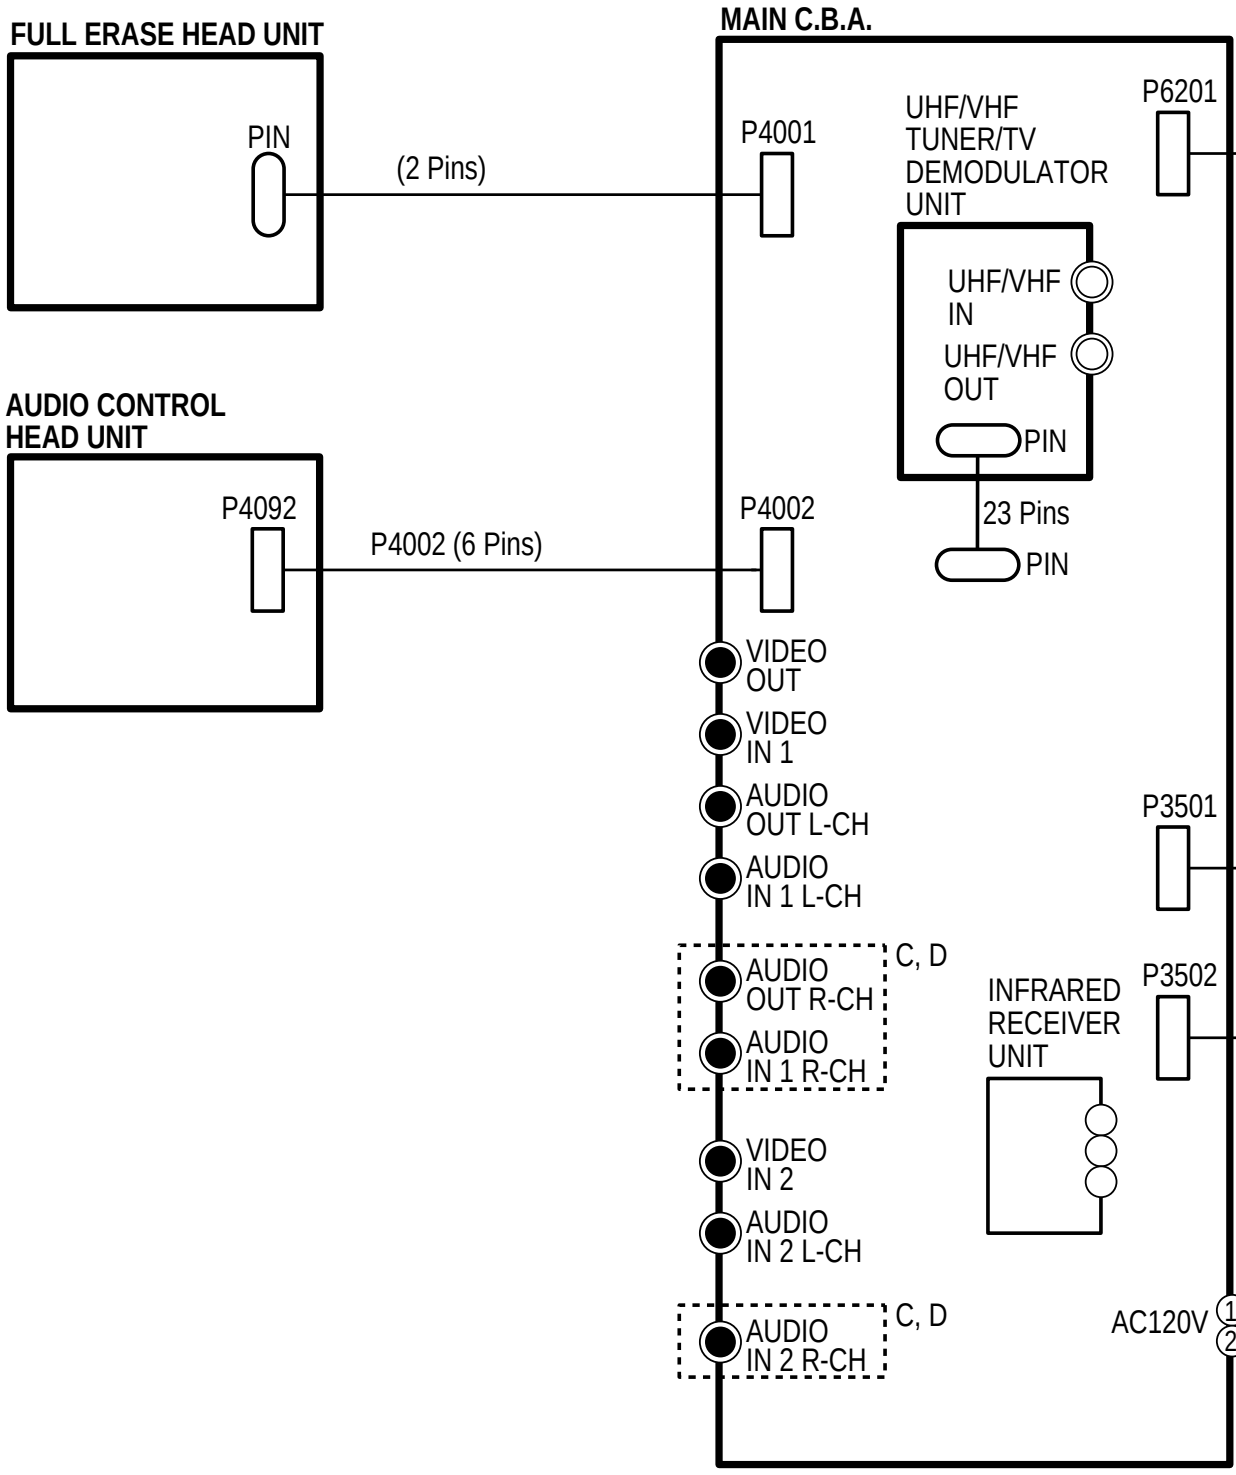

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D
Not used	PT

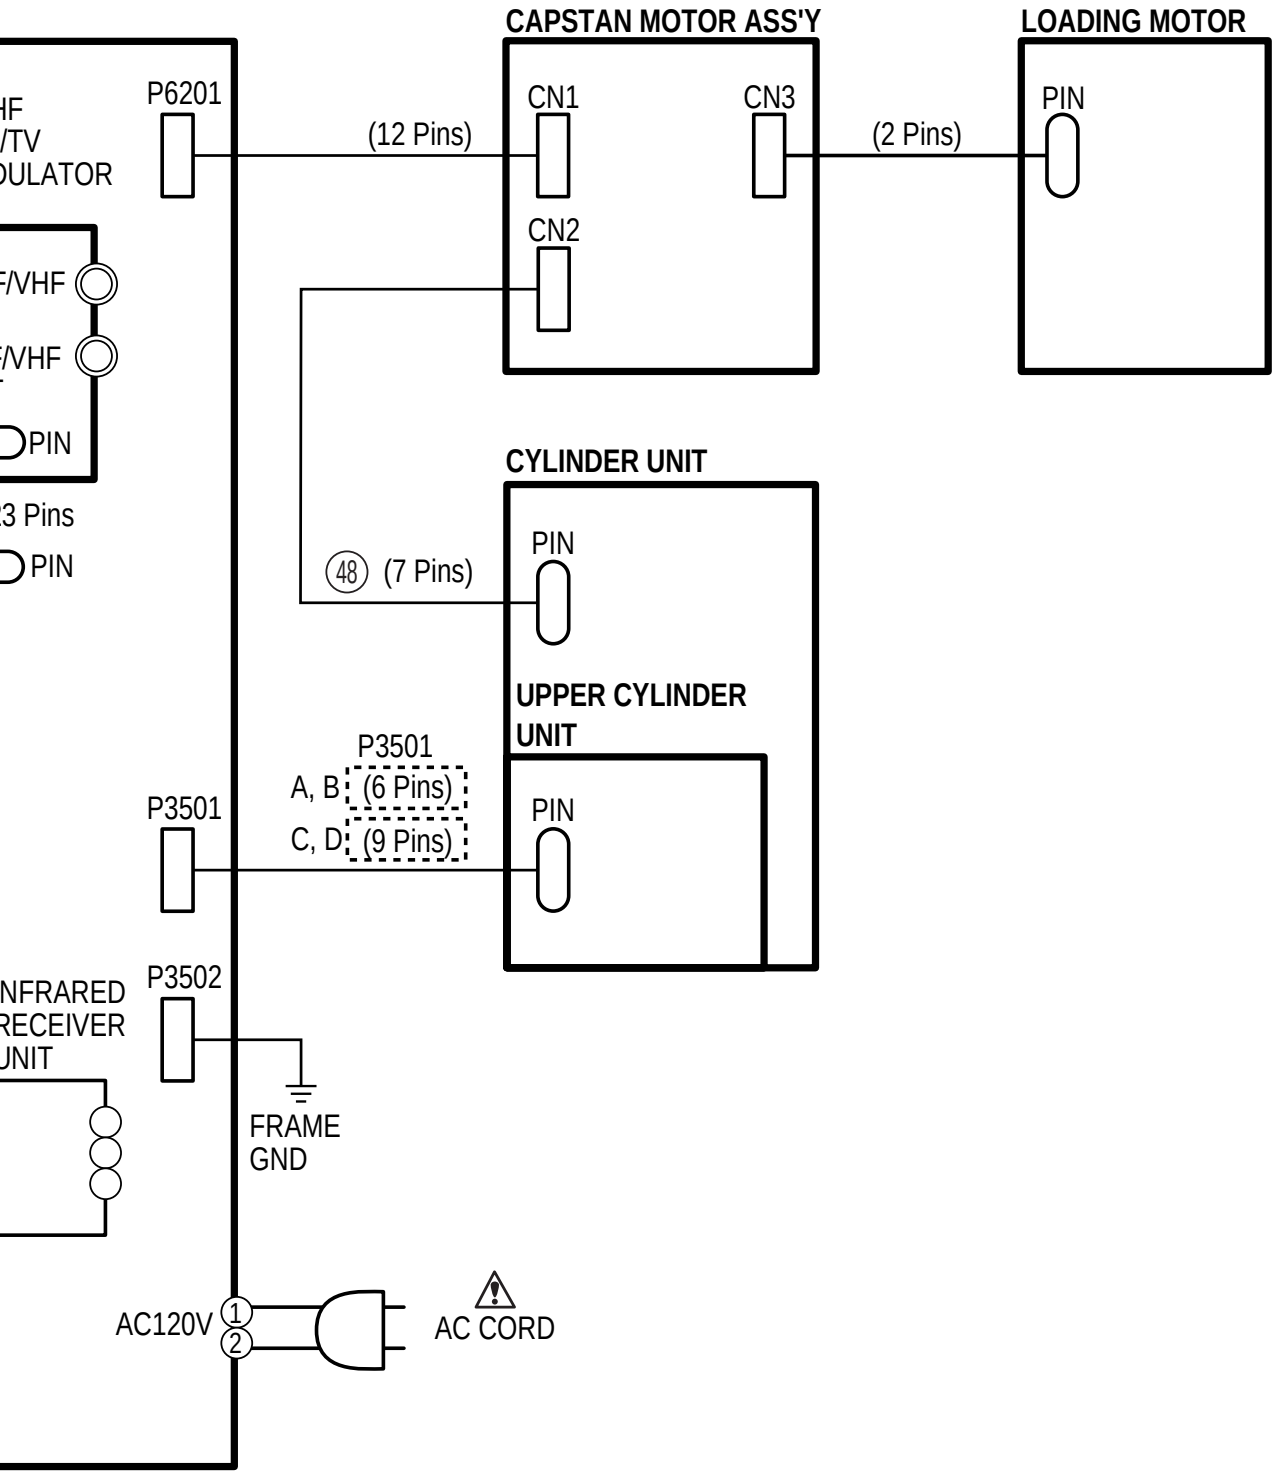

NV-SJ4130PN, NV-FJ6130PN
INTERCONNECTION SCHEMATIC DIAGRAM

Ubicación de los controles

Visualización de Multi-Función

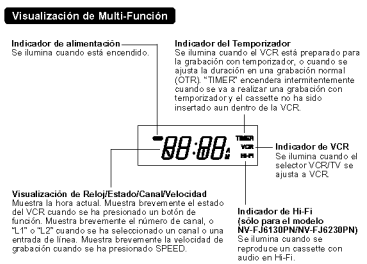
Indicador de alimentación
Se ilumina cuando está encendido.
Indicador del Temporizador
Se ilumina cuando el VCR está preparado para la grabación con temporizador, o cuando se ajusta la duración en una grabación normal (OTR). "TIMER" encendera intermitentemente cuando se va a realizar una grabación con temporizador y el cassette no ha sido insertado aun dentro de la VCR.
Indicador de VCR
Se ilumina cuando el selector VCR/TV se ajusta a VCR.
Visualización de Reloj/Estado/Canal/Velocidad
Muestra la hora actual. Muestra brevemente el estado del VCR cuando se ha presionado un botón de función. Muestra brevemente el número de canal, o "L1" o "L2" cuando se ha seleccionado un canal o una entrada de línea. Muestra brevemente la velocidad de grabación cuando se ha presionado SPEED.
Indicador de Hi-Fi (sólo para el modelo NV-FJ6130PN/NV-FJ6230PN)
Se ilumina cuando se reproduce un cassette con audio en Hi-Fi.

Vista posterior del VCR

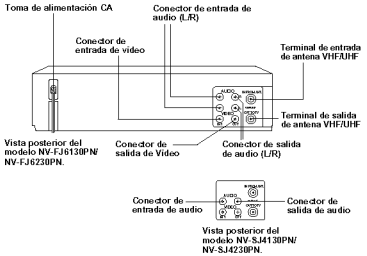
Toma de alimentación CA
Conector de entrada de audio (L/R)
Conector de entrada de video
Terminal de entrada de antena VHF/UHF
Terminal de salida de antena VHF/UHF
Vista posterior del modelo NV-FJ6130P/ NV-FJ6230PN.
Conector de salida de Video
Conector de salida de audio (L/R)
Conector de entrada de audio
Conector de salida de audio
Vista posterior del modelo NV-SJ4130PN/ NV-SJ4230PN.

Nota para el instalador del sistema de CABLE.
Esta nota recordatoria se incluye para llamar la atención del instalador del sistema de CABLE sobre el artículo 820-40 de NEC en EE.UU.(y sobre el Código Eléctrico Canadiense en Canadá), que proporciona líneas maestras de conexiones a tierra correctas, y en particular, especifica que la toma de tierra del cable debe estar conectada al sistema de toma a tierra del edificio, lo mas cerca posible del punto de entrada del cable, si resultara factible.

Matsushita Electric Industrial Co., Ltd
Apartado de Correos Central 288, Osaka 530-91, Japón

P

Impreso en Indonesia
LSQT0630A
S1101-0

Ubicación de los controles

Botones del control remoto

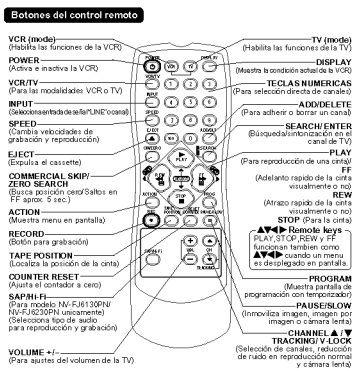
VCR (mode)
(Habilita las funciones de la VCR)
POWER
(Activa e inactiva la VCR)
VCR/TV
(Para las modalidades VCR o TV)
INPUT
(Selecciona entrada de sefal "LINE" coaxial)
SPEED
(Cambia velocidades de grabación y reproducción)
EJECT
(Expulsa el cassette)
COMMERCIAL SKIP/ ZERO SEARCH
(Busca posición cero/ Saltos en FF aprox. 5 sec.)
ACTION
(Muestra menu en pantalla)
RECORD
(Botón para grabación)
TAPE POSITION
(Localiza la posición de la cinta)
COUNTER RESET
(Ajusta el contador a cero)
SAP/HI FI
(Para modelo NV-FJ6130PN/ NV-FJ6230PN unicamente) (Selecciona tipo de audio para reproducción y grabación)
VOLUME +/-
(Para ajustes del volumen de la TV)
TV (mode)
(Habilita las funciones de la TV)
DISPLAY
(Muestra la condición actual de la VCR)
TECLAS NUMERICAS
(Para selección directa de canales)
ADD/DELETE
(Para adherir o borrar un canal)
SEARCH/ENTER
(Búsqueda/sintonización en el canal de TV)
PLAY
(Para reproducción de una cinta/ FF
(Adelanto rapido de la cinta visualmente o no)
REW
(Atraso rapido de la cinta visualmente o no)
STOP (Para la cinta)
▲▼◀▶ Remote keys
PLAY, STOP, REW y FF funcionan tambien como ▲▼◀▶ cuando un menu es desplegado en pantalla.
PROGRAM
(Muestra pantalla de programación con temporizador)
PAUSE/SLOW
(Inmoviliza imagen, imagen por imagen o cámara lenta)
CHANNEL ▲/▼
TRACKING/ V-LOCK
(Selección de canales, reducción de ruido en reproducción normal y cámara lenta)

Botón EJECT(expulsión): Presione para expulsar el cassette. No funciona durante la brabación.

Vista frontal del VCR

En la ilustración se muestra el VCR modelo NV-FJ6130PN/NV-FJ6230PN.

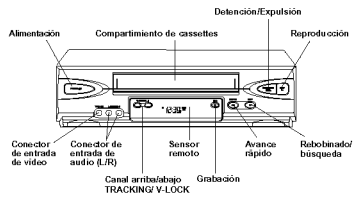

Guia en ingles para rápida consulta/English Quick Use Guide

Connections / Initial Setup (Ready to Play)

Please make all cable or antenna connections before plugging into the AC outlet.
Plugging the VCR Power Cord into an AC wall outlet starts auto channel and clock set.

Connecting

For ANT./Cable ➛ VCR ➛ TV

① **Connect cable from Antenna/Cable to VCR's IN FROM ANT. jack.**

② **Connect VCR's OUT TO TV jack to TV's ANT. IN jack with included RF Cable accessory.**

For DSS/Cable Box ➛ VCR ➛ TV

① **Connect your cable box's OUT jack to the VCR's IN FROM ANT. jack with an RF cable.**

② **Connect VCR's OUT TO TV jack to TV's ANT. IN jack with included RF Cable accessory.**

Doing Initial Setup (Ready to Play)

1 **Turn TV on and tune to channel 3.**

2 **Plug VCR Power Cord into AC wall outlet. VCR comes on and auto channel and clock set starts.**
- If screen below does not appear, check VCR - TV connection and, if TV is tuned to channel 3, try switching it to channel 4.
- To change VCR's output channel, please refer to "VCR's Output Channel" in Advanced Operations book.(p. 12).

Plugging the AC Power Plug into an AC outlet

If you use a cable box, turn it on and set it to the Public Broadcasting Station (PBS) channel in your time zone. If you use DSS receiver, it must be turned off.

WARNING
Over tightening "Nut type" RF coaxial cables may damage jacks. Finger tighten only.

3 **Settings are made automatically. When setup is done, this screen appears.**

If "AUTO CLOCK SET IS INCOMPLETE" appears, manually set clock. See below.

Manual Clock Set

If Auto Clock Set was incomplete.

1 **Press ACTION on remote to display CLOCK menu.**

2 **Press ▲▼ to select the month and ▶ to set. In the same manner, select and set the date, year, time, and DST (daylight saving time).**

3 **Press ACTION to start clock and exit.**

Guia en ingles para rápida consulta/English Quick Use Guide

Playback a Tape

1 **Insert a tape.**
- **Loose or peeling labels may cause tape jam.**

2 **Press PLAY** to play tape.
- If tape has no rec tab (p. 3), auto play begins.

Special Features During Play

■ **Forward/Reverse Scene Search**
➛ **Press FF** or **REW**.
➛ **Press PLAY** to release.
After search has begun, each additional press of FF or REW changes speed as shown below.
[SLP] : Approx. 21X ↔ Approx. 9X
[LP] : Approx. 9X ↔ Approx. 7X
[SP] : Approx. 7X ↔ Approx. 3X
If at 21X, 9X, or 7X speed the picture is interrupted, change speed to 9X, 7X, or 3X.

Notes
- Picture interruption may occur with some TVs.
- FF and REW search speed may vary depending on current tape position.

■ **Still (Freeze) Picture**
➛ **Press PAUSE/SLOW**.
➛ **Press PLAY** to release.

■ **Frame by Frame Picture**
➛ **Press PAUSE/SLOW** in Still mode.
➛ **Press PLAY** to release.

■ **Slow Motion Picture**
➛ **Hold down PAUSE/SLOW** in Still mode.
➛ **Press PLAY** to release.

Notes
- These features work best in SP or SLP mode.
- The sound will be muted.
- To reduce picture noise, see "Manual Tracking Control" on p. 3.
- After VCR is in Still or Slow mode 3 minutes, it auto switches to Stop mode to protect the tape and the video heads.

3 **Press STOP** to stop tape.

■ **Press REW or FF** in Stop mode to Rewind or Fast Forward tape.

■ **Press EJECT** on remote, or **STOP/EJECT** on VCR to eject tape.

Record on a Tape

1 **Insert a tape with a record tab** (p. 3).

2 **Press CH ▲/▼ or NUMBER keys** to select the channel.
- For "LINE" input, see p. 9 of "Advanced Operations" book.
- If channel over 100, first press 100 key then the other 2 digits.

3 **Press SPEED** to select record speed (p. 3).

4 **Press REC** to start recording.
- To edit, **press PAUSE/SLOW** to pause, and again to resume recording.

5 **Press STOP** to stop recording.

■ **One Touch Recording** (record in progress)
Press REC repeatedly to set length as follows:
30 min. ➛1 hr ➛1:30 ➛2:00 ➛3:00 ➛4:00 ➛exit.
The VCR shuts off at the length set.

■ **Record one station, watch another**
Press VCR/TV
("VCR" goes out on Multi Function Display),
➛ select channels at TV (recording continues).

■ **Select channels at VCR** (in STOP or PAUSE mode)
Press VCR/TV
("VCR" lights up on Multi Function Display),
➛ select channels at VCR.

Notes
- **Watching one channel and recording another is not possible when using Cable Box or DSS Receiver.**
- After 5 minutes in Pause mode, VCR stops to protect the tape and the video heads.

Timer Recording

1 **1) Press PROG.**
2) Press ▼ to display program screen.

2 **1) Set record DATE, press ▲▼** to select:
1~31= one time, or DAILY= MON~FRI, or WEEKLY= same time each week and **press ▶**.
2) Set remaining items, press ▲▼ to select and **press ▶** to set START/ STOP times, CH(channel) or LINE input (p. 9 of Advanced Operations book), and tape speed (p. 3).
Press PROG to end programming.

3 **To Enter More Programs**
Press ▲▼ to select and **press ▶** to set an unused program. Then repeat step 2 above.
Or, **press PROG** to exit.

4 **Press POWER off** to set the timer. ("TIMER" lights on Multi Function Display.)

Review, Replace, or Clear Program

(Recording is not in progress)

a **1) Press PROG.**
2) Press ◀▶ to select LIST.

b
Press ▲▼ to select desired program.

c **To Replace program...**
1) Press ▶ to display.
2) Repeat Step 2 (above) to set new programs.

or

To Clear program...
Press ADD/DLT.

d **Press PROG** to end the program.

Cancel a Timer Recording

(Recording is in progress)

Press POWER and then **STOP** within 10 seconds to cancel the Timer Recording.
(The TIMER indicator goes out on Multi Function Display.)

Guia en ingles para rápida consulta/English Quick Use Guide

Before Requesting Service

Check the following points once again if you are having trouble with your VCR.
(BO : refers to "Basic Operations" Instruction book.)
(AO : refers to "Advanced Operations" Instruction book.)

Power	Correction
No power...	• Completely insert Power Plug into an AC outlet. • Set POWER button to on. • Make sure power source is active.
Recording & Playback	**Correction**
TV program cannot be recorded...	• Check connections between VCR, external antenna, and TV. • Check connections selection. (BO p. 4, AO p. 3) • Make sure your antenna system (CABLE or TV) is correctly set. (Channels [AO p. 12]) • Make sure cassette record tab is intact. (BO p. 3)
Timer recording cannot be performed...	• Confirm that clock is set to current time and date. • Make sure Cable/DSS box (if used) is left on and tuned to channel to be recorded. • Set recording start/stop times correctly. (BO p. 6) • Make sure VCR POWER button is pressed off. (BO p. 6) • Timer recording may not be performed or continued if a power interruption occurs before or during a Timer Recording, even after power is restored.
There is no playback picture, or the playback picture is noisy or contains streaks...	• Select channel 3 or 4 on TV to match VCR output channel (3 or 4) (BO p. 4) or select LINE. • Set VCR/TV selector to "VCR." • Adjust TRACKING control in either direction. (BO p. 3) • Try Head Cleaning. (BO p. 3)
Special effects playback, picture may contain some vertical jitter when using a TV with an Automatic Vertical Hold Control...	• Set TV's Vertical Hold Control to MANUAL, then adjust.
VCR cannot be controlled...	• Make sure VCR power is on. • Check Remote batteries. • Make sure VCR LOCK is set to off. (AO p. 10) • Make sure Remote is in proper mode. (AO p. 2) • Make sure Timer Record is not in progress.
Remote Control	**Correction**
VCR cannot be remote controlled...	• Make sure VCR power is on. • Make sure Remote is in VCR mode. • Aim Remote Control directly at remote sensor on VCR. (BO p. 8) • Avoid any object blocking signal path. • Check Remote batteries. (BO p. 3) • Make sure VCR LOCK is set to off. (AO p. 10) • Exposing VCR remote sensor to direct fluorescent or outdoor light may cause signal interference.
ACTION and PROG buttons do not respond...	• Check connections between VCR, external antenna, and TV. • Press VCR button for VCR mode. (AO p. 2) • Check Remote batteries. (BO p. 3)
Miscellaneous	**Correction**
Programs cannot be viewed on TV...	• Make sure TV power is on. • Make sure TV is set to output of VCR. • Check connections between VCR, external antenna, and TV. • Set VCR/TV selector to "TV." (BO p. 6) • Make sure proper signal source is selected.
Video cassette cannot be inserted...	• Insert the cassette with window side up, record tab facing you. • Check if a tape is already in the unit.
Video cassette cannot be removed...	• Completely insert Power Plug into an AC outlet.
Video cassette ejects when a recording is started or the power is turned off for timer recording...	• Make sure cassette record tab is intact. (BO p. 3)
In Stop mode, the motor (CYLINDER) continues to rotate...	• To enable Quick play mechanism, the cylinder will rotate for about 3 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.

Panasonic

VHS

Videograbadora

Instrucciones de funcionamiento (Operaciones Básicas)

Para operaciones avanzadas, vea el apartado "Operaciones Avanzadas".

Models No. NV-SJ4130PN/NV-FJ6130PN NV-SJ4230PN/NV-FJ6230PN

Contenido

Medidas de seguridad y precauciones importantes 2
Antes de la utilización de la unidad 3
Conexiones/Configuración inicial (Ready to Play) 4
Reproducción de un cassette/
Grabación en un cassette 5
Grabación con temporizador 6, 7
Ubicación de los controles 8, 9
Guia en ingles (English) para rapida consulta .. 10, 11, 12

Rogamos que lea atentamente estas instrucciones antes de realizar la conexión, poner en funcionamiento o ajustar este produto. Además, rogamos que guarde este manual, por si fuera necesario en el futuro.

LSQT0630A

Medidas de seguridad y precauciones importantes

PARA SU SEGURIDAD, LEA ATENTAMENTE Y GUARDE EN UN LUGAR SEGURO TODAS LAS INSTRUCIONES SOBRE SEGURIDAD Y FUNCIONAMIENTO. CUMPLA CON TODAS LAS ADVERTENCIAS QUE FIGURAN EN EL MANUAL Y EN LA UNIDAD.

INSTALACIÓN

1 PRECAUCIÓN CON LA FUENTE DE ALIMENTACIÓN
El equipo solo debe ser conectado a una fuente de alimentación como la indicada en la unidad o en este manual. Si hace necesario, haga revisar la fuente de alimentación de su hogar por parte de la Compañía de Suministro Eléctrico o por parte de su Distribuidor de Productos de Video.

2 CONECTOR POLARIZADO O CON TOMA A TIERRA
Como característica de seguridad, este producto de video viene equipado con un enchufe de cable de alimentación polarizado (polo una parte es más ancha que la otra), o con un enchufe del tipo con toma a tierra de tres patas.

PRECAUCIÓN CON EL ENCHUFE POLARIZADO
Este enchufe sólo entrará en la toma en un sentido. Si no pudiera introducir el enchufe a fondo, intente darle la vuelta. Si aún así no entrara, llame a un técnico electricista para que le instale una toma de red adecuada. No desactive esta función de seguridad manipulando el enchufe de ninguna manera.

PRECAUCIÓN CON ENCHUFES CON TOMA A TIERRA
Este enchufe sólo entrará en una toma con conexión a tierra de tres orificios. Si hace necesario, que un técnico electricista le instale la toma de red adecuada. No desactive esta función de seguridad manipulando el enchufe de ninguna manera.

3 CABLE DE ALIMENTACIÓN
Asegúrese de que los cables de alimentación son colocados de tal manera que no serán pisados sobre ellos, ni nada sobre ellos, o que estén en el paso de tráfico al caminar. Si se utilizara un cable alargador, asegúrese de que también disponga de un enchufe polizitado o con toma a tierra y de que puede conectarse fácilmente. Los cables pelados, los enchufes averiados o hiperguiados constituyen un peligro y deben ser examinados por un técnico cualificado del servicio técnico. Las fuentes eléctricas de la red general sobrecargadas y los cables de extensión constituyen riesgos de incendio y han de evitarse en lo posible.

4 NO BLOQUEE LOS ORIFICIOS DE VENTILACIÓN
Las aberturas de ventilación del mueble liberan el calor generado durante el funcionamiento de la unidad. Para asegurar un funcionamiento seguro de dentro de la unidad podría ocasionar daños que pueden llevar a riesgos de incendio o daños por caídas en las cassettes utilizados.

5 EVITE UBICACIONES MUY CALIENTES O SOMETIDA A CAMBIOS BRUSCOS DE TEMPERATURA
No coloque la unidad encima o cerca de cualquier tipo de calefactor o regulador, bajo la luz solar directa, dentro de vehículos, etc.. No instale la unidad inútilmente este sitios con variaciones extremas de temperatura. Si la unidad estuviera trasportanto de un sitio frío sobre todo, la humedad puede condensarse en la unidad y en la cinta.

6 PARA EVITAR LESIONES PERSONALES
- No coloque la unidad sobre superficies inclinadas. No coloque esta unidad sobre ningún carro que no sea firme, nivelado y que sea adecuadamente fuerte. La unidad podría caerse y producir graves lesiones a niños o adultos y dañarse la unidad misma.
- La combinación de aparato y carrito debe moverse con cuidado. Las paradas súbitas, una fuerza excesiva y la superficie irregulares pueden ocasionar el vuelco de la combinación de aparato y carrito.
- Siga atentamente las instrucciones de funcionamiento y utilice los accesorios recomendados por el fabricante si desea funcionar este unidad o el conectarla a otros equipos.

INSTALACIÓN DE LA ANTENA EXTERIOR

1 CONEXIÓN SEGURA DE LA ANTENA Y DE LOS CABLES
Si se conecta una antena exterior o de otra clase de cable conectado al sistema de cable debe proporcionar una forma de conexión a tierra para proporcionar protección contra la sobretensión causadas por descargas eléctricas y subidas de corrientes. La sección 810 del Código Eléctrico Nacional, ANSI/NFPA 70 en Canadá, la parte 1 del Código Eléctrico Canadiense) proporciona información con respecto a la correcta a tierra con mástil del mástil y la estructura de soporte, conexión a tierra de los cables de bajada de antena a una unidad de descarga, tamaño de los conductores a tierra, ubicación de la unidad de descarga de antena y requisitos para los electrodos a tierra y requisitos del electrodo de toma a tierra.

2 MANTENGA LA ANTENA LIBRE DE LÍNEAS O CIRCUITOS DE ALTO VOLTAJE
Un sistema de antena exterior debe ser colocado bien alejado de líneas de alimentación, las eléctricas o circuitos de alimentación para que nunca esté en contacto con tales fuentes de alimentación si se cayera. Al instalar una antena exterior, debe tenerse mucho cuidado para evitar tocar líneas de alimentación, circuitos u otras fuentes de alimentación y que ello podría resultar mortal. Debido a los riesgos implicados en la instalación de una antena, tal operación debe dejarse a un profesional.

UTILIZACIÓN DE LA UNIDAD DE VÍDEO

Si la unidad ha estado almacenada o se traslada a una nueva ubicación, remítase primero a la sección de INSTALACIÓN de estas medidas de seguridad.

1 MANTENGA ESTA UNIDAD DE VÍDEO ALEJADA DEL AGUA Y DE HUMEDAD DE CUALQUIER TIPO
2 SI EL EQUIPO ES EXPUESTO A LA LLUVIA, HUMEDAD, O FUENTES DE LÍQUIDOS, desenchufe la unidad y llame a un revistada por un técnico cualificado antes de volver a utilizarla.
3 DURANTE LA TORMENTA ELÉCTRICA
Durante una tormenta con rayos, tanto en interiores como en el exterior, o antes de dejar la unidad sin utilizar durante largos períodos de tiempo, desconecte todos los equipos de la fuente de alimentación así como la antena y el sistema de cableado.
4 AL ENCHUFAR LA UNIDAD
- No vierta nunca líquidos en la ranura o agua. NO LA HAGA FUNCIONAR si se ha derramado líquido dentro de la unidad. Desenchufe la unidad inmediatamente y haga que revisada por un técnico del servicio técnico del servicio técnico. Pueden producirse incendios o descargas eléctricas de tracto de contacto de cable eléctrico causados por el contacto de líquidos con el interior de la unidad.
- No deje caer ni introduzca ningún objeto por las aberturas de la unidad. Algunas piezas internas tienen un voltaje peligroso y el contacto con ellas puede producir descargas eléctricas o incendios.
- Evite colocar la unidad directamente encima o debajo del televisor, ya que esto podría causar interferencias eléctricas. Mantenga cualquier tipo de imán alejados de equipos electrónicos.

5 UTILIZACIÓN DE ACCESORIOS
Utilice sólo accesorios recomendados por el fabricante para así evitar riesgos de incendio, descargas eléctricas y otros peligros.

6 LIMPIEZA DE LA UNIDAD
Desenchufe la unidad. Luego utilice un paño limpio y seco, sin tratamiento químico para quitar suavemente el polvo o suciedad. NO UTILICE productos de limpieza, aerosoles, o aire comprimido que podrían causar una excesiva de polvenización o introducirse en la unidad y causar averías eléctricas. Cualquier preferencia, como cera, cinta adhesiva, etc., podría aminorar localizado de la superficie. La exposición a ambientes muy secos, áreas húmedas o polvorientas puede estar de manera adversa esta las piezas internas.

SERVICIO

1 EL USUARIO NO DEBE REALIZAR NINGUNA OPERACIÓN DE SERVICIO TECNICO POR SI MISMO
Se aconseja de observar estrictamente las detalladas instrucciones de funcionamiento, este producto de video no funcionara correctamente, no intente abrir o retirar las tapas, o realizar cualquier ajuste no indicado en este manual. Desenchufe la unidad y llame a un técnico cualificado del servicio técnico.
2 GUARDAN NECESARIO PIEZAS DE RECAMBIO
Asegúrese de que el técnico de servicio utiliza piezas especificadas por el fabricante, o de las mismas características que las piezas originales. La utilización de piezas no autorizadas puede acarrear un de incendios, sacudidas eléctricas, u otros peligros.
3 QUE EL TECNICO DE SERVICIO TÉCNICO REALICE UNA COMPROBACIÓN DE SEGURIDAD
Después de cualquier servicio o reparación de la unidad, solicite al técnico de servicio que realice una completa comprobación de seguridad tal como se describe en la literatura de servicio. No hacer del fabricante para asegurarse así que la unidad de video se encuentra en condiciones de funcionamiento seguras.

PRECAUCIONES DE SEGURIDAD

Advertencia : **Para evitar incendios o peligros de sacudidas eléctricas, no debe exponerse este equipo a la lluvia o la humedad.**

PRECAUCIÓN : **Para evitar sacudidas eléctricas, haga que coincidan los enchufes de puntas grandes con las tomas grandes e inserte a fondo.**

RIESGO DE SACUDIDA ELECTRICA NO ABRIR
PRECAUCIÓN: PARA EVITAR LA SACUDIDA DE ELECTRICIDAD, NO QUITE LA CUBIERTA (O EL PANEL TRASERO). NO HAY PIEZAS QUE PUEDAN SER REPARADAS POR EL USUARIO. CONSULTE AL PERSONAL DE SERVICIO CUALIFICADO.

Este símbolo advierte al usuario de que hay voltaje sin aislamiento dentro de la unidad de suficiente magnitud como para ocasionar sacudidas eléctricas. Por lo tanto, resultaría peligroso realizar cualquier tipo de contacto con esta pieza interna de la unidad.

Este símbolo alerta al usuario de que se ha incluido importante literatura sobre el funcionamiento y mantenimiento de esta unidad. Por tanto, debe leerse atentamente tal literatura a fin de evitar cualquier problema.

Advertencia FCC: Cualquier cambio o modificación no autorizado de este equipo anulará la autorización al usuario para hacer funcionar la unidad.

FCC Warning: Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

Antes de la utilización de la unidad

¡Enhorabuena!

por la adquisición de uno de los productos más sofisticados y fiables del mercado actual. Si lo utiliza correctamente, le ofrecerá a usted y su familia años de disfrute. Le rogamos que proporcione la información siguiente.
El número de serie se encuentra en la pestaña situada en la parte posterior del VCR.

- Fecha de compra _____
- Compra de distribuidor _____
- Dirección del distribuidor _____
- Teléfono del distribuidor _____
- Nº de modelo _____
- Nº de serie _____

Accesorios

- ☐ Control remoto (NV-SJ4130PN) (NV-SJ4230PN)
- ☐ Pilas (2)
- ☐ Cable coaxial RF (NV-PJ6130PN) (NV-PJ6230PN) VJAS0196
- ☐ Adaptador del enchufe VJSS0070 (NV-SJ4230PN) (NV-PJ6230PN)



Aquí se muestra el control remoto del modelo NV-PJ6130PN/NV-PJ6230PN.

Carga de pilas



☐ **Precaución al cambiar las pilas**
- No mezcle pilas viejas con nuevas.
- No mezcle pilas alcalinas con pilas de manganeso.

Prevención de borrados accidentales del cassette

Rompa la pestaña de grabación.

Pestaña

Destornillador

Para volver a grabar

Tape el orificio con cinta adhesiva de celofán.

Hora de grabación/reproducción

En esta unidad sólo deberá utilizar cintas que lleven la marca **VHS**.

Ajuste de velocidad de cinta	Tipo de cassette de video		
	T60	T120	T160
SP (reproducción normal)	1 hora	2 horas	2 horas 40 minutos
LP (reproducción larga)	2 horas	4 horas	5 horas 20 minutos
SLP (reproducción extralarga)	3 horas	6 horas	8 horas

Limpieza de cabezales

Cintas viejas o dañadas pueden trabar la cabeza.

Sensor de Obstrucción de la cabeza de video

La pantalla de corrección aparecerá durante la reproducción si algun problema de obstrucción se presenta. Para remover esta pantalla presione PLAY.

- **Use solamente cassette limpiador del tipo seco.** (Se recomienda la pieza No NV-TCL39PT).
- Siga cuidadosamente las instrucciones de la cinta limpiadora. Ademas su uso excesivo reduce el tiempo de vida de la cabeza.

Limpieza de la VCR

Use un pedazo de tela suave y seco o aspire para remover el polvo acumulado en orificios y ranuras. Puede utilizar un pedazo de tela humedecido con no abrasivos o limpiador antiestatico.

Precaución: Alcohol y otros solventes pueden dañarla por completo.

Especificaciones

Fuente de alimentación:	120 CA, 60 Hz (NV-SJ4130PN/NV-PJ6130PN) 110~240 CA, 50 - 60 Hz (NV-SJ4230PN/NV-PJ6230PN)
Consumo de corriente:	Encendido: Aprox. 16 vatios (NV-SJ4130PN/NV-SJ4230PN) Aprox. 23 vatios (NV-PJ6130PN/NV-PJ6230PN) Apagado: Aprox. 2,5 vatios (NV-SJ4130PN) Aprox. 3,0 vatios (NV-PJ6130PN) Aprox. 3,5 vatios (NV-SJ4230PN/NV-PJ6230PN)
Señal de vídeo:	NTSC en color estándar EIA
Sistema de grabación de vídeo:	sistema de exploración de 4 cabezas giratorias helicoidales
Pista de audio:	1 pista (Normal)
Sintonizador:	2 canales (Sonido de audio Hi-Fi) (NV-PJ6130PN/NV-PJ6230PN)
Canales de emisión:	VHF2-13, UHF 14-69
Canales de CABLE:	Banda media A - (114-22) Superbanda J - W (23-36) Hyperbanda AA- EEE (37-64) Banda baja A-5 A-1 (95-99) Canalde CABLEespecial(SA-EX1) Ultrabanda65-94, 100-125
Temperatura de funcionamiento:	5 °C~40 °C (41 °F~104 °F)
Humedad de funcionamiento:	10 %~75 %
Peso:	2,5 kg (5,5 libras).
Dimensiones:	360 (Anch) x 93 (Alt) x 242 (Prof) mm. 14-3/16" (Anch) x 3-11/16" (Alt) x 9-9/16" (Prof)

Nota: Los diseños y las especificaciones están sujetas a cambios sin previo aviso.

Funciones para calidad de imagen

Imagen automática digital
Controla automáticamente la señal de salida de video para reducir ruidos debido al estado de la cinta.

Alineación digital automática
Analiza las señales y ajusta a la mejor calidad de imagen.

Control de tracking manual (para reducir el ruido imagen)
Utilice esta característica en los modos de Reproducción y Cámara lenta para tener inuir el ruido de la imagen. Presione los botones CH.(TRACKING)▲/▼ en la unidad de control remoto o en el videograbador hasta que la calidad de la imagen mejore. Para volver al Tracking automático, pulse POWER OFF, y luego ON otra vez (activar y desactivar).

Control de V-Lock (para reducir ruidos)
En el modo de pausa, los botones de CH.▲/▼ funciona para el control de V-Lock.

Conexiones/Configuración Inicial (Ready to Play)

Realice la conexión de la antena o TV por cable antes de enchufar el cable de CA.
La videograbadora iniciará automáticamente la fijación de los canales y del reloj al enchufar el cable de CA.

Conexiones

Para Ant/Cable ➔ VCR ➔ TV

① **Conecte el cable de la antena al terminal IN FROM ANT del VCR.**
② **Conecte el terminal OUT TO TV del VCR a la entrada de la antena VHF/UHF del TV con el cable RF incuido.**

Para Sistema Digital de Satelite (DSS)/ Convertidor de cable ➔ VCR ➔ TV

① **Conecte la salida de convertidor de cable al terminal IN FROM ANT.**
② **Conecte el terminal OUT TO TV del VCR a la entrada de la antena VHF/UHF del TV con el cable RF incluido.**

Configuración inicial

1 Encienda el TV y cambie al canal 3.

2 Enchufe el cable de CA.
La videograbadora se encenderá e iniciará las fijaciones de los canales y del reloj.
- Si no aparecera la pantalla de abajo, compruebe la conexión del VCR-TV y si el canal del TV está a 3, intennte cambiando al canal 4.
- Para cambiar el canal de salida del VCR, consulte las instrucciones de "Canal de salida del VCR" en la página 12 de las operaciones avanzadas.

Enchufe el cable de CA.

Si está usanindo un convertidor de TV por cable y en su area hay un canal de Public Broadcast Station (PBS), ajuste su convertidor al canal PBS de su area.
Si está usando un receptor DSS, este debe estar apagado.

PRECAUCIÓN
Al usar cables coaxiales RF del tipo "fuerca", apriételos solamente con los dedos. Un apriete excesivo puede dañar los terminales.

3 Las fijaciones se realizan automáticamente. Cuando termina las fijaciones, aparecerá la siguiente pantalla.



Si aparece en la pantalla "FIJACION AUTOMATICA DEL RELOJ ES INCOMPLETO", Ajuste el reloj como se describe a continuación.



Ajuste Manual del Reloj

Si la fijación ha sido incompleta.

1 Presione la tecla ACTION en el control remoto para visualizar la pantalla del menú RELOJ.

2 Presione ▲/▼ para seleccionar el mes y ▶ para ajustar. De la misma forma, seleccione y ajuste la fecha, año, hora y DST a INACT (hora de verano).

3 Presione dos veces la tecla ACTION para poner el RELOJ en marcha y salir.
- La fijación del DST es para que ajuste atucmáticamente cuando la hora se cambia en verano. Pero este ajuste es sólo para E.E.U.U.

Reproducción / Grabación

Reproducción de un cassette

1 Inserte un cassette.
- **Revise el cassette y saque todas las etiquetas que estén despegadas.**

2 Presione PLAY para reproducir el cassette.
- Si el cassette no tiene lengüeta de prevención de grabación (p. 3), se inicia la reproducción automáticamente.

Detalles especiales durante la grabación

■ **Para encontrar una escena en particular**
➔ **Presione FF** o **REW**.
➔ **Presione PLAY** para liberar.
Luego de que la búsqueda se ha iniciado, cada vez que **presione FF** o **REW** se cambia la velocidad como sigue:
[SLP] aprox. 21X ↔ aprox. 9X
[LP] aprox. 9X ↔ aprox. 7X
[SP] aprox. 7X ↔ aprox. 3X
Si la imagen se interrumpe con la velocidad de 21x, 9x o 7x, cambie la velocidad a 9X, 7x o 3x.

Nota
- Interrupciones en la imagen podrían presentarse en algunas TV's.
- Cuando se usan las funciones FF y REW puede variar la velocidad de acuerdo a la posición actual de la cinta.

■ **Para ver una imagen fija (congelada)**
➔ **Presione PAUSE/SLOW.**
➔ **Presione PLAY** para liberar.

■ **Para ver imágenes cuadro a cuadro**
➔ **Presione PAUSE/SLOW** en el modo de imagen fija.
➔ **Presione PLAY** para liberar.

■ **Para ver en cámara lenta**
➔ **Mantenga presionado el botón PAUSE/SLOW** en el modo de imagen fija.
➔ **Press PLAY** para liberar.

Nota
- Estas funciones funcionan mejor en modo SP o SLP.
- La salida de sonido se silenciará.
- Para reducir el ruido en la imagen, consulte "Control de alineación manual" en la pagina 3.
- Si el VCR permanece en modo de imagen detenida o cámara lenta durante 3 minutos, el equipo automáticamente volverá al modo de parada para proteger el cassette y el cabezal de video.

3 Presione STOP para detener el cassette.

■ **Presione REW** o **FF** en el modo de parada para rebobinado/avance rápido del cassette.

■ **Presione EJECT** en el VCR para expulsar el cassette.

Grabación en un cassette

1 Inserte el cassette con lengüeta de protección de grabación (p. 3).

2 Presione CH▲/▼, o las teclas de números para seleccionar el canal.
- Para usar la entrada de señal "LINE" vea la pag. 9 de las instrucciones de funcionamiento para las operaciones avanzadas.
- Para elegir los canales que superen el número 100, presione primero la tecla 100, y luego introduzca los restantes dos dígitos.

3 Presione SPEED para seleccionar la velocidad de grabación (p. 3)

4 Presione REC para comenzar a grabar.
- Para eliminar escenas indeseadas, **presione PAUSE/SLOW** para pausar, y al presionar nuevamente se reanuda la grabación.

5 Presione STOP para detener la grabación.

■ **Grabación de un toque**
Presione REC repetidamente para ajustar la duración de la grabación como sigue: 30 min. ➔ 1 hr ➔ 1:30hr ➔ 2:00 ➔ 3:00 ➔ 4:00 ➔ Salida.
La VCR se apagara automaticamente en en intervalo seleccionado de tiempo.

■ **Ver un canal y grabar otro.**
Presione VCR/TV.
(La indicación VCR se apagara en la "visualización de Multi-Función")
➔Seleccione canales de TV (Mientras permanece grabando)

■ **Seleccione canales con VCR**
Presione VCR/TV (la indicación "VCR" se encenderá en la vizualización multi-función)
➔Seleccione canales en su VCR.

Nota
- **Si usa una caja de TV por cable o un receptor satélite, no se puede grabar un diferente canal del que está viendo.**
- Si la pausa de la grabación permanece más de 5 minutos, el VCR se para automáticamente para proteger el cassette y las cabezas de video.

Esta videograbadora, está equipado con el sistema HQ (alta calidad), es compatible con los equipos VHS existentes. Utilice sólo las cintas que lleven la marca **VHS**. Se recomienda sólo las cintas que havan sido probadas y revisadas para utilizar en máquinas VCR de 2, 4, 6 y 8 horas.

Funciones automáticas

■ **Reproducción Automática**
Inserte el cassette ➔ El equipo se enciende ➔ La reproducción comienza si el cassette está desprovista de la lengüeta de grabación (vea la página 3).

■ **Rebobinado Automático**
Reproducción / Avance Rápido ➔ Fin del cassette ➔ Rebobinado (automático)

■ **Reproducción con expulsión automática**
(función de repetición desactivada)
Reproducción ➔ Fin del cassette ➔ Rebobinado ➔ Expulsa el cassette si no tiene la lengüeta de grabación.

***Importante:** Si un botón del control remoto no funciona al ser presionado, presione el botón VCR del control remoto y vuelva a intentarlo.

Grabación con temporizador

Grabación con temporizador

1 1) Presione PROG*.
2) Presione ▼ para visualizar la pantalla de Programacion.

2

1) Para ajustar la FECHA de grabación, presione ▲/▼ para seleccionar:
1-31 = una vez, o DIARIO = a la misma hora de lunes a viernes, o SEMANA = a la misma hora cada semana y **presione ▶** para ajustar.

Orden para elegir
Ejemplo
Fecha de hoy — 7 ▲/▼ **Orden para elegir** DIARIO → 8 → 9 ····· 31 → 1 → 2 ···· 6 → SEMANAL (SAB) ····· SEMANAL (LUN) ····· SEMANAL (DOM)

2) Para los ajustes siguientes, presione ▲/▼ para seleccionar y **presione ▶** para ajustar los tiempos de INICIO/PARADA, CANAL, o entrada de LINEA, y velocidad del cassette (p. 3).
Presione PROG para finalizar el programa.

3

Presione ▲/▼ para seleccionar un número que no está usando para ingresar mas programas y **presione ▶** para ajustar.
Luego repita el paso 2.
Presione nuevamente PROG para salir.

4 Presione POWER off para ajustar el temporizador.
(Se ilumina "TIMER" en el panel delantero)

Nota
- **Si usa una caja de TV por cable, el canal de programación del temporizador del VCR (paso 2) debe ajustarse al canal de salida de la caja de TV por cable, y la caja de TV por cable debe ajustarse manualmente al canal deseado. La caja de TV por cable debe permanecer encendida.**
- Si ocurre un corte de energía durante la programación del temporizador, los programas del temporizador podrán borrarse. Si el mensaje "TODAS LAS PROGRAMACIONES SE HAN ANULADOS POR UN CORTE DE ELECTRICIDAD" aparece en la pantalla, vuelva a introducir los programas de temporizador.

Notas importantes al utilizar un receptor DSS
- Cuando grabe programas por medio de un receptor DSS, dicho receptor debe dejarse encendido.
- Cuando grabe programas por medio de una antena o cable, el receptor DSS debe dejarse apagado.

Grabación con temporizador

Revisión, reemplazo o borrado de programaciones

(no se puede efectuar durante la grabación)

a 1) Presione PROG.
2) Presione ◀/▶ para seleccionar la LISTA.

b

Presione ▲/▼ para seleccionar.

C Para reemplazar la programación....

1) Presione ▶ para visualizar.
2) Repita el paso 2 (pág. 6) para introducir nuevos programas.

o

Para borrar la programación.....

Presione ADD/DLT.

d Presione PROG para terminar.

Para cancelar la grabación con temporizador

(la grabación está teniendo lugar)

Presione POWER y luego **STOP** dentro de los 10 segundos para cancelar la grabación con temporizador (el indicador TIMER se apagará en la Pantalla de Multi-Función)

Antes de solicitar al servicio técnico

Verifique los siguientes puntos una y otra ves si esta teniendo problemas con su VCR.
(BO : Haga referencia en la instruciones de funcionamiento [Operaciones Básicas])
(AO : Haga referencia el la instruciones de funcionamiento [Operaciones Avanzadas])

ALIMENTACIÓN DE AC	CORRECCIÓN
La unidad no enciende....	• Revise que el cordon de alimentación de AC este correctamente conectado a la toma de pared. • Presione el botón "POWER" para el encendido de la unidad. • Verifique que la fuente de alimentación está activada.
GRABACIÓN Y REPRODUCCIÓN (REC / PLAY)	**CORRECCIÓN**
No se pueden grabar programas de TV	• Revise las conexiones entre VCR, antena externa o cable y TV. • Verifique la selección de conexiones (BO p. 4, AO p. 3) • Verifique que su sistema de antenna (Cable o TV) estén correctamente seleccionados. Vea "Channels" (AO p. 12). • Asegúrese que la pestaña en el cassette de grabación esté intacta (BO p.3).
No se puede efectuar grabación con temporizador...	• Compruebe que el reloj ha sido ajustado a la hora y fecha actual. • Asegúrese de que la caja de Cable/DSS (si se utilica) se deja encendido y está sintonizado al canal a grabar. • Ajuste las horas de comienzo y detención de grabación correctamente. (BO p. 6) • Asegúrese de que ha apagado el VCR antes de la grabación. (BO p. 6) • La grabación con temporizador quizás no pueda realizarse o continuarse si se produjera una interrupción de corriente antes o durante una grabación con temporizador, incluso después de restablecido el fluido eléctrico.
No hay imagen de reproducción, o la imagen de reproducción tiene ruidos o contiene rayas...	• Seleccióne el canal 3 o 4 en el televisor, de modo que corresponda con el canal de salida del videograbador (3 o 4) (BO p. 4), o seleccione LINE. • Ajuste el selector VCR/TV a "VCR". • Ajuste el control TRACKING en una de las dos direcciones. (BO p. 3) • Pruebe a realizar la limpieza de cabezales. (BO p. 3)
En la reproducción de efectos especiales, la imagen puede contener algunos saltos verticales cuando se utiliza un televisor con Control de Bloqueo Vertical Automático...	• Ponga el Control de Bloqueo Vertical del televisor en "MANUAL" y luego realice el ajuste.
No se puede controlar el VCR...	• Asegúrese de que el aparato está encendido. • Revise las pilas del control remoto. • Asegúrese de que el BLOQUEO DEL VCR esté ajustado a INACTIVO (AO pag.10) • Asegúrese de quenso está funcionando una grabación con temporizador.
CONTROL REMOTO	**CORRECCIÓN**
NO funciona el control remoto...	• Asegúrese de que el aparato está encendido. • Asegúrese de que el control remoto están en le modo de VCR. • Apunte el control remoto directamente al sensor remdo del VCR. (BO pag.8) • Evite que ningún objeto interrumpa la señal del control remoto. • Revise las pilas del control remoto (BO pag.3) • Asegúrese de que el BLOQUEO DEL VCR esté ajustado a INACTIVO (AO pag.10) • Si el sensor remoto recive directamente la lus del fluorescente o luz solar puede causar interferencia con la señal del control remoto.
Los botones "ACTION" y/o "PROG" no responden...	• Verifique las conexiones entre VCR, cable o antena y TV. • Presione el botón VCR para el modo de "VCR". (AO p. 2) • Revise las baterías del control remoto. (BO p. 3)
Varios	**CORRECCIÓN**
No se pueden ver los programas en el televisor...	• Asegúrese que la TV este enomndida. • Asegúrese que la TV esté conectado a la salida de la VCR (VCR Out). • Verifique conexiones entre VCR,cable o antena y TV. • Ajuste el selector VCR/TV a "TV". (BO p. 5) • Asegúrese que la apropiada señal fue seleccionada.
No se puede introducir la cassette de vídeo...	• Inserte el cassette con el lado de la ventana hacia arriba y la pestaña de grabación frente a usted. • Verifique que no tenga ningún cassette dentro del aparato.
No se puede extraer la cassette de vídeo...	• Inserte o conecte completamente el cable de alimentación de AC a la toma de pared.
La cassette de vídeo es expulsada al dar comienzo a una grabación o al desactivar la alimentación para la grabación con teporizador...	• Asegúrese que la pestaña de grabación del cassette este intacta. (BO p. 3)
En el modo de Detención, el motor (CILINDRO) sigue girando...	• Para activar rápidamente el mecanismo de reproducción, el cilindro sigue rotando durante 3 minutos. Esto disminuye el tiempo de respuesta desde la parada hasta la reroducción o hasta la el modo de búsqueda en rebotinado.

Matsushita Electric Industrial Co., Ltd
Apartado de Correos Central 288, Osaka 530-91, Japón

Impreso en Indonesia
LSQT0531A
S1101-0

Copia de cassette (Doblaje)

Conexiones

(Observe la conexión mostrada)

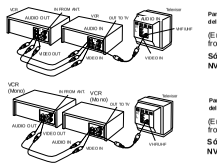

Panel delantero del VCR

(Entradas de video y audio L/R frontales estan también previstas.)

Sólo para el modelo NV-FJ6130PN/ NV-FJ6230PN

Panel delantero del VCR

(Entradas de video y audio frontales estan también previstas.)

Sólo para el modelo NV-SJ4130PN/ NV-SJ4230PN

① Conecte el terminal VIDEO OUT del VCR para la reproducción al terminal VIDEO IN del VCR para la grabación. Para monitorizar el doblaje, conecte al televisor como se indica.

② NV-FJ6130PN/NV-FJ6230PN :
Conecte la salida de audio L/R de la VCR para la reproducción a la entrada de audio L/R de la VCR para la grabación.
NV-SJ4130PN/NV-SJ4230PN :
Conecte la salida de audio de la VCR para la reproducción a la entrada de audio de la VCR para la grabación.

Puede usar otro equipo en lugar del VCR de reproducción, por ejemplo, una cámara/ grabadora. Simplemente conecte las salidas de audio/vídeo de la unidad al VCR de grabación.

VCR para reproducción (Fuente)	VCR para grabación (Edición)
1 Introduzca la cinta pregrabada.	Introduzca una cinta virgen con pestaña de grabación.
2 ———	**Presione INPUT** para poner el VCR en el modo de entrada LINE1 para entrada de vídeo (trasera) o LINE2 para entrada de vídeo (delantera). (Vea "Selección del modo de entrada" más abajo.)
3 Presione PLAY y luego, inmediatamente a continuación, PAUSE/SLOW para poner el equipo en modo de reproducción/pausa.	**Presione REC** y luego, inmediatamente a continuación, PAUSE/SLOW para poner el equipo en modo de grabación/pausa.
Los pasos 4 y 5 deben realizarse tanto en el VCR de reproducción como en el de grabación, simultáneamente.	
4 Presione PLAY para iniciar el doblaje. Comenzará la reproducción en el VCR de reproducción.	**Presione PAUSE/SLOW** para iniciar la operación de doblaje. Comenzará la grabación en el VCR de grabación.
5 Presione STOP para detener la operación de doblaje.	**Presione STOP** para detener la operación de doblaje.

■ Monitorización del doblaje en el televisor

1 Encienda el televisor y sintonícelo al canal de grabación del VCR(CH3 o CH4).
2 Ajuste el selector VCR/TV del VCR a la posición "VCR".

Nota • EL doblaje con cintas que lleven Protección de Grabación daránunos resultados de poca calidad.

■ Selección del modo de entrada

Método 1: Presione INPUT repetidamente. Número de canal ↔ LINE1 ↔ LINE2
Método 2: Presione CHANNEL ▲ / ▼
La indicación cambiará como se indica a continuación.



• Cuando se selecciona LINE1 o LINE2, aparece "L1" o "L2" en el panel de visualización multifunción (durante aprox. 4 seg.).
• LINE1: Para conexión de audio/vídeo trasera.
LINE2: Para conexión de audio/vídeo delantera.

PRECAUCIÓN : El intercambio o copia no autorizado de grabaciones protegidas con derecho intelectual puede constituir una violación de los derechos intelectuales.

Funciones especiales del VCR

Función de visualización de posición de cinta

Es usado para saber la presente posición de la cinta. **La posición de la cinta se muestra para cassettes VHS-C, para cassettes de menos de 30 min y otras cintas muestra posiciones incorrectas.**

1 Presione TAPE POSITION para detectar la posición del cassette.

• El mensaje BUSQUEDA DE LA POSICION aparece solamente en la primera vez que se inserta un cassette.
• La indicación tarda varios segundos en aparecer.
• Se visualiza la indicación correspondiente a la posición actual de la cinta.

2 Presione TAPE POSITION para regresar a la pantalla normal.

Función de activación/ desactivación (ACT/NACT) de advertencia del control remoto

Si se utiliza la función Multi-marca (página 2) y se activa esta función,aparecerá una advertencia cada vez que se presione una tecla invalida en el modo TV.

1 Presione ACTION para desplegar el menú.

2 Presione ▲▼ para activar AVISO DEL CONTROL REMOTO y presione ▶ para seleccionar activo o inactivo.
• "INACTIVO" la advertencia del control remoto no aparecerá incluso si se pulsara una tecla invalida.

3 Presione ACTION para regresar a la pantalla normal.

Función de desconexión automática

Esta función apaga el aparato en un lapso de tiempo.

1 Presione ACTION para desplegar el menú.

2 Presione ▲▼ para activar APAGADO AUTOMÁTICO y presione repetidamente ▶ para seleccionar el lapso de tiempo como se muestra abajo.

Inactivo
↓
2 horas
↓
4 horas
↓
6 horas

3 Presione ACTION para regresar a la pantalla normal.

Nota • El tiempo comienza a contra luego de terminar la reproducción o grabación.

Función de activación/ desactivación (ACT/ INACT)de visualización de señales débiles.

Cuando se activa esta función en la pantalla se observa la señal tal como se recive de antena o cable.

1 Presione ACTION para desplegar el menú.

2 Presione ◀ ▶ para seleccionar y mostrar el canal.
Presione ▲▼ para seleccionar IMAGEN DEBIL y **Presione ▶** para activar y desactivar.

• **ACTIVADO**:
Si la señal es debil y de mala calidad o nula la unidad lo mostrara en esa forma.
INACTIVO:
En la misma condición anterior la pantalla se tornara azul fuerte u obscura.

• Si el VCR está conectado a un equipo con función de fondo azul, la selección de ACTIVADO no tendrá ningún efecto en el otro equipo.

3 Presione ACTION para regresar a la pantalla normal.

Función de bloqueo del VCR

Cuando se activa esta función todas las operaciones excepto grabación con temporizador y la expulsión del cassette están prohibidas. Es usada regularmente para que los niños pequeños no tengan acceso.

Para activar:
En el modo de detención, mantenga pulsado REC en el VCR sin introducir ningún cassette durante 7 segundos.

Para desactivar:
Repita el paso anterior.

• EL Bloqueo del VCR se cancela automáticamente después de 24 horas, si el reloj está ajustado.



REC

***Importante:** Si un botón del control remoto no funciona al ser presionado, presione el botón VCR del control remoto y vuelva a intentarlo.

Información en Pantalla (OSD)

Información en Pantalla (OSD)

Visualización de funciones y de canales

Cuando un botón de cualquier función es presionado despliega el estado de la función por 5 segundos.

Indicación de cinta en blanco/No hay señal de vídeo

Cuando se reproduce una cinta en blanco o no hay señal en el canal que recibe y Si su VCR está ajustado el IMAGEN DEBIL a INACTIVADO, la pantalla del TV será de color azul.

Visualización de Estado del VCR y del Reloj

Para visualizar o hacer que desaparezca la pantalla a la derecha,
→ **presione DISPLAY*.**

Estado de función
Hora actual
Canal
Contador
Tiempo de grabación restante (Solo OTR modo. Ver pag. 5 de las instucciones de funcionamiento para operaciones básicas.)
Recepción de emisión de audio (sólo para el modelo NV-FJ6130PN/NV-FJ6230PN)
Velocidad de cinta (Ver pag. 5 de las instucciones de funcionamiento para operaciones básicas.)

Visualización de advertencias e instrucciones

Estas visualizaciones le alertarán sobre una función errónea o le darán más instrucciones.

OSD	Precaución	Página
POR FAVOR FIJE EL RELOJ CON LA TECLA ACTION	Si intenta ajustar o revisar una grabación con temporizador y no se ha ajustado el reloj...	Ver pag. 6 de las instucciones de funcionamiento para operaciones básicas
APAGUE SU VCR PARA LA GRABACION CON TEMPORIZADOR	Después de haber ajustado un Programa con Temporizador...	Ver pag. 6 de las instucciones de funcionamiento para operaciones básicas
COMPROBAR LA PROTECCION CONTRA EL BORRADO DE LA CINTA	Si pulsa REC en el control remoto o el VCR y se ha insertado un cassette sin pestaña de grabación...	Ver pag. 3 de las instucciones de funcionamiento para operaciones básicas
NO HAY CASSETTE	Si pulsa PLAY,FF,REW o REC en el control remoto sin que se haya insertado un cassette....	Ver pag. 5 de las instucciones de funcionamiento para operaciones básicas
PARA PARAR LA GRABACION CON TEMPORIZADOR OPRIMIR POWER Y LUEGO STOP	Si presiona POWER o STOP durante una Grabación con Temporizador... (Visitble en el modo VCR solamente)	Ver pag. 6 de las instucciones de funcionamiento para operaciones básicas
LOS CABEZALES DE VIDEO NECESITA LIMPIARSE INTRODUZCA UNA CINTA LIMPIADOR DE CABEZALES O CONSULTE EL MANUAL **TERMINAR: PLAY**	Si fuera necesario una limpieza de cabezales mientras se reproduce una cinta...	Ver pag. 3 de las instucciones de funcionamiento para operaciones básicas
BLOQUEO DEL VCR:ACTIVADO	Si pulsa un botón de función que no sea STOP/EJECT o POWER mientas el VCR se encuentra en el modo Bloqueo de VCR...	p. 10
EL CONTROL REMOTO ESTA EN EL MODO DE TV **MODE VCR: OPRIMIR VCR**	Si pulsa cualquier tecla invalida en el control remoto mientras se encuentre en el modo TV...	p. 2, 10

***Importante:** Si un botón del control remoto no funciona al ser presionado, presione el botón VCR del control remoto y vuelva a intentarlo.

Reajuste del idioma, canales, reloj y canal de salida del VCR

Presione ACTION para desplegar el menú.

■ Idioma

1) Presione ▲▼ para elegir el idioma.

2) Presione ▶ repetidamente.

Para francés

Para inglés

Para español

3) Presione ACTION para salir desde este menú.

■ Canales

1) Presione ◀ ▶ para elegir CANAL.

2) Presione ▲▼ para elegir ANTENA y luego **presione ▶** para ajustar el sistema de antena (TV or CABLE)

3) Presione ▲▼ para elegir "AUTOPROGRAMAR" y luego **presione ▶**.

• Si utiliza caja de TV por cable, ajústelo al canal PBS de su zona horaria.

• Cuando la selección automática de canal finalice. Luego, el ajuste automático del reloj comenzará.

■ Reloj

1) Presione ◀ ▶ para seleccionar RELOJ.

2) Presione ▲▼ para seleccionar "MANUAL" y **presione ▶**

3) Presione ▲▼ y **◀ ▶** para elegir y ajustar la fecha, la hora y DST (Ajuste VERANO : iNACT)

4) Presione ACTION para activar el reloj y salir de este modo.

■ Ajuste de zona horaria

(Sólo cuando se ha ajustado a fijación automática del reloj.)

1) Presione ◀ ▶ para seleccionar RELOJ.

2) Presione ▲▼ para elegir AJUSTE ZONA HORA y luego **presione ▶** para retroceder o avanzar horas según sea necesario.

3) Presione ACTION.
• AJUSTE ZONA HORA retomará a "0" si el reloj se ajusta manualmente.

■ Canal de salida del VCR

1) Presione ▲▼ para seleccionar el canal de salida del VCR.

2) Presione ▶.

3) Presione ACTION.

Después de 3 segundos.

• Para hacer conecciones, repita los pasos 1) ~ 3).

Agregar o borrar de un canal

Para agregar un canal:
Seleccione el canal con las teclas numéricas y **presione ADD/DLT.**

Para borrar un canal:
Seleccione el canal con **CH ▲/▼** o las **teclas numéricas** y luego **presione ADD/DLT.**

DST (Ajuste de la hora veraniega)

El VCR ajusta automáticamente el reloj para la hora de verano (sólo para E.E.U.U.).

Primavera(Primer domingo de abril)
DST:ON → adelanta el reloj una hora.

Otoño (último domingo de octubre)
DST:ON → atrasa el reloj una hora.

- **Si su zona no sigue el ajuste de la hora veraniega como funciona el VCR, fije DST: OFF.**
- Tenga en cuenta estos cambios al programar el VCR para grabaciones con temporizador.

Panasonic

Videograbadora

Instrucciones de funcionamiento (Operaciones Avanzadas)

Para operaciones básicas vea el apartado "Operaciones Básicas".

Models No. NV-SJ4130PN/NV-FJ6130PN NV-SJ4230PN/NV-FJ6230PN

Contenido

Función de control de multi-marca 2
Conexiones avanzadas 3
Sistema de emisión MTS
(Sólo para el modelo NV-FJ6130PN/NV-FJ6230PN) 4
VHS Hi-Fi estéreo
(Sólo para el modelo NV-FJ6130PN/NV-FJ6230PN) 5
Funcionamiento del cassette..... 6, 7
Antes de solicitar al servicio técnico..... 8
Copia de cassette (Doblaje) 9
Funciones especiales del VCR 10
Información en pantalla (OSD) 11
Reajuste del idioma, canales, reloj y
canal de salida del VCR 12

Rogamos que lea atentamente estas instrucciones antes de realizar la conexión, poner en funcionamiento o ajustar este producto. Además, rogamos que guarde este manual, por si fuera necesario en el futuro.

LSQT0531A

Función de control de multi-marca

Configuración de control de multi-marca

La unidad de control remoto puede ser ajustada para controlar algunas funciones de TV.

1 **Busque el número de Código de Marca de su televisor como demuestra abajo.**

2 **Configuración para el control de la TV.**
- ➛ Presione y sostenga el botón **TV**
- ➛ Introduzca el codigo con el **teclado numerico**

3 **Confirmación de la entrada de código.**
- ➛ **Presione POWER** para activar o desactivar la unidad seleccionada.
- Vea la tabla siguiente para disponer de una lista de funciones controlables en cada modo.

Notas
- Repita la configuración del Control de Multi-Marca después de cambiar las pilas del control remoto.
- El control remoto no funcionará con todos los televisores fabricados por los fabricantes que figuran en la lista. Si no obtiene resultados, su marca particular no podrá ser controlada.

Utilización del Control de Multi-Marca

Después de haber configurado el control remoto, podrá seleccionar VCR, TV para la función deseada.
Presione VCR o TV en el control remoto.
Esta tabla muestra los botones disponibles en cada modo.

Aparato / Modo	VCR	TV
VCR	Todas las funciones	VOL UP/DOWN
TV	VCR/TV, PLAY, STOP, EJECT, SAP/Hi-Fi (sólo NV-FJ6130PN/NV-FJ6230PN), DISPLAY, FF, REW, PAUSE/SLOW, REC, SPEED, CM/ZERO, RESET COUNTER, TAPE POSITION	POWER, INPUT, ENTER, NUMBER keys, CH UP/DOWN, VOL UP/DOWN

Notas
- No todas las funciones indicadas pueden ser controladas.
- En el modo TV, puede ser necesario pulsar ENTER después de pulsar las teclas numéricas para la selección de canal.

Números de código de marcas de televisor

Panasonic 01, 02	Sylvania 05	JVC 11
Quasar 01, 02	Sharp 06, 07	Hitachi 12
RCA 03	Sony 08	Mitsubishi 07, 13
GE 03	Toshiba 09	Samsung 14
Zenith 04	Sanyo 10	Gold Star 15, 16, 17
Magnavox 05	Fisher 10	

Notas importantes
- Debido a cambios en los comandos infra-rojos utilizados por los fabricantes, algunas marcas tienen varios códigos. Si su unidad no responde al primer código pruebe con el siguiente.
- Algunas marcas de TV requiere prenderse manualmente.

Conexiones avanzadas

Conexión de audio/vídeo

Si su televisor está equipado con terminales AUDIO IN y VIDEO IN, podrá conectar el VCR a estos terminales para recibir imágenes y sonidos de mejor calidad.



Sólo para el modelo NV-FJ6130PN/NV-FJ6230PN



Sólo para el modelo NV-SJ4130PN/NV-SJ4230PN

① Conecte la salida de video de la VCR a la entrada de video de la TV.

② **NV-FJ6130PN/NV-FJ6230PN** :
Conecte la salida de audio L/R de la VCR a la entrada de audio L/R de la TV.

NV-SJ4130PN/NV-SJ4230PN :
Conecte la salida de audio de la VCR a la entrada de audio de la TV.

③ Ajuste el selector VIDEO/TV del televisor (monitor/receptor) a la posición "VIDEO."

■ **Con una caja de TV por cable (VCR ➛ caja de TV por cable)**



Puede	No puede
• ver cualquier canal(incluyendo los codificados).	• grabar canales codificados.
• utilizar el control remoto para seleccionar canales sin la función de control multi-marca.	

■ **Con dos dispositivos de cable**

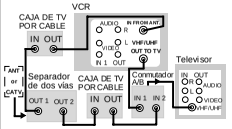

Puede	No puede
• grabar y ver tanto canales codificados como sin codificar si se añade el equipo adicional.Esta conexión requiere dos cajas convertidoras, un conmutador A/B, y un separador de dos vías.	• ver un canal que no sea el seleccionado para cualquier tipo de grabación. • realizar una grabación con temporizador de un canal a menos que lo haya seleccionado en el dispositivo de cable.

Sistema de emisión MTS

Sólo para el modelo NV-FJ6130PN/NV-FJ6230PN

Conexión

Realice la conexión de audio/vídeo como se indica en la página 3.
- En lugar de un televisor estereofónico puede usar un televisor común conectado a un amplificador estereofónico y sus correspondientes altavoces.

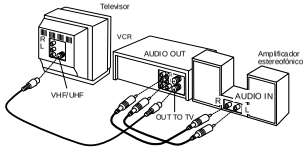

Tipos de emisiones que pueden recibirse

Lo que sigue a continuación son los tipos de emisiones de audio y la información en pantalla posibles. La señal a recibir está indicada con una marca "●" mientras que el modo de audio seleccionado se indica con una flecha.

Visualice la señal de la emisión a recibir.
➛ **Presione DISPLAY*.**

MTS Stereo and SAP broadcast
El sonido estéreo de Televisión Multi-canal(idioma principal)y el programa de audio secundario (idioma secundario)se reciben simultáneamente.
Seleccione el modo ESTEREO o SAP.

PARADA 12:00AM CH 02 0:00:00 SP
●ESTEREO◄
SAP
MONO

Emisión MTS estéreo
Emisión de Sonido Estéreo de Televisión Multi-canal.
Seleccione el modo de audio ESTEREO.
- Si la emisión estéreo es débil y la pantalla parpadea, seleccione el modo MONO para obtener así mejores resultados.

PARADA 12:00AM CH 02 0:00:00 SP
●ESTEREO◄
SAP
MONO

Emisión SAP
Emisión de Programa de Audio Secundario.
Seleccione el modo de audio SAP para el idioma secundario.

PARADA 12:00AM CH 02 0:00:00 SP
ESTEREO
●SAP◄
MONO

Emisión MONO
Emisión con sonido monoaural normal.

PARADA 12:00AM CH 02 0:00:00 SP
ESTEREO
SAP
MONO◄

Equipado con ⊔ₙₓ"-Reducción de ruido de TV para una auténtica reproducción MTS. ⊔ₙₓ"-Reducción de ruido de TV es necesario para una buena separación de estéreo y fidelidad del audio. ⊔ₙₓ" es una marca registrada y otorgada en licencia por ⊔ₙₓ" Technology Licencing.

VHS Hi-Fi estéreo

Sólo para el modelo NV-FJ6130PN/NV-FJ6230PN

Modo de audio de la grabación

1 **Presione SAP/Hi-Fi** para ver la modalidad de audio.
(La indicación desaparece al cabo de 5 segundos.)

2

Presione SAP/Hi-Fi repetidamente para la selección del tipo de audio deseado.
- Remítase a "Tipos de emisiones que pueden recibirse"en la página 4.

- La flecha indica la selección.

3 **Realice una grabación.**
Ver pag.5 de las instrucciones de funcionamiento para operaciones básicas.

Modo de audio de la reproducción

1 **Comience la reproducción.**
Ver pag.5 de las instrucciones de funcionamiento para operaciones básicas.

2 **Presione SAP/ Hi-Fi** para ver el modo de audio.
(La indicación desapaece luego de 5 segundos.)

3

Presione SAP/Hi-Fi repetidamente para la selección del tipo de audio deseado.
- Seleccione "HiF(L/R)" o "HiF(L)" o "HiF(R)" para escuchar grabaciones estéreo con sonido estéreo. Seleccione "NORMAL" para obtener un sonido monoaural.

- La flecha indica la selección.

Notas
- Sólo se reproducirán con auténtico sonido estéreo, las cintas grabadas en estéreo Hi-Fi. Los cassettes estéreo estándar se reproducirán con sonido monoaural.
- Para escuchar una reproducción estéreo Hi-Fi, las tomas de audio VCR AUDIO (L/R) deben estar conectadas a un televisor estéreo o a un amplificador estéreo externo y sus correspondientes altavoces (Véa a la página 4).
- Si se ajusta el tracking durante la reproducción, el audio Hi-Fi puede cambiarse audio normal.
- El volumen de reproducción del audio Hi-Fi y del normal puede ser diferente.

***Importante:** Si un botón del control remoto no funciona al ser presionado, presione el botón VCR del control remoto y vuelva a intentarlo.

Funcionamiento del cassette

Sistema de búsqueda

Cada vez que se realice una grabación, se coloca una marca de índice invisible en la cinta. Cuando se realizan grabaciones con temporizador, también se incluirán el índice de programa e información sobre el programa.
Estas marcas de índice pueden utilizarse para acceder a las grabaciones o para explorar las mismas.

Búsqueda de índices

1

Presione SEARCH* en el modo de reproducción o parada para visualizar esta pantalla.
Luego, presione las **teclas numericas** para seleccionar el número de la grabación.
- Para calcular el número, vea las instrucciones más abajo.

Presiona FF o **REW** sobre el control remoto para iniciar la busqueda.

2

La reproducción comienza despues de que la búsqueda a terminado.
Para retroceder o avanzar solamente un programa, **presione FF** o **REW** en el control remoto cuando está aparecido la pantalla a la izquierda (durante 10 seg.).
- Para cancelar **Presione STOP** o **PLAY**

■ **Cálculo del número de índice**

Ejemplo 1:
Para ir a la grabación 2 desde la grabación 4, introduzca 3 y presione REW.



Ejemplo 2:
Para ir a la grabación 6 desde la grabación 2, introduzca 4 y presione FF.

NOTA: ↓ indica los puntos de inicio de grabación.

Nota
- Si la operación de búsqueda de índices es iniciada desde un punto muy cercano a una marca de índice, dicha marca de índice podrá no ser considerada en la búsqueda.

Búsqueda de fin de programa

Permite localizar el final de la grabación para fines de continuar con una nueva grabación.

1 En modo de parada o reproducción, **presione SEARCH dos veces** para visualizar BUSQUEDA.

2

Presione FF en el control remoto para buscar el final de la grabación.
- Para cancelar **Presione STOP** o **PLAY**

Ejemplos de operación de **búsqueda de fin de programa**:

Fig. 1

Fig. 2

Fig. 3

Si la búsqueda sobrepasa en algunos segundos el área en BLANCO.

Cuando se localiza el fin del programa,
- ➛ la búsqueda continúa 7 segundos más allá del punto de fin del programa,
- ➛ la cinta es rebobinada a un punto situado 10 segundos antes del punto de fin del programa,
- ➛ la cinta es reproducida hasta el punto de fin del programa y luego se detiene.

Notas
- Si la operación de búsqueda de fin de programa es iniciada desde un punto muy cercano a una marca de índice, puede suceder que un programa sea omitido.
- Para cancelar la operación de búsqueda de fin de programa, presione el botón de reproducción (PLAY) o parada (STOP).

Funcionamiento del cassette

Repetición de la reproducción (Repeat Play)

Realice el ajuste para ver una grabación una y otra vez.

1 **Presione ACTION** para visualizar el menú.

2

Presione ▲▼ para seleccionar REPEAT PLAY y **presione ►** para activar o desactivar.
ACT: Inicia de nuevo la reproducción al terminar la cinta o si detecta una porción de cinta sin grabación durante 30 segundos.

3 **Presione ACTION**
para regresar a la pantalla normal.

Búsqueda de cero

Para volver rápidamente a una posición del contador de cinta determinada.

1 **Presione DISPLAY** durante la reproducción para mostrar el contador.

2

Presione RESET COUNTER en la posición deseada para reajustar a "0:00:00"

3 **Siga grabando, reproduciendo, etc.**

4 **Presione STOP.**

5

Presione CM/ZERO en el modo de parada, para iniciar la búsqueda de cero.
- La unidad asumirá al modo de avance rápido (FF) o rebobinado (REW) y se detendrá en el punto donde el contador haya sido puesto a 0:00:00.

Omisión de comerciales

El videograbador adelanta rápidamente la cinta grabada durante 1~3 minutos.

1 En modo de Reproducción, **presione CM/ZERO.**
- Presione repetidamente para cambiar en periodos de tiempo como se muestra abajo.

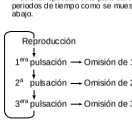

- No aparece ninguna indicación.

***Importante:** Si un botón del control remoto no funciona al ser presionado, presione el botón VCR del control remoto y vuelva a intentarlo.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D

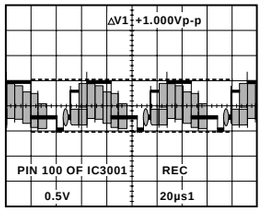

WF1

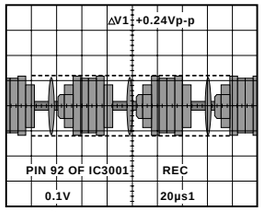

WF6

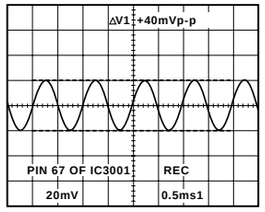

WF9

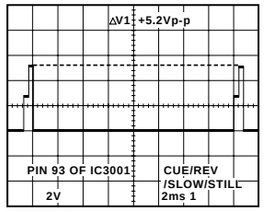

WF14

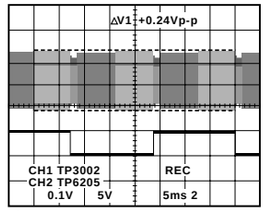

CH1 WF17 (A, B)
CH2 WF21 (A, B)

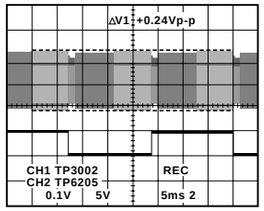

CH1 WF17 (C, D)
CH2 WF21 (C, D)

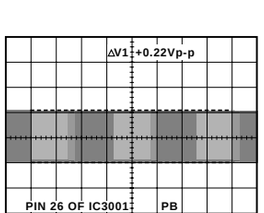

WF2

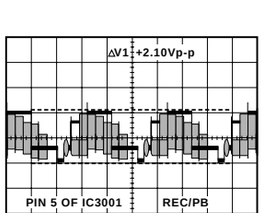

WF6

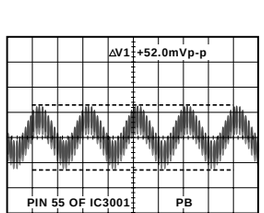

WF10

WF15

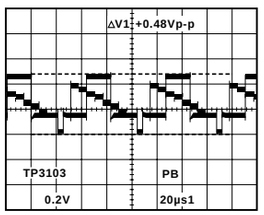

WF3

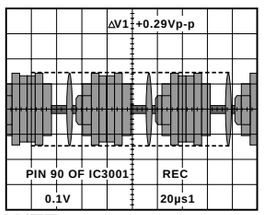

WF7

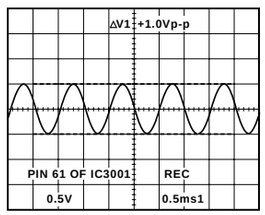

WF11

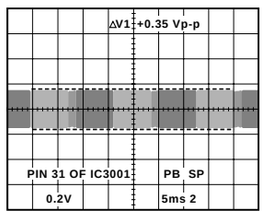

WF15

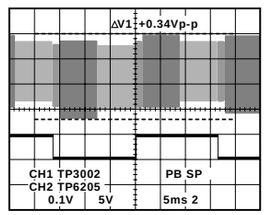

CH1 WF17 (A, B)
CH2 WF21 (A, B)

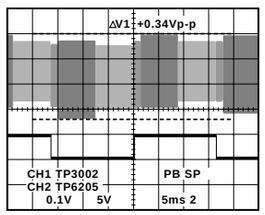

CH1 WF17 (C, D)
CH2 WF21 (C, D)

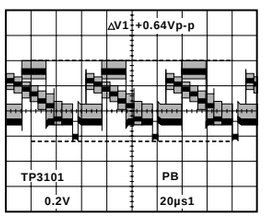

WF4

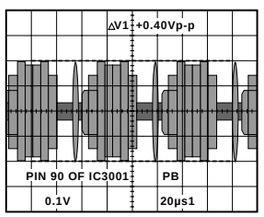

WF7

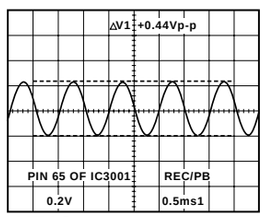

WF12

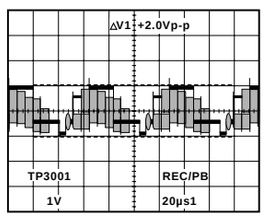

WF16

WF5

WF8

WF13

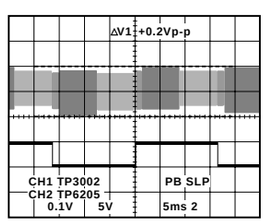

CH1 WF17 (A, B)
CH2 WF21 (A, B)

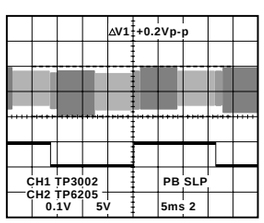

CH1 WF17 (C, D)
CH2 WF21 (C, D)

WAVE FORM NV-SJ4130PN, NV-FJ6130PN

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D

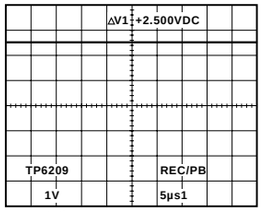

WF18

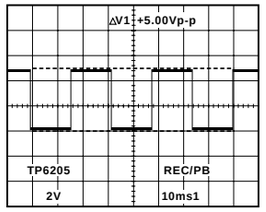

WF21

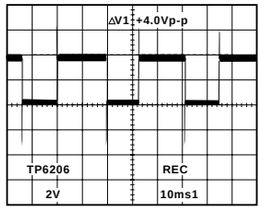

WF24

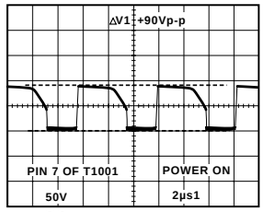

WF28

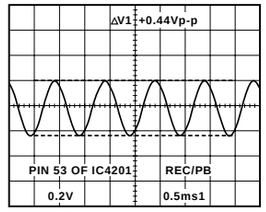

WF33 (C, D)

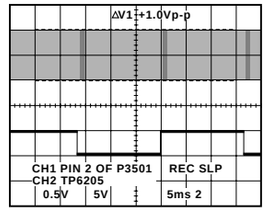

CH1 WF37
CH2 WF21

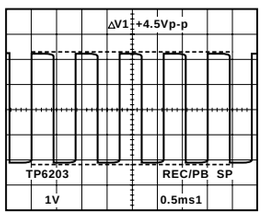

WF19

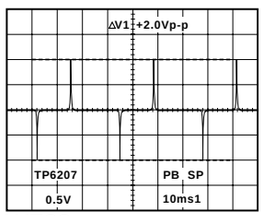

WF22

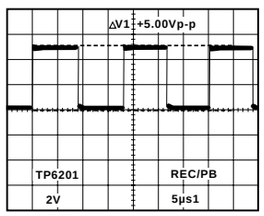

WF25

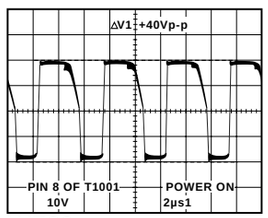

WF29

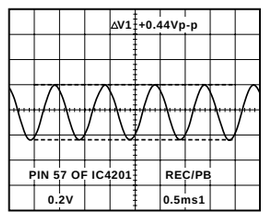

WF34 (C, D)

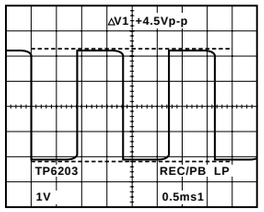

WF19

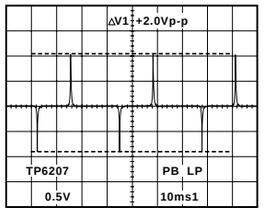

WF22

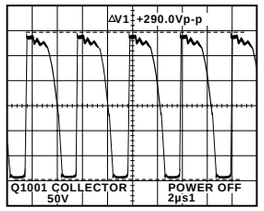

WF26

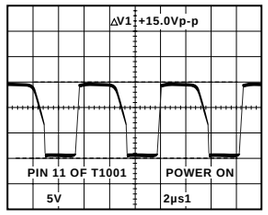

WF30

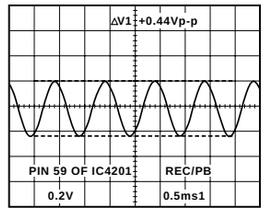

WF35 (C, D)

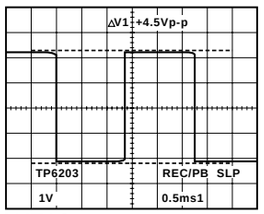

WF19

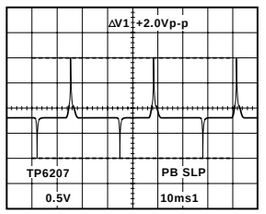

WF22

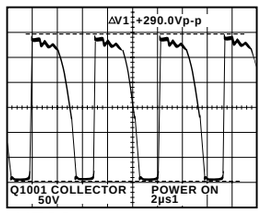

WF26

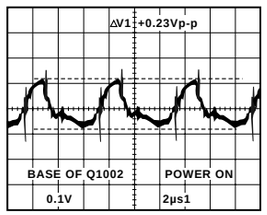

WF31

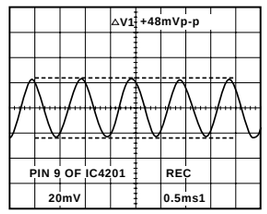

WF36 (C, D)

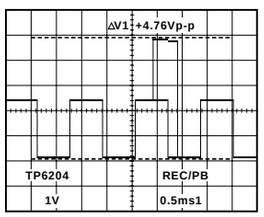

WF20

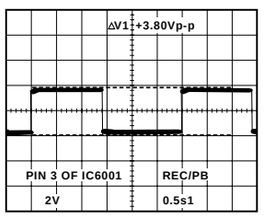

WF23

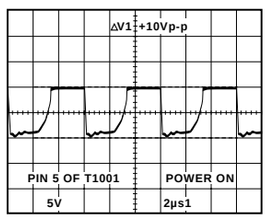

WF27

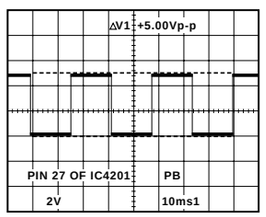

WF32 (C, D)

WAVE FORM NV-SJ4130PN, NV-FJ6130PN

MAIN C.B.A. LSEP2006GB (A) / LSEP2006GA (B) / LSEP2006HA (C) / LSEP2006HC (D)

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE 1.6A 125/250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D'T INCENDIE N'I UTILISERQUE DES FUSIBLE DE MÉME
TYPE 1.6A 125/250V

IMPORTANT SAFETY NOTICE:
COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE
SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY.
WHEN REPLACING ANY OF THESE COMPONENTS,
USE ONLY THE SPECIFIED PARTS.

NOTE:
CIRCUIT BOARD LAYOUT SHOWS COMPONENTS INSTALLED FOR VARIOUS MODELS.
FOR PROPER PARTS CONTENT FOR THE MODEL YOU ARE SERVICING,
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

COMPARISON CHART
OF MODELS & MARKS

MODEL	MARK
-----	A
NV-SJ4130PN	B
NV-FJ6130PN	C
-----	D

HOT CIRCUIT. BE CAREFUL AND USE AN ISOLATION TRANSFORMER WHEN SERVICING.

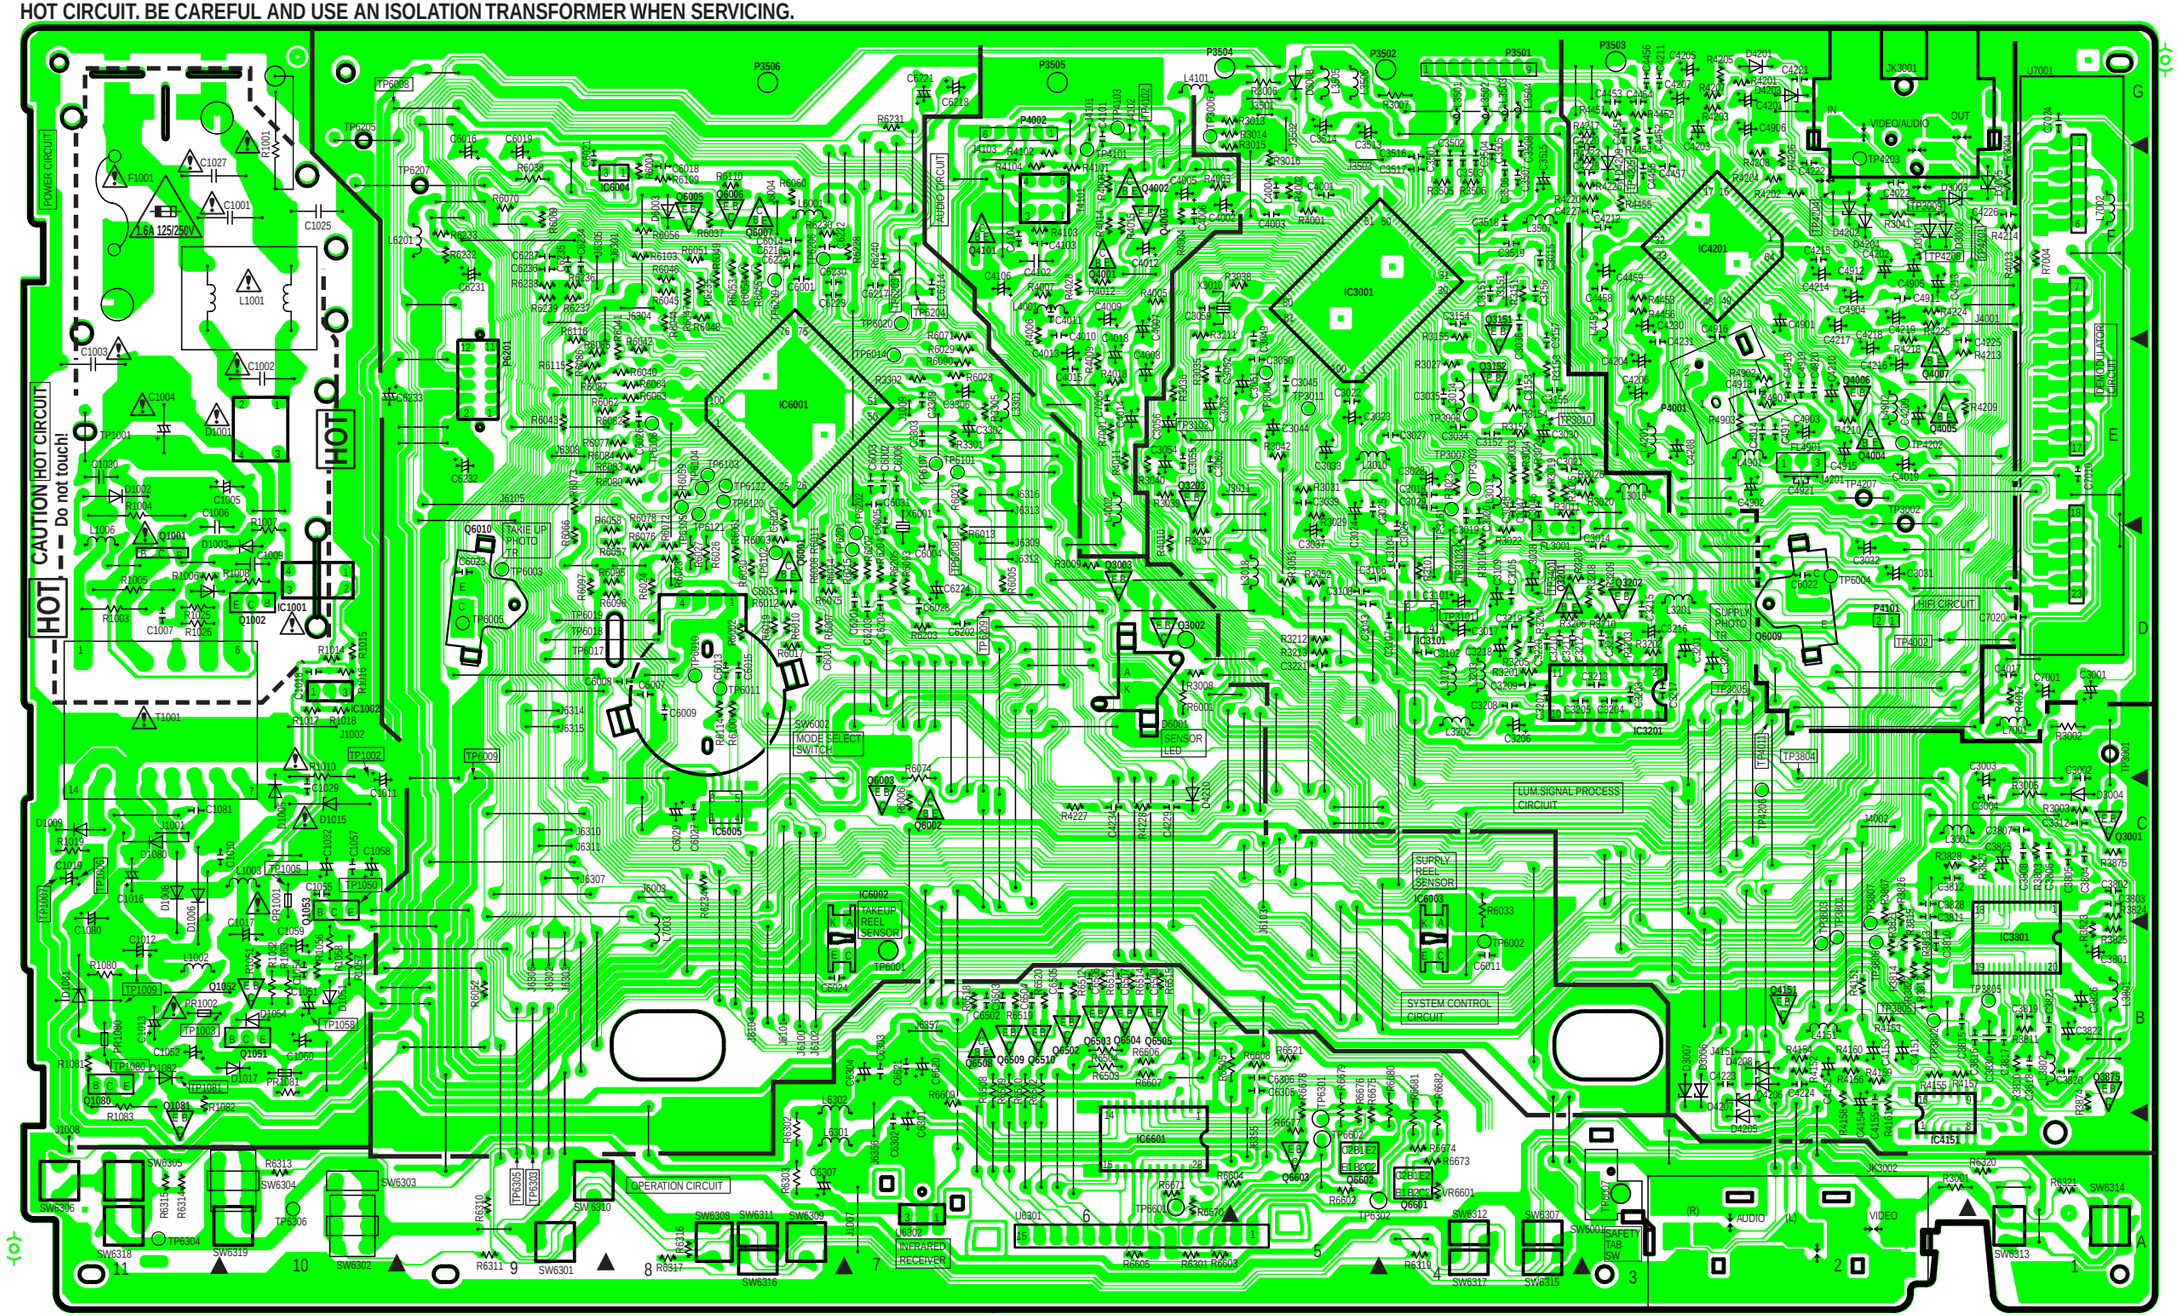

NV-SJ4130PN,
NV-FJ6130PN
MAIN C.B.A.

OVERALL BLOCK DIAGRAM

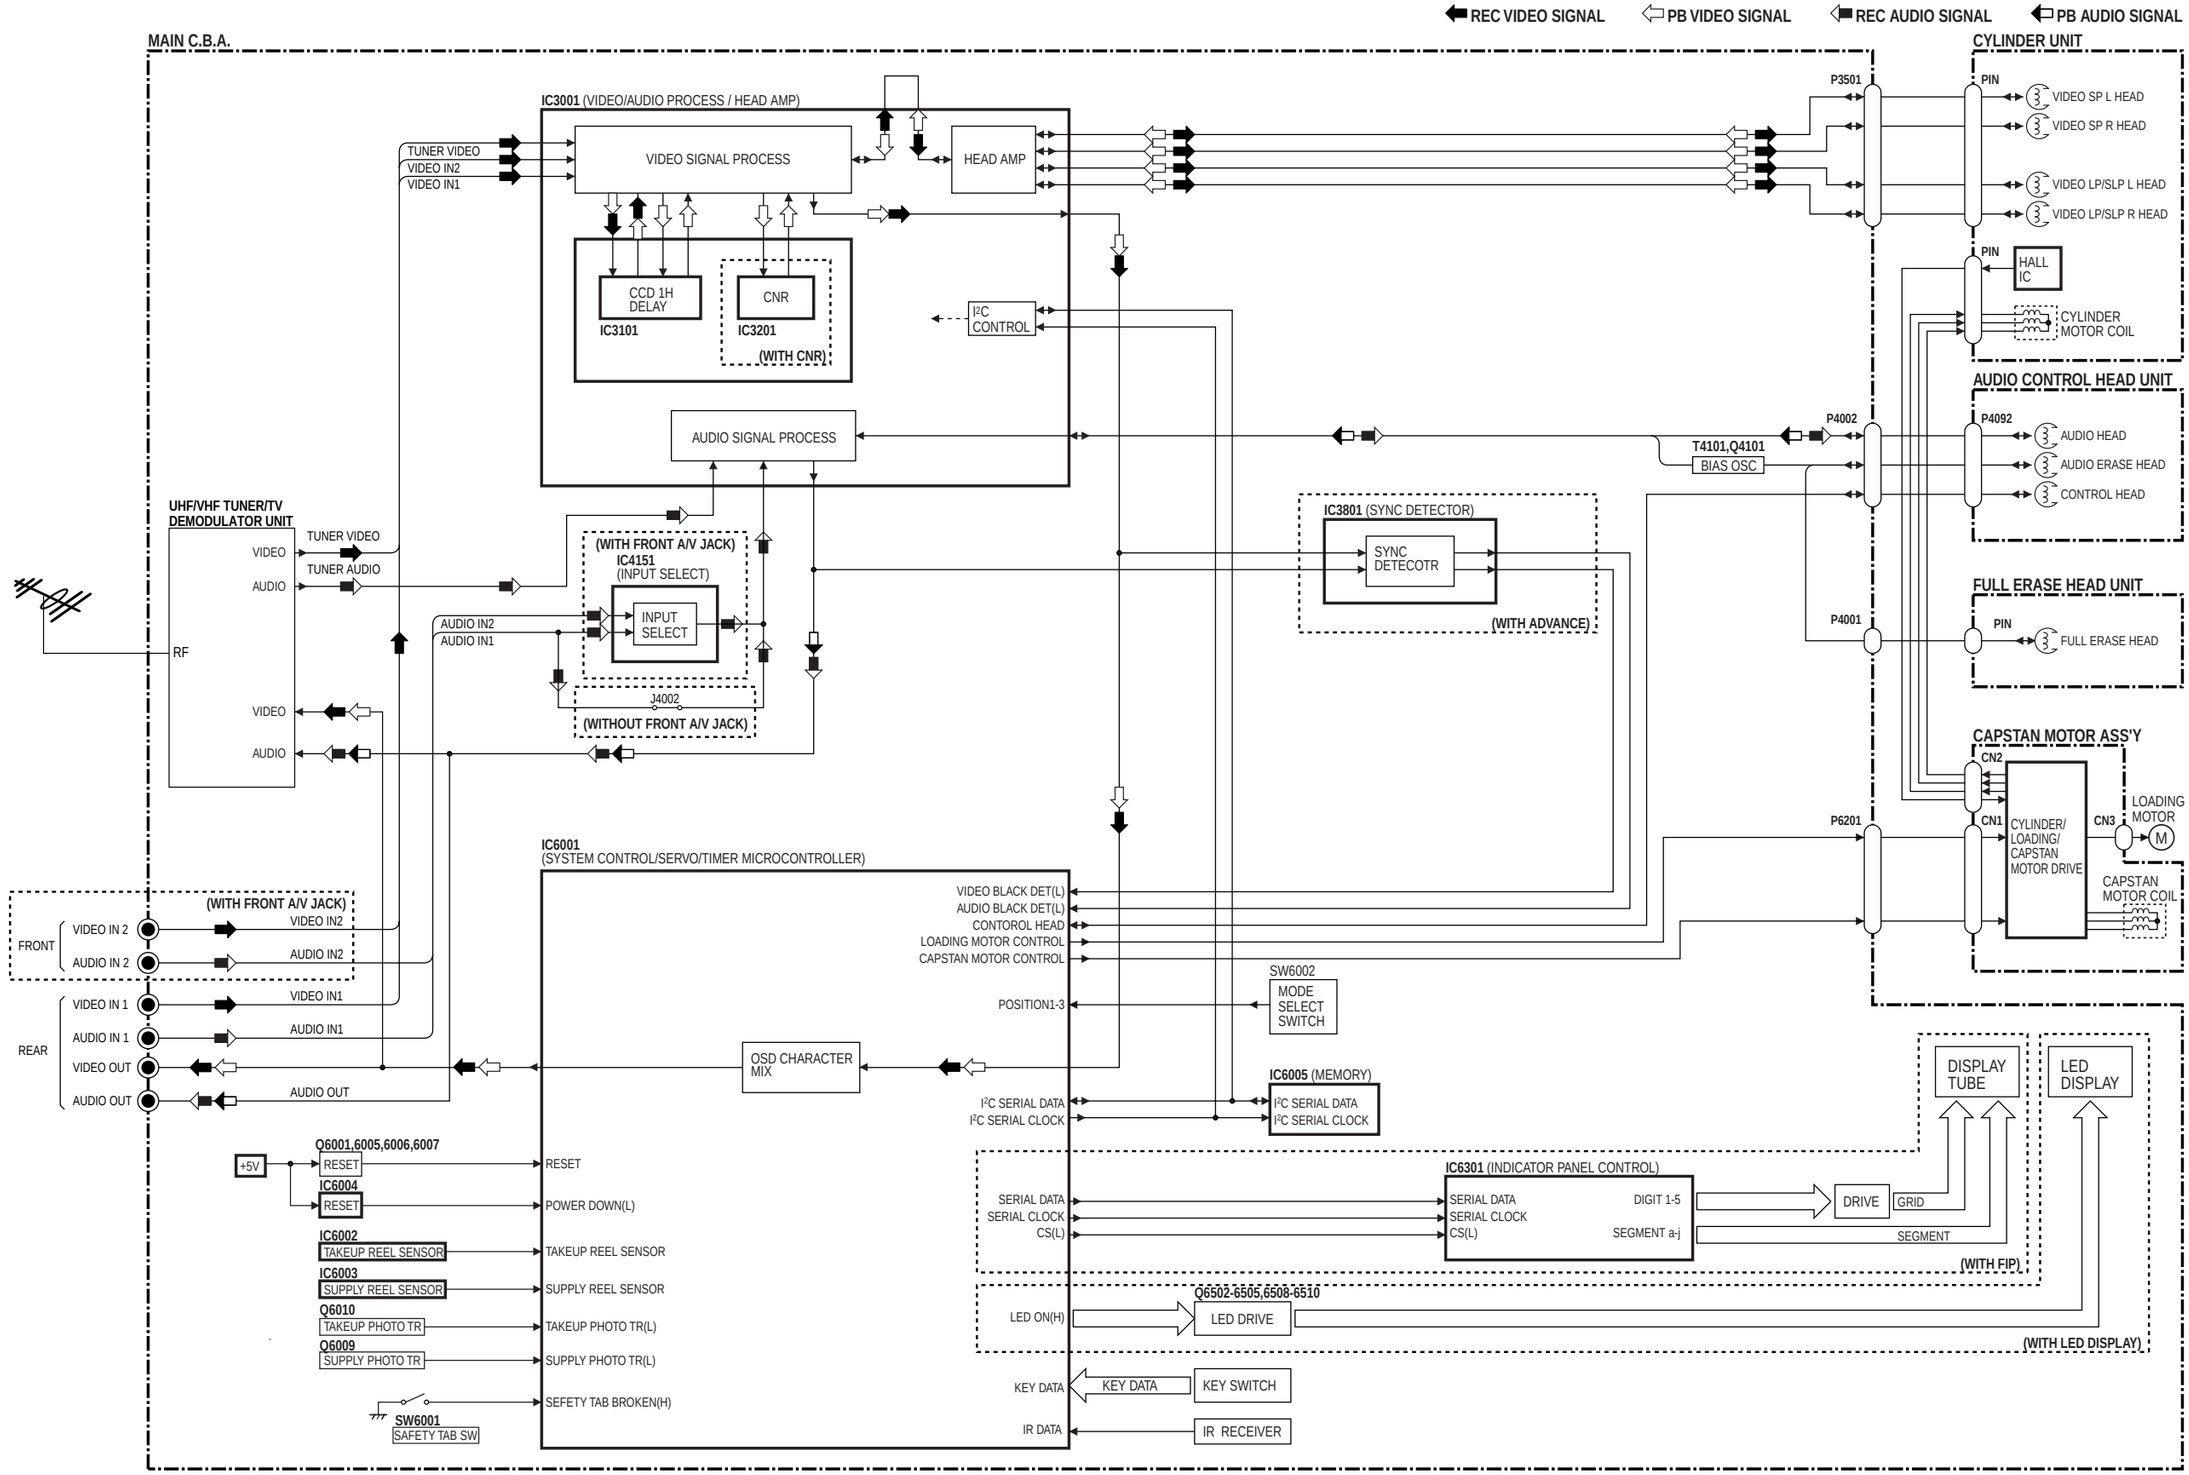

NV-SJ4130PN
OVERALL BLOCK DIAGRAM

OVERALL BLOCK DIAGRAM

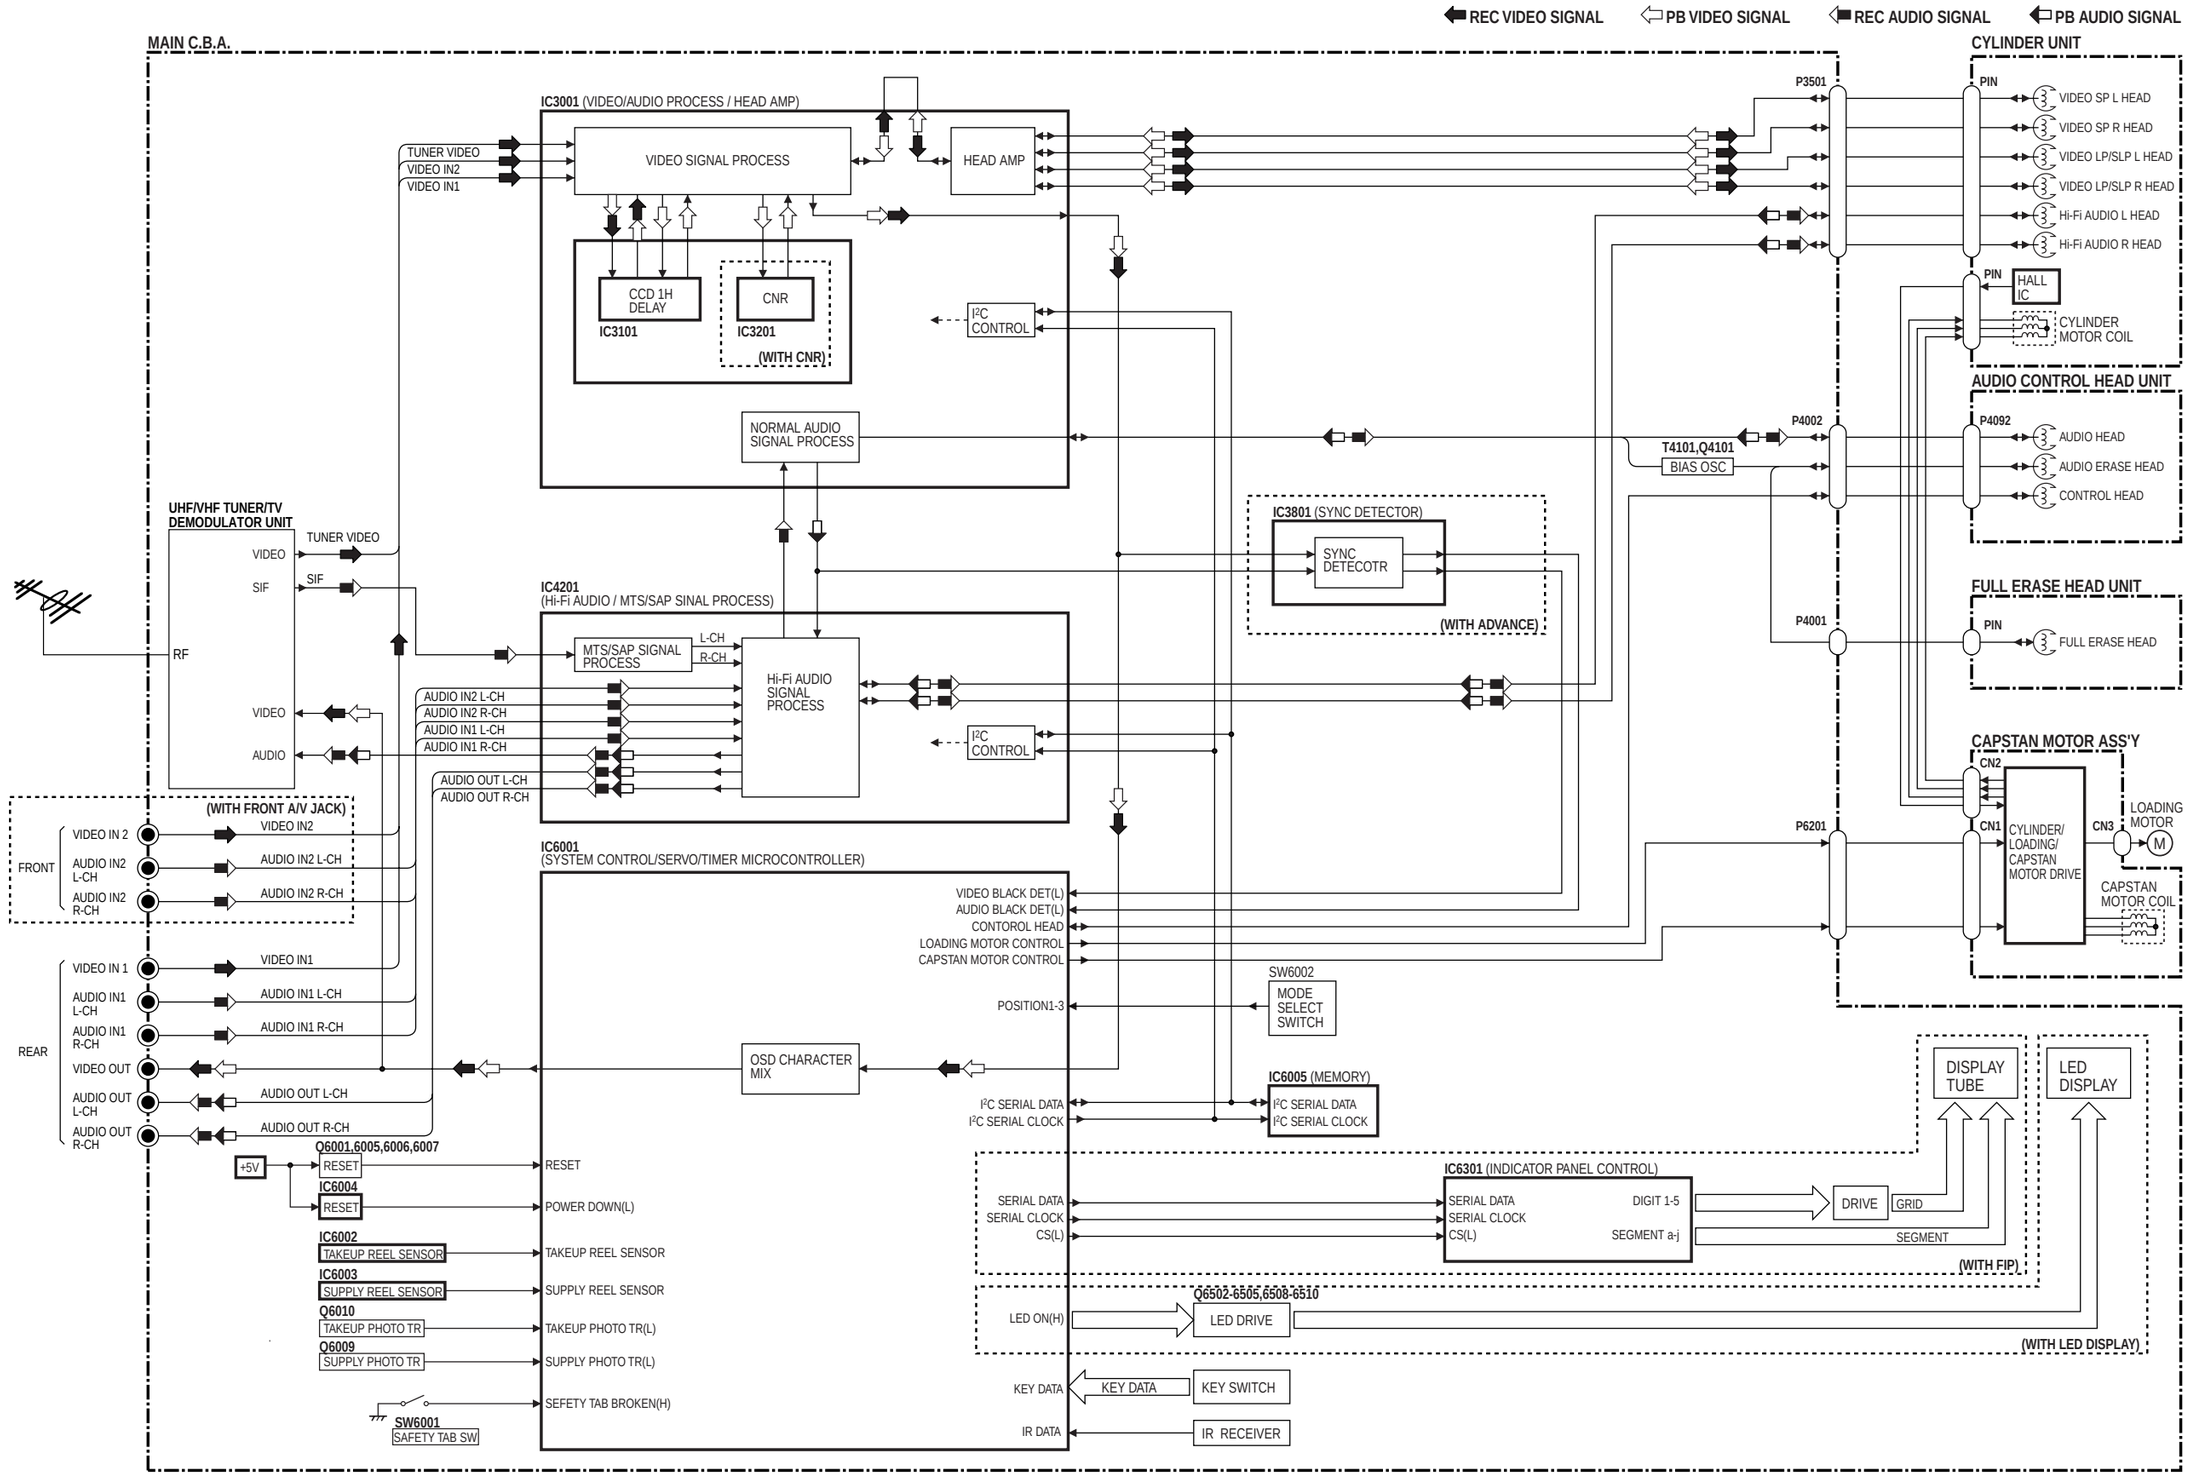

NV-FJ6130PN
OVERALL BLOCK DIAGRAM